

Installation Instructions

Jeep Wrangler (2 Door JK) 07-16
Jeep Wrangler Unlimited (4 Door JKU) 07-16



Mesh Brief Top™

For proper installation and best possible fit, please read all instructions BEFORE you begin.


Pre-Installation Requirements



- For correct installation, mounting surface of part should be between 70-95° F (21-35° C) prior to installation
- Remove existing hard or soft top. For OEM (original/factory) soft tops, also remove: Windshield header channel, Tube hardware, side door surrounds can be used if wanted. Brief Top works with or with out door surrounds.


Installation Steps

Unfold your new Mesh Brief Top™ and lay onto a top of roll cage bars.

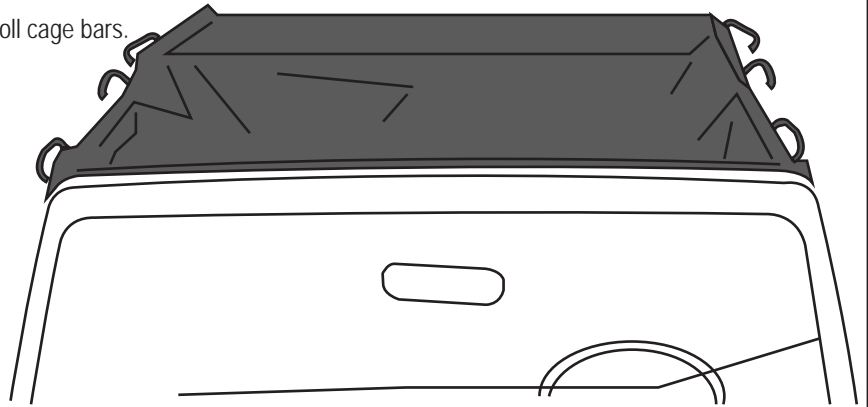


1

Tucking inside and secure with bungee straps as shown.

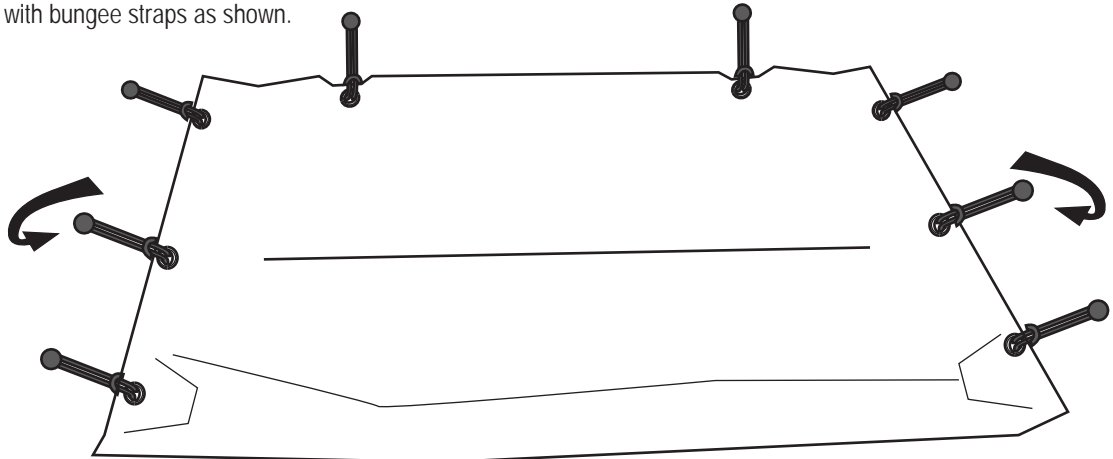

2

Secure with bungee strap around roll cage as shown.


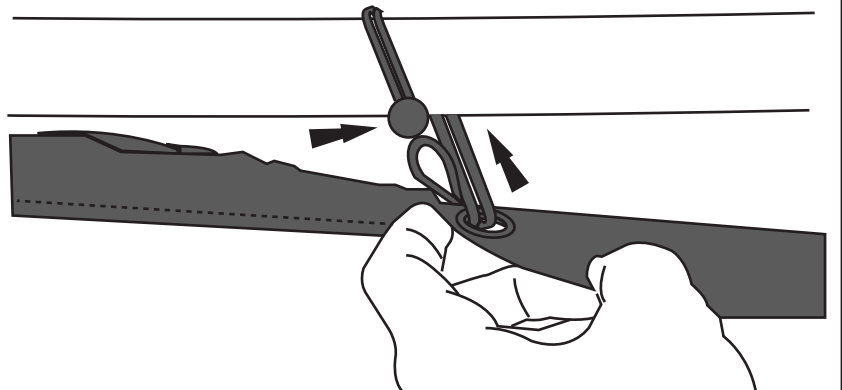


3

Installation Steps



NOTE: Actual application may vary slightly from illustrations.

Attach the bungee to the windshield footman loop.

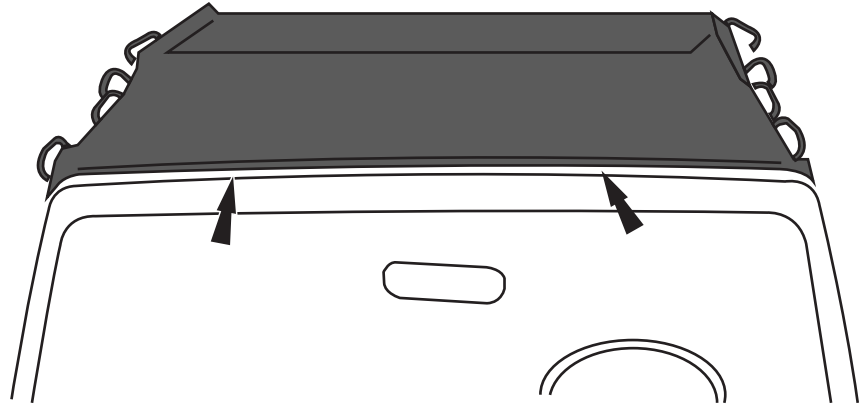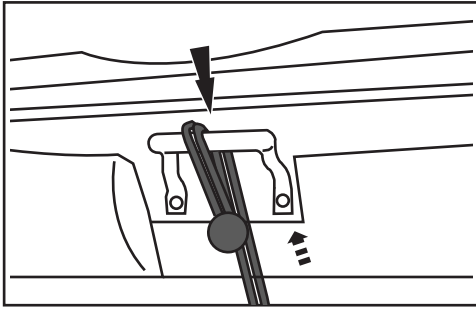

4

Tighten and adjust Mesh Top as needed to be centered on top the roll cage.

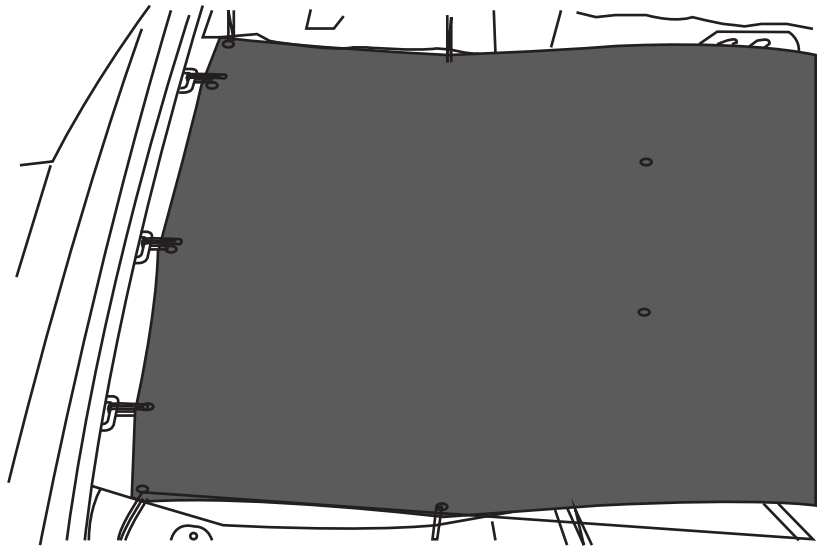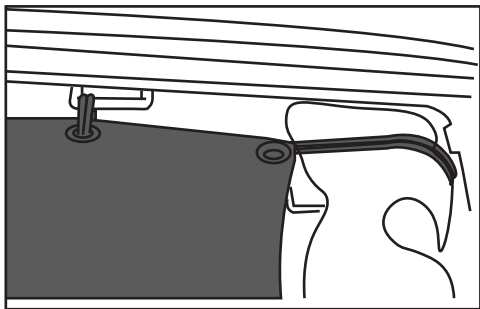

5

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

Congratulations!

Your new Mesh Brief Top™ is installed! Now go enjoy the ride.

Thank you for purchasing one of the many quality Rampage® products offered by Lund International, Inc. We take the ultimate pride in our products and hope you receive years of satisfaction from your investment. We have made every effort to guarantee that your product is of the highest quality for fit, durability, finish, and ease of installation.

