


RB-0701-BK

# BRACKET KIT





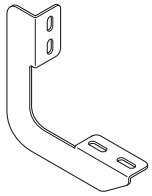

### Components:




Mount Bracket - Qty 4


### Hardware:

- |  |   |
|--|---|
|  M8 Flange Nut Qty 8  |  M8 Lock Washers Qty 8 |
|  M8 Flat Washer Qty 8 |  M8 Hex Head Nut Qty 8 |

### Tools Required:



RATCHET



TORQUE WRENCH



17MM SOCKET



14MM SOCKET

### Torque Specifications:


For Rocker Panel Mount Installations  
M8 through M12 bolts and nuts are set to 15-20 ft lbs.

**Note: When installing the brackets and bars, all hardware must be left loose until all the items are attached.**

**1.** Remove all contents from the package and check stainless steel tubes for any damage. Also, verify that all components and hardware listed above are included before you begin installation.

**2.** Read installation manual and installation drawing completely. Understand all brackets and bolts before installation.

**3.** Begin installation on the driver's side. Align **Brackets** as shown.

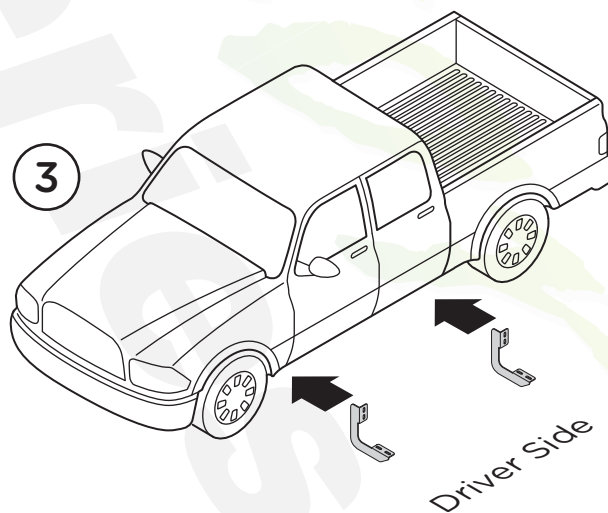

**4.** Align the Front and Rear Driver's Side Brackets with existing bolts located on the rocker panel of the vehicle.

**5.** Secure the Front and Rear Driver's Side Brackets to the rocker panel by fastening two (2) M8 Flange Nuts to existing bolts per bracket.

