

RB-0400-BK

# Bracket Kit



## Components:



Front Bracket  
Driver & Passenger Side  
Qty 2



Center & Rear Brackets  
Driver & Passenger Side  
Qty 4

## Hardware:



M8 x 30MM  
Hex Head Bolt  
Qty 12



M8 Hex Head Nuts  
Qty 12




M8 Lock  
Washer  
Qty 24




M8 Flat  
Washer  
Qty 24

## Tools Required:



RATCHET



TORQUE  
WRENCH



13MM SOCKET

## Torque Specifications:


For Rocker Panel Mount Installations  
M8 through M12 bolts and nuts are set to 15-20 ft lbs.

**Note: When installing the brackets and boards, all hardware must be left loose until all the items are attached.**

**1.** Remove all contents from the package and check running boards for any damage. Also, verify that all components and hardware listed above are included before you begin installation.

**2.** Read installation manual and installation drawing completely. Understand all brackets and bolts before installation.


**3.** Begin installation on the driver's side. Align Brackets as shown.

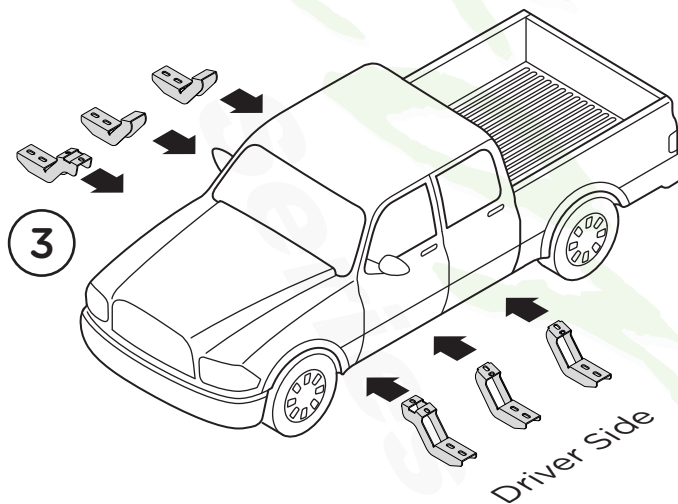

**4.** Align the Front, Center and Rear Driver's Side Brackets with the indicated holes located on the Rocker Panel of the vehicle.

**5.** Fasten the Front, Center and Rear Brackets to the Rocker Panel using two (2) M8 x 30MM Hex Head Bolts, two (2) M8 Flat Washers and two (2) M8 Lock Washers per bracket as shown.

**6.** Repeat these steps for passenger side installation. When all hardware is in place, everything must be tightened. See page 1 for torque specifications.

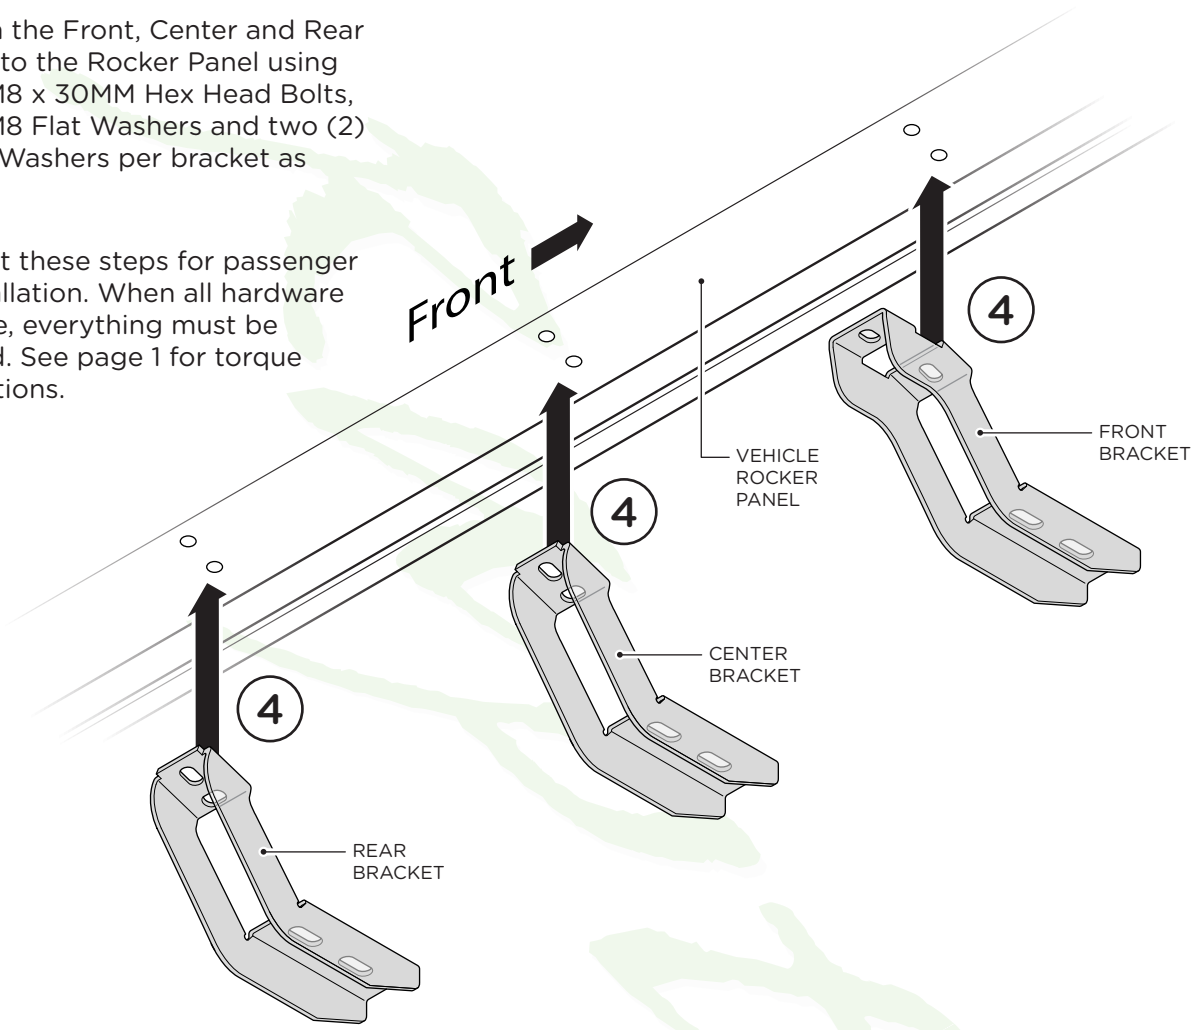

**Center & Rear Bracket**

**Front Bracket**

