



# 2010 RAM 2500/3500 GRILLE INSTRUCTIONS

1. Cut out center of grille shell like shown.

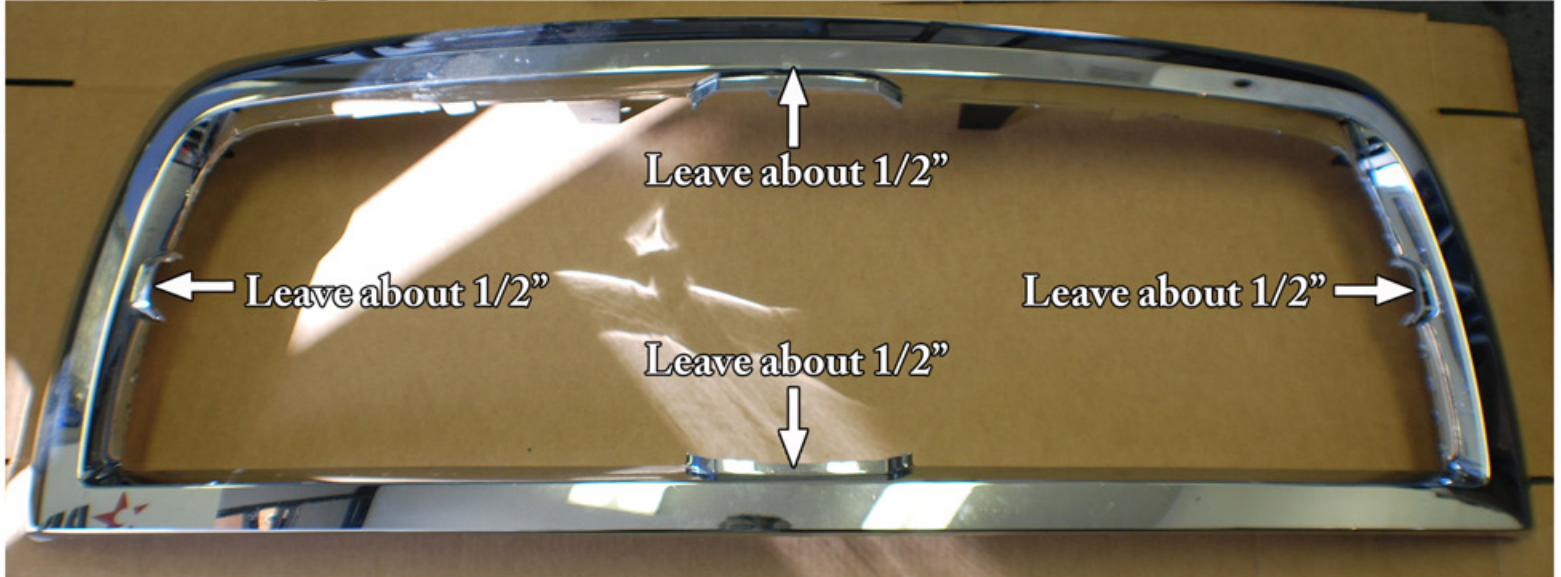

2. New grille comes with all the brackets attached, Remove them and lay the new grille into the opening of the stock grille shell.

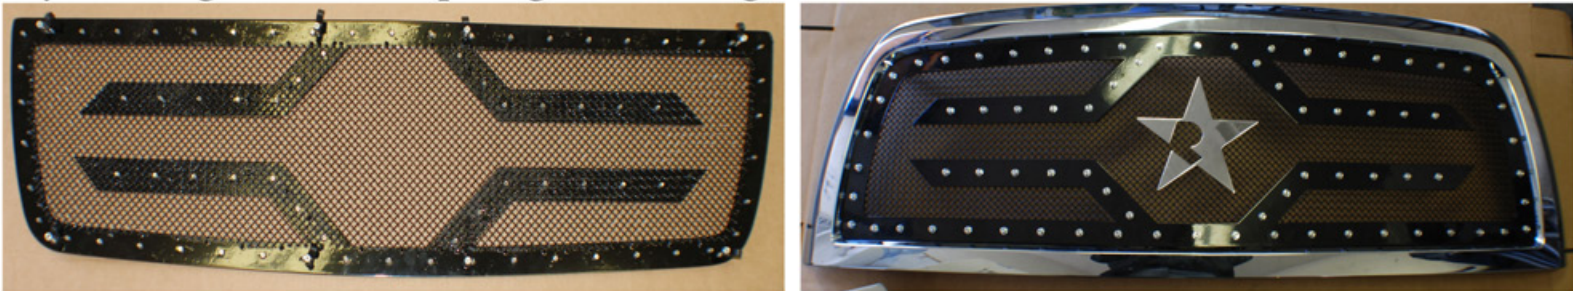

3. Slide brackets onto studs and around edge of stock grille shell as shown, and tighten 10/32 nylok just to snug. Make sure grille is center then tighten.

