

# READYLIFT®

## SUSPENSIONS

F250 / 350 3.5" Lift 69-2735, 69-2736

**IF your ReadyLIFT® product has a damaged or missing part, please contact customer service directly. For warranty issues please return to the place of installation and contact ReadyLIFT® .**

**A NEW REPLACEMENT PART WILL BE SENT TO YOU IMMEDIATELY**

**\*\*Please retain this document in your vehicle at all times\*\***

### Limited Lifetime Warranty

**This unique product warranty proves our commitment to the quality and reliability of every product that ReadyLIFT® manufactures. The ReadyLIFT® product warranty only extends to the original purchaser of any ReadyLIFT® product, if it breaks, we will give you a new part. Warranty does not apply to discontinued parts. Our Limited Lifetime Warranty excludes the following ReadyLIFT® items; bushings, bump stops, ball joints, tie rod ends, heim joints and shock absorbers. These parts are subject to wear and are not considered defective when worn. They are warranted for 12 months from the date of purchase for defects in workmanship. **This product warranty is voided if the vehicle is not aligned after kit installation and proper maintenance is routinely done.****

Product purchased directly from ReadyLIFT® has a 30 day return policy on uninstalled products from the date of purchase. Uninstalled product returns must be in the original ReadyLIFT® packaging. Customer is responsible for shipping costs back to Ready-LIFT®. **Returns without RGA# will be refused.** Contact ReadyLIFT® directly about any potentially de-fective parts prior to removal from vehicle. If the part in question is deemed warrantable an RGA# will be assigned and can be returned for repair or replacement. Replacement parts required prior to warranty claim completion must be purchased. Upon receipt and verification of deemed warranty parts claim, a credit or refund can then be processed to complete warranty claim transaction. ReadyLIFT® products are **NOT** intended for off-road abuse. Any damage or failure as a result from off-road abuse voids the warranty of the ReadyLIFT® product. ReadyLIFT® is **NOT** responsible for any sub-sequent damages to any related vehicle parts due to misuse, abuse, improper installation, or lack of maintenance. Furthermore, ReadyLIFT® reserves the right to change, modify or cancel this warranty without prior notice.

# READYLIFT® SUSPENSIONS

**F250 / 350 3.5" Lift 69-2735, 69-2736**

**Please read Instructions thoroughly and completely before beginning installation.  
Installation by a certified professional mechanic is highly recommended.**

**ReadyLIFT® Suspension is NOT responsible for any damage or failure resulting from improper installation.**

**Safety Warning:** Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control or vehicle rollover during abrupt maneuvers. Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death to driver and passengers. Driver and passengers must ALWAYS wear your seat belts, avoid quick sharp turns and other sudden maneuvers. ReadyLIFT® Suspension does not recommend the combined use of suspension lifts, body lifts, or other lifting devices. You should never operate your vehicle under the influence of alcohol or drugs. Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use. It is the responsibility of the retailer and/or the installer to review all state and local laws, with the end user of this product, related to bumper height laws and the lifting of their vehicle before the purchase and installation of any ReadyLIFT® products. It is the responsibility of the driver/s to check their surrounding area for obstructions, people, and animals before moving the vehicle. All raised vehicles have increased blind spots and damage, injury and/or death can occur if these instructions are not followed.

This suspension system was developed using a 37" x 12.5" tire with 20" x 9" wheel and a offset of +25. If wider tires are used, offset wheels may be necessary and trimming may be required. Factory wheels can be used but are not recommended with tires over 11" wide. The stock spare rim can be run in an emergency. Please note that if running the spare factory tire, it is done for short distances and a speed not to exceed 45mph or damage to differentials may occur.

## VEHICLE HEIGHT MEASUREMENTS

	Driver Before	Driver After	Pass. Before	Pass. After
Front				
Rear				

# READYLIFT®

## SUSPENSIONS

**F250 / 350 3.5" Lift 69-2735, 69-2736**

### **BILL OF MATERIALS**

<b>Spring Spacer</b>	<b>2</b>	<b>7/16" x 1 1/2" Bolt</b>	<b>4</b>
<b>Shock Extension</b>	<b>2</b>	<b>7/16" Washer</b>	<b>8</b>
<b>Radius Arm Drops</b>	<b>2</b>	<b>7/16" Nut</b>	<b>4</b>
<b>Radius Arm Crush Sleeves</b>	<b>4</b>	<b>M8 x 70mm Bolt</b>	<b>2</b>
<b>Sway Bar Drop</b>	<b>2</b>	<b>M8 Washer</b>	<b>2</b>
<b>Brake Line Extension</b>	<b>2</b>	<b>M14 x 70mm Bolt</b>	<b>2</b>
<b>Urethane Isolator</b>	<b>2</b>	<b>M14 Washer</b>	<b>4</b>
<b>Bump Stop Extension</b>	<b>2</b>	<b>M14 Nut</b>	<b>2</b>
<b>5/16" x 3/4" Bolt</b>	<b>2</b>	<b>M18 x 130mm Bolt</b>	<b>4</b>
<b>5/16" Washer</b>	<b>4</b>	<b>M18 Washer</b>	<b>8</b>
<b>5/16" Nut</b>	<b>2</b>	<b>M18 Nut</b>	<b>4</b>

### **2 Piece Driveline ONLY**

<b>Carrier Bearing Spacer</b>	<b>1</b>
<b>7/16" x 2" Bolt</b>	<b>2</b>
<b>7/16" Washer</b>	<b>4</b>
<b>7/16" Nut</b>	<b>2</b>

### **Safety Warning**

**Before you start installation:**

ReadyLIFT® Suspension highly recommends that the installation of this product be performed by a professional mechanic with experience working on and installing suspension products. Professional knowledge and skill will typically yield the best installation results. If you need an installer in your area, please contact ReadyLIFT® Suspension customer service to find one of our "Pro-Grade" Dealers.

**INSTALLATION BY A PROFESSIONAL IS HIGHLY RECOMMENDED.**

- A Factory Service Manual for your specific Year / Make / Model is highly recommended for reference during installation.
- All lifted vehicles may require additional driveline modifications and / or balancing.
- A four wheel vehicle alignment will need to be performed after installation of this product.
- Speedometer / Computer recalibration is required if changing +/- 10% from factory tire diameter.
- Use of a Vehicle Hoist will greatly reduce installation time.
- Vehicle must be in excellent operating condition. Repair or replace any and all worn or damaged components prior to installation.

# READYLIFT® SUSPENSIONS

**F250 / 350 3.5" Lift 69-2735, 69-2736**

**\*\*\*Parts shown in red are for picture clarification only, actual lift components and colors may vary.\*\*\***

Park vehicle on a clean, flat surface and block the rear wheels for safety. Engage the parking brake.



Disconnect the vehicle power source at the ground terminal on the battery.



Lock the steering wheel in the straight forward position with the column lock or steering wheel locking device.

Raise the front of the vehicle and support with jack stands at each frame rail behind the lower control arms.



Support the axle with a suitable jack. (Fig 1)

Remove the radius arm from the frame. Rotate the axle until there is enough clearance to install the ReadyLIFT® radius arm drop brackets. (Fig 2)



Install the ReadyLIFT® radius arm drop brackets into the frame using **M18 x 130mm bolts, washers, crush sleeve, and nuts**. Do not tighten at this time. (Fig 3)



Rotate the axle until you can line up the radius arms into the ReadyLIFT® drop brackets. Install using **factory hardware**. Do not tighten at this time. (Fig 4)



Remove the brake line bracket at the frame and axle. (Fig 5, 6)



# READYLIFT® SUSPENSIONS

**F250 / 350 3.5" Lift 69-2735, 69-2736**

Remove the lower shock from the axle mount. (Fig 7)



Remove the sway bar from the frame. (Fig 8)



Remove the track bar from the factory bracket. (Fig 9)

Remove the factory track bar from the frame.

Install the ReadyLIFT® track bar bracket to the frame using factory hardware. Torque to 95 ft-lbs.



Install the track bar to the ReadyLIFT® bracket using factory hardware. Do not tighten at this time. (Fig 10)

Lower the axle enough to remove the front springs.



Install the ReadyLIFT® urethane isolator, spring spacer, and then factory rubber isolator onto the spring. (Fig 11)

Raise the axle enough to hold the spring assembly in place.



Install the ReadyLIFT® sway bar drops to the frame using factory hardware. Torque to 25 ft-lbs.



Install the sway bar to the ReadyLIFT® sway bar drops using the 7/16" x 1 1/2" bolts, washers and nuts. Torque to 35 ft-lbs. (Fig 12)

# READYLIFT® SUSPENSIONS

## F250 / 350 3.5" Lift 69-2735, 69-2736

Install the ReadyLIFT® shock extensions to the axle using factory hardware. Install the shock to the ReadyLIFT® shock extensions using the **M14 x 70mm bolt, washers and nuts**. Torque to **45 ft-lbs**. (Fig 13)



Reattach the brake line bracket at the axle using **factory hardware**. Torque to **5 ft-lbs**. (Fig 14)




Install the ReadyLIFT® brake line bracket to the factory brake line using **5/16" x 3/4" bolts, washers, and nuts**. Install the bolt with the head between the bracket and the frame. Torque to **10 ft-lbs**. (Fig 15)



Gently pull the metal brake line down while lining up the ReadyLIFT® bracket to the original holes in the frame. Install using **factory hardware**. Torque to **10 ft-lbs**. (Fig 15)

Remove the factory bump stop by pulling it out of its mount. Remove the mount from the frame. (Fig 16)

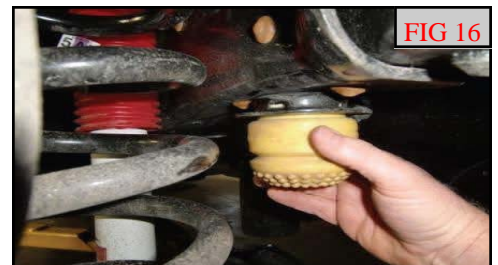

Install the ReadyLIFT® bump stop spacer and factory bump stop mount to the frame using **M8 x 70 mm bolt and washer**. Torque to **5 ft-lbs**.



Install the bump stop to the factory mount by pressing it back into place. (Fig 17)

Install the wheels and lower the vehicle to the ground. Torque the wheels to the manufacturer specs.



Jounce the suspension a few times to settle to the new ride height. Torque the radius arm brackets and arm bolts to **200 ft-lbs**, and track bar to **250 ft-lbs**.




# READYLIFT<sup>®</sup>

## SUSPENSIONS

### F250 / 350 3.5" Lift 69-2735, 69-2736

Park vehicle on a clean, flat surface and block the front wheels for safety. (Vehicle shown on hoist, your conditions may vary)

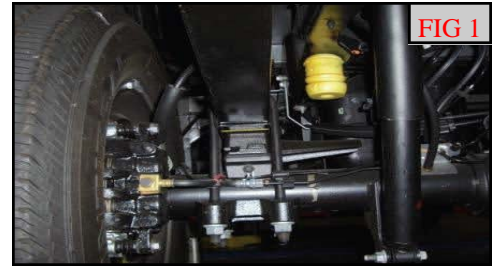

Using a suitable jack, raise the rear axle up and place jack stands on the frame in front of leaf hangers. (Fig 1)

Support the axle with jack.



Remove the rear wheels. (Not necessary, but can make the install easier)

Slightly loosen but do not remove the driver side u-bolts. Remove the passenger side u-bolts completely and discard. Lower the axle just enough to remove the factory block and install the ReadyLIFT block, making sure not to over extend brake and ABS lines. Adjust as necessary. Locate the passenger side lift block. Raise the axle and the block up to the spring while aligning the center pin. (If tapered, make sure small end points to the front of the vehicle.) Install the provided u-bolts, and nuts. Snug the u-bolt nuts but do not fully tighten at this time. Repeat steps for driver side. (Fig 2, 3, 4)



Lower the vehicle to the ground. Torque the lug nuts to the wheel manufacturer specs. Jounce the vehicle a few times to settle to the new ride height. Torque the u-bolts to 110 ft-lbs.



If equipped with a 2 piece driveline, remove the bolts holding the carrier bearing to the frame. Install the ReadyLIFT carrier bearing spacer between the carrier bearing and frame using provided hardware. Torque to 50 ft-lbs. (Fig 5)