





## Install Guide for RECON part 264129BK/CL

You will need to push the two white plastic connectors down through the holes in the picture below to free the connector that will be used with our light.

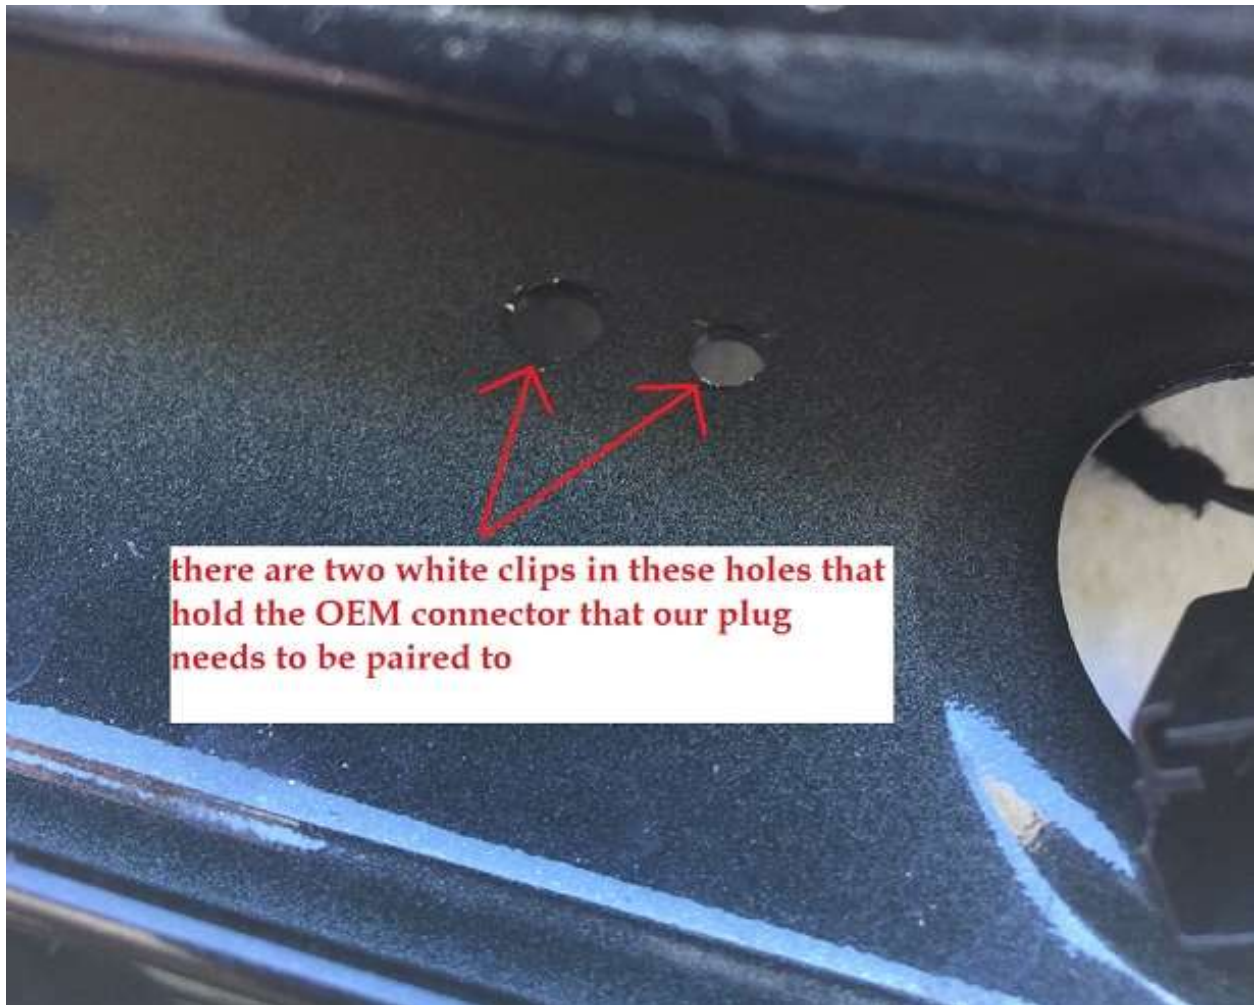

there are two white clips in these holes that hold the OEM connector that our plug needs to be paired to

As shown in the picture, the two white clips hold the factory connector in place.

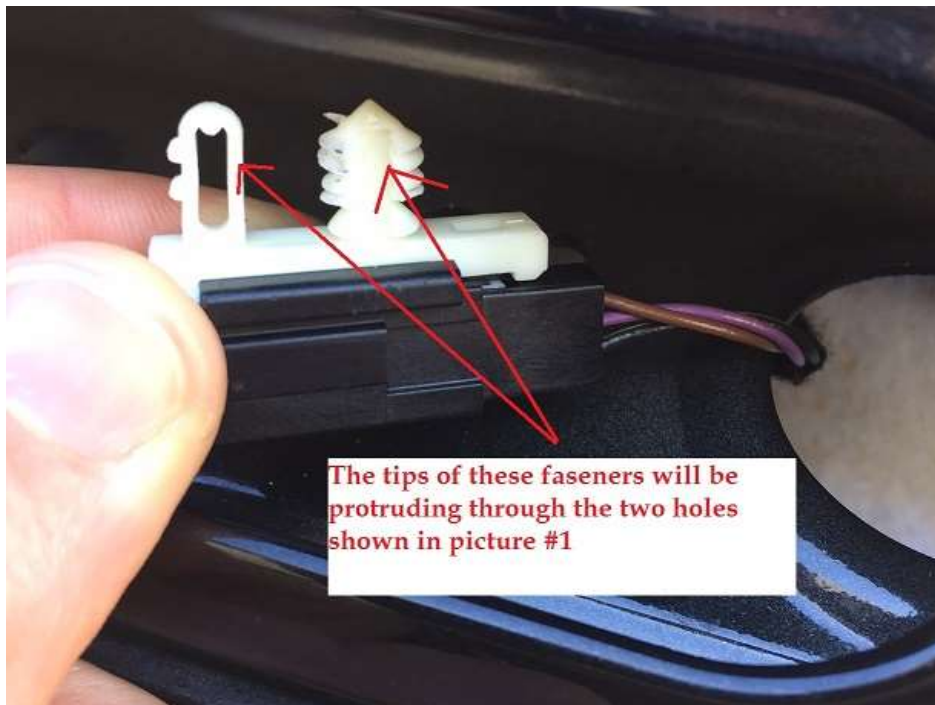

Once you have loosened this connector, the RECON plug will be a perfect fit!

