


# RECON

car lighting

**Part # 26411BK & CL – Ford F150 2009-2012**

## **Ford F150 LED 3<sup>rd</sup> Brake Lamp with Cargo Lights (Wiring Instructions)**

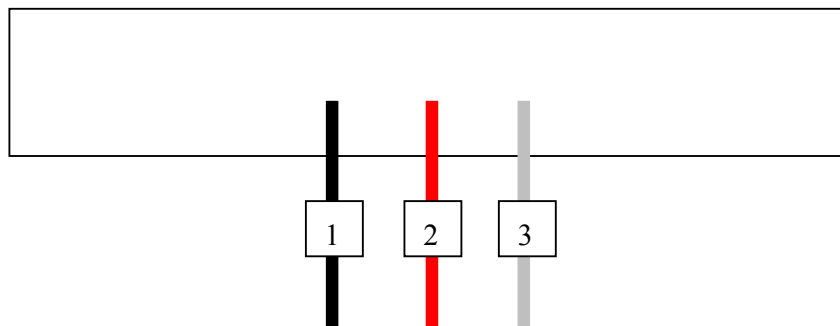

1. Please reference the table below to determine where the wires coming out of the back of your new **RECON LED 3<sup>rd</sup> Brake Lamp** are to be connected on your truck:

Wire #	RECON 3 <sup>rd</sup> Brake Light	Factory Wiring Connection Point
1	Solid BLACK Wire	Splice to ground for Brake Light & Cargo Light – This wire is also solid BLACK on your 2009-2012 Ford F150
2	Solid RED Wire	Splice to positive 12V for Brake Light – This wire is also solid RED on your 2009-2012 Ford F150
3	Solid WHITE Wire	Splice to positive 12V for Cargo Light – This wire is solid LIGHT BLUE on your 2009-2012 Ford F150

2. There are two options to properly connect the **RECON LED 3<sup>rd</sup> Brake Lamp** to your O.E. wires:

*Option 1:* Cut off your three O.E. bulb connectors, and connect the wires of your new **RECON LED 3<sup>rd</sup> Brake Lamp** to your O.E. wires as depicted in the wire color cross reference chart shown above.

*Option 2:* If you want to retain your O.E. connector plug, you must splice the wires a few inches before the O.E. connector plug by peeling back the O.E. wire covering/insulation and connect the wires as depicted in the wire color cross reference chart shown above.

Simply re-use your factory screws when mounting your new RECON LED 3<sup>rd</sup> brake light. DO NOT OVERTIGHTEN THEM. Remember you are screwing down into a plastic housing and care is needed to ensure a nice snug fit that isn't so tight that you crack the plastic housing. Apply a little RTV silicone in the screw holes and on the gasket before you install to ensure a nice water-tight seal & enjoy your new RECON LED 3<sup>rd</sup> brake light & remember to Light'Em Up w/ RECON Truck Accessories!!!