


RECON

Projector Headlights - WIRING INSTRUCTIONS & DIAGRAMS




STEP 1: SEPARATE ALL WHITE/RED (+)WIRES TOGETHER AND ALL BLACK (-)WIRES TOGETHER

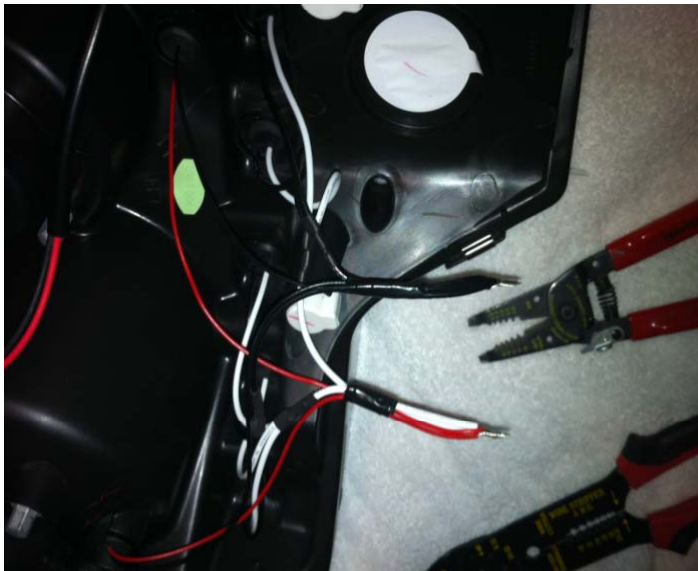

STEP 2: STRIP ALL RED/WHITE WIRES AND TWIST TOGETHER
STRIP ALL BLACK WIRES AND TWIST TOGETHER



STEP 3: CONNECT MALE WEATHERPROOF CONNECTORS

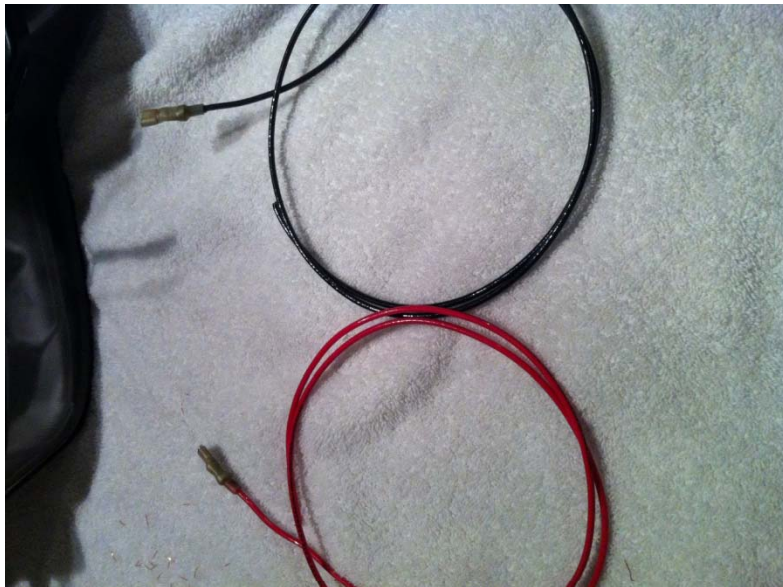


- **STEP 4: USE 12" OF RED AND BLACK WIRE AND CONNECT FEMALE CONNECTOR TO ONE SIDE OF EACH WIRE**



**STEP 5: CONNECT RED WIRE (+)
TO THE RED/WHITE WIRE
CONNECT BLACK WIRE (-) TO ALL
BLACK WIRES**



- **STEP 6: USE ELECTRICAL TAPE
TO PROTECT WIRES FROM
WEATHER AND CHAFE**
- **NOTE* COVER MALE/FEMALE
CONNECTORS WITH
ELECTRICAL TAPE AFTER
OPERATIOAL CHECKS**

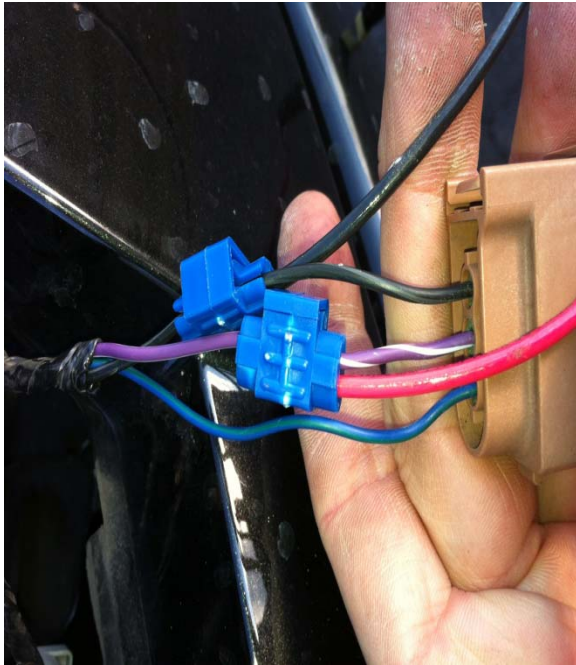

**STEP 7: CONNECT BLACK GROUND WIRE (-) TO THE BLACK GROUND WIRE ON THE PARKING LIGHT SWITCH
CONNECT RED POSITIVE WIRE (+) TO THE PURPLE WIRE ON THE SAME SWITCH**



**RECON Projector Headlights
Installed on a 2009-2013
F150 / Raptor
Get Lit w RECON Today!!**

ITEMS NEEDED

- WEATHERPROOF ELECTRICAL CONNECTORS
- 24" OF RED 14 GAUGE
- 24" OF BLACK 14 GAUGE WIRE
- ELECTRICAL TAPE