


96-07 AUDI A3, S3, A4, S4, RS4 INSTALLATION



3.) Unscrew the shift knob in order to pull the shifter surround plate and stock boot out of the center console.



4.) The underside of the shifter surround plate and stock boot. The stock boot is held to the console by four plastic tabs through holes in the edge of the shift boot. Unhook the boot and take it out.

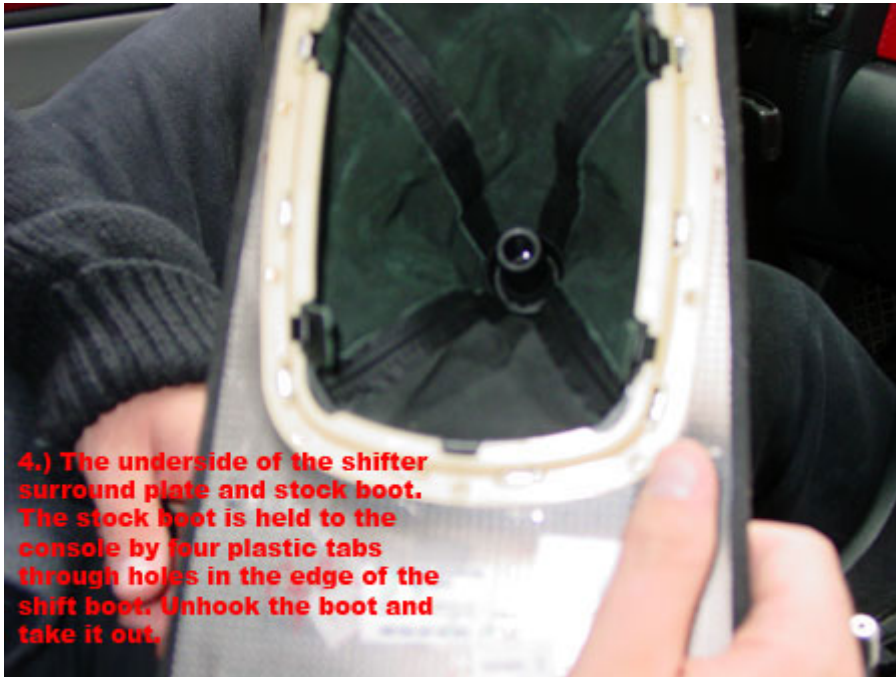



7.) The top edge of the small opening of the new boot is secured between the larger plastic piece and the small one that screws into it. Put the larger piece inside the boot from the bottom and screw the small piece into it.



8.) The new boot should look like this with the two plastic pieces screwed together.



9.) The new boot has tabs that attach to the plastic ring from the stock boot. Insert the ring in the bottom of the new boot and attach the tabs.




10.) The new boot with the plastic ring from the stock boot installed.





11.) The new boot with all of the plastic pieces installed from the stock boot. Looks great!

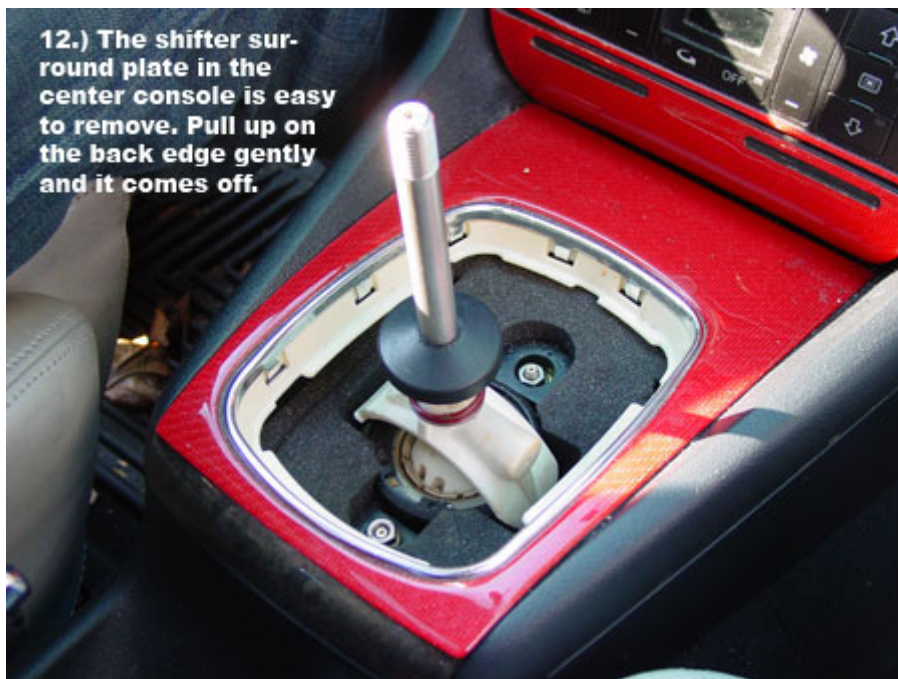

12.) The shifter surround plate in the center console is easy to remove. Pull up on the back edge gently and it comes off.



15.) The new shift boot seated into place in the center console and the shift lever pushed gently through the top opening.



16.) The stock shift knob screws on clockwise and fits on the plastic collar at the top of the boot. Looks great!

