

## Install Guide for Automatic Shift Boot in 2013 Scion FRS

### Tools & Materials:

- Philips head screwdriver
- New shift boot

### Install:

1. Pull the top of the shift boot down off of the shift knob. Unscrew the shift knob by twisting it off the shifter.



2. Pull the shift bezel off of the center console by grabbing the inner lip of the bezel around the inside of the shift boot and pulling up.
3. The shift bezel will still be attached by the traction control buttons and the shift indicator. (Optional) Flip it over and unscrew the 2 screws holding in each.
4. Unscrew the 2 screws holding in the shift boot and then remove it from the bezel.



5. Carefully pull the stock shift boot off of the pegs holding it on.




6. Pull the black rubber ring out from the inside of the stock boot(it may have some adhesive attaching it). Put the ring into the lip of the new shift boot by folding the top flaps in over the ring.



7. Put the new shift boot on by stretching it over the black piece and putting the pegs through the holes on the boot. Start with the flat side and wrap the boot around the edge.



8. Once the shift boot is on you can screw it back into the bezel as well as screwing back in the other pieces if you chose to remove them.

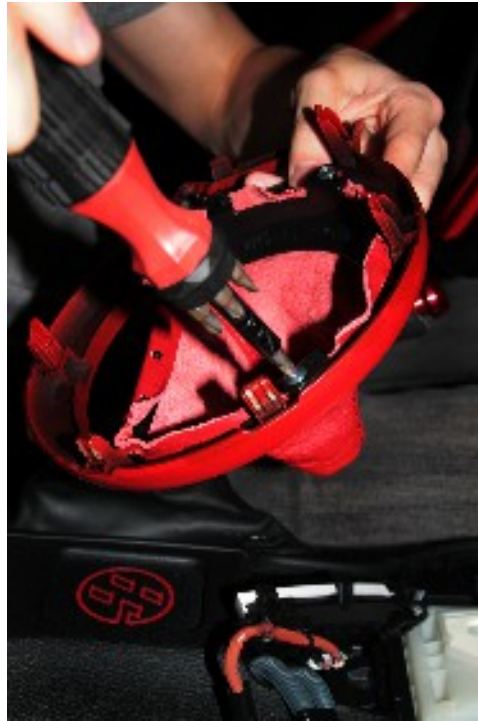

9. Put the shift bezel back on the center console. Be careful to get the shifter through the shift boot.
10. Screw the shift knob back on and make sure the rubber ring is around the bottom of the shift knob.



Finished product!

[View other gear shift knobs made by Redline Goods on our website.](#)