

## 68-82 CORVETTE INSTALLATION INSTRUCTIONS

**1.** Remove 4 phillips screws at the corners of the shift plate.



**2.** Use a 1/16" allen wrench to loosen the set screws holding the Astro Vent knobs in place. It is not necessary to remove the said screws completely. Put the knobs and screws in a safe place.



**3.** To remove the shift knob, simply unscrew counterclockwise.



**4.** Pull the reverse actuator straight up, be careful not to lose the spring.



**5.** Remove the light from the ashtray lighter by squeezing the sides together gently.




**6.** Pull the power feed straight off of the lighter. (On some cars, it may be necessary to unscrew the lighter assembly to remove the grounding ring).

**7.** Lift the shift plate out of the car, remove the 4 small screws holding the shift boot on, and pull the shift boot off.



**8.** Turn the new boot inside out, pull it over the shift plate, and pull the collar over it.

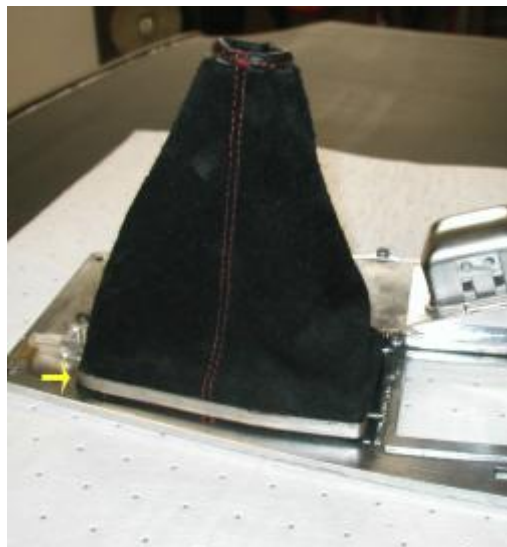

**9.** On some vehicles, it may be necessary to remove the 4 screws holding the ashtray in place to get the shift boot over the shift plate. Replace the ashtray as soon as the boot is installed.



**10.** Reinstall the 4 screws hold ing the boot and collar on.



**11.** Congratulations! Your new shift boot is installed. To reinstall the shift plate, simply reverse steps 1-6.



**CONGRATULATIONS - YOU HAVE SUCCESSFULLY INSTALLED YOUR NEW LEATHER BOOTS!**

**Useful tip**

You have installed a product made out of genuine leather. As you know, to maintain a leather product in good condition, you should take care of it. We suggest occasionally (every 4-6 week for example) applying some leather conditioner/UV protector to keep your leather from drying up in the sun and cracking.

**Redline Automotive Accessories Corp. will not be held liable for any labor, incidental or consequential damages of any kind. Proceed at your own risk.**

[View other gear shift knobs made by Redline Goods on our website.](#)