

Installation Instructions

Cadillac DeVille


Cadillac DTS

Part Numbers:

36287

06298

90142

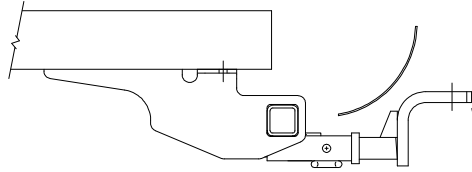

(Sold separately)

Drawbar Kit:

36071

Drawbar must be used in the **Rise** position only.

Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or

3500 (1589 Kg) LB Max Gross Trailer Weight

300 (136 Kg) LB Max Tongue Weight


Hitch Shown In Proper Position

Equipment Required: Pull Wire (Provided)

Fastener Kit: K36287

Wrenches: 7/8, 13mm

Drill Bits: None

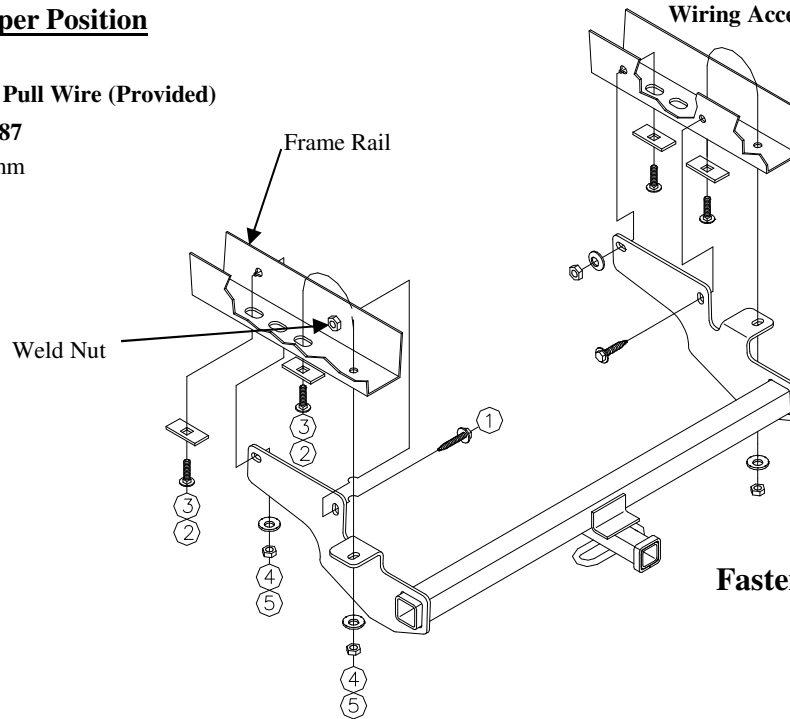

Wiring Access Location: PC3, PC4

Fasteners typical both sides.

①	Qty. (2)	Bolt M8 X 1.25 X 35	④	Qty. (4)	Conical Washer 1/2"
②	Qty. (4)	Carriage Bolt 1/2-13 X 1.75	⑤	Qty. (4)	Hex Nut 1/2-13
③	Qty. (4)	Block	⑥	Qty. (1)	Pull Wire

1. Raise hitch into position.
2. Install two (2) M8 Bolts into existing weld nuts as shown.
3. Fish wire remaining fasteners as shown. **Note : 1/2 bolts and blocks must be fish wired separately.**

Tighten all M8 fasteners with torque wrench to 25 Lb.-Ft. (34 N*M)

Tighten all 1/2 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.