

Installation Instructions


Part Numbers:

Honda Odyssey

36417

06398

90153

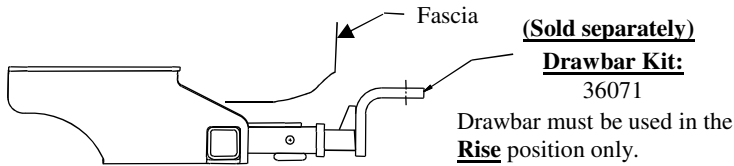

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

3500 lb, 1589 kg Max Gross Trailer Weight

300 lb, 136 kg Max Tongue Weight

Hitch Shown In Proper Position

Wiring Access Location: SUV3


Equipment Required:

Fastener Kit: 36417F

Wrenches: 18mm

Drill Bits: None

Hitch Requires 1/2" Pin and Clip.

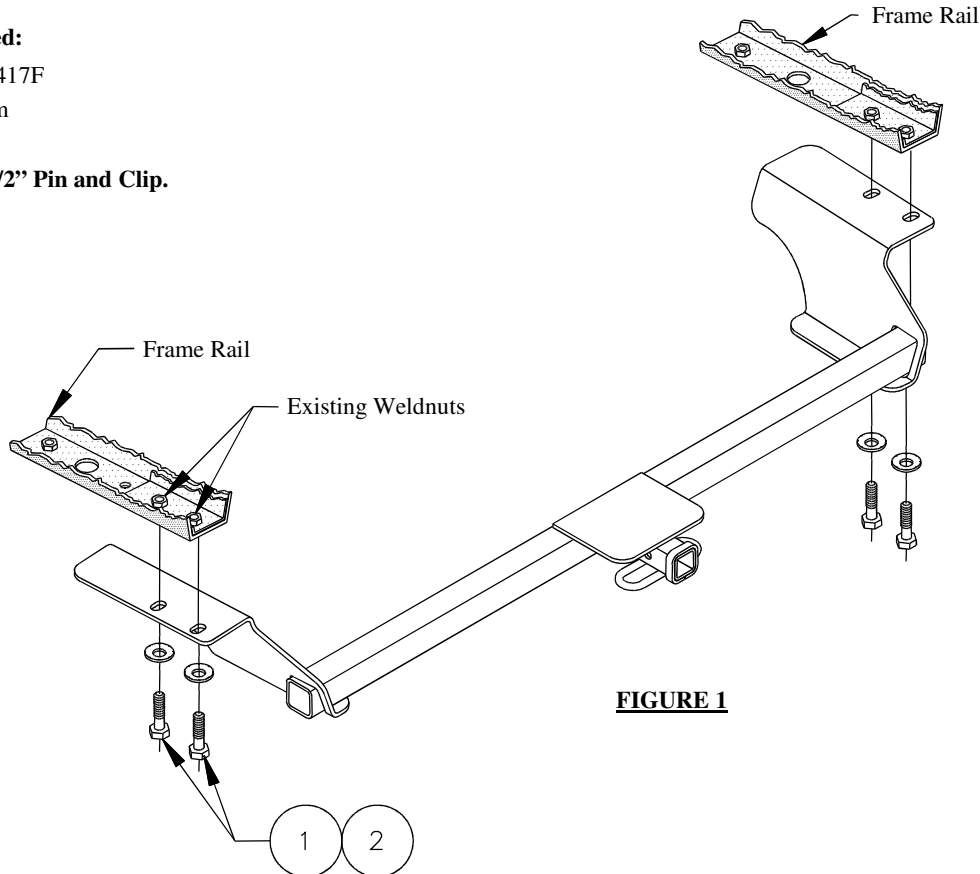

Fasteners Typical Both Sides

①	Qty. (4)	M12 X 1.25 X 35mm CL8.8 Bolt	②	Qty. (4)	Conical Toothed Washer
---	----------	------------------------------	---	----------	------------------------

1. Lower vehicle exhaust.
2. Raise hitch into position
3. Install fasteners as shown in Figure 1.
4. Re-install vehicle exhaust.

Tighten all M12 CL8.8 fasteners with torque wrench to 76 Lb.-Ft. (103 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.