INSTALLATION INSTRUCTIONS

EQUIPMENT REQUIRED:

WIRING ACCESS LOCATION: SUV3

DRILL BITS:

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN (7651) IS NOT INSTALLED.

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 14mm, 18mm

VEHICLE SUZUKI GRAND VITARA SUZUKI VITARA (INCLUDES XL-7)


41537 33038

HITCH NO.


CHEVROLET TRACKER 2 & 4 DR.

3500 LB MAX GROSS TRAILER WT 350 LB MAX TONGUE WEIGHT DO NOT EXCEED TOWING VEHICLE RATINGS


DO NOT USE WITH WEIGHT-DISTRIBUTING (SPRING BAR TYPE) HITCH.

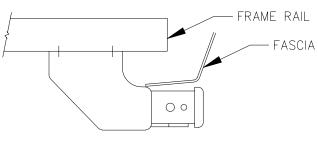

HITCH SHOWN IN PROPER POSITION

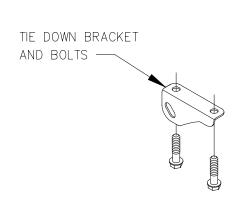


EXISTING WELDNUTS -

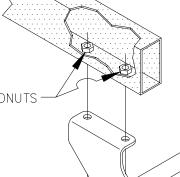

M12 X 1.25 X 30mm CL8.8

HEX BOLT CONICAL TOOTHED WASHER

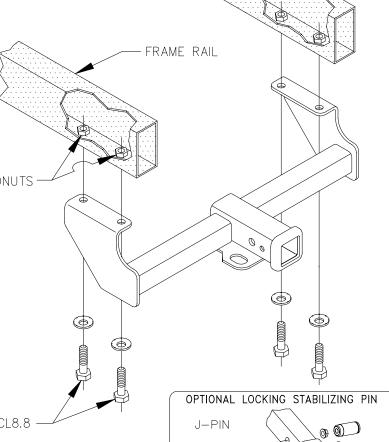

1. REMOVE TIE DOWN BRACKET AND BOLTS ON DRIVER'S SIDE AND RETURN TO VEHICLE OWNER.

2. RAISE HITCH INTO POSITION AND USING EXISTING WELDNUTS INSTALL FOUR (4) M12 BOLTS AS SHOWN ABOVE.

TIGHTEN ALL M12 CL8.8 FASTENERS TO 67 LB-FT.

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX WEIGHT (LB.)

FASTENER KIT 01131 - 125

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.

AND TOWING PRODUCTS

(Order Separately)