

# Installation Instructions


## Nissan Titan

Part Numbers:

**70530**

**37092**

**41551**

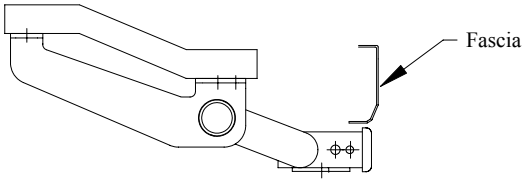

### Hitch Shown In Proper Position

#### Equipment Required:

**Fastener Kit:** 41551F


**Wrenches:** 19mm

**Drill Bits:** None

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>10,000 (4540 Kg)</b>	<b>1,000 (454 Kg)</b>
Weight Carrying Ball Mount	<b>6,000 (2724 Kg)</b>	<b>600 (272 Kg)</b>

**Wiring Access Location:** PU3

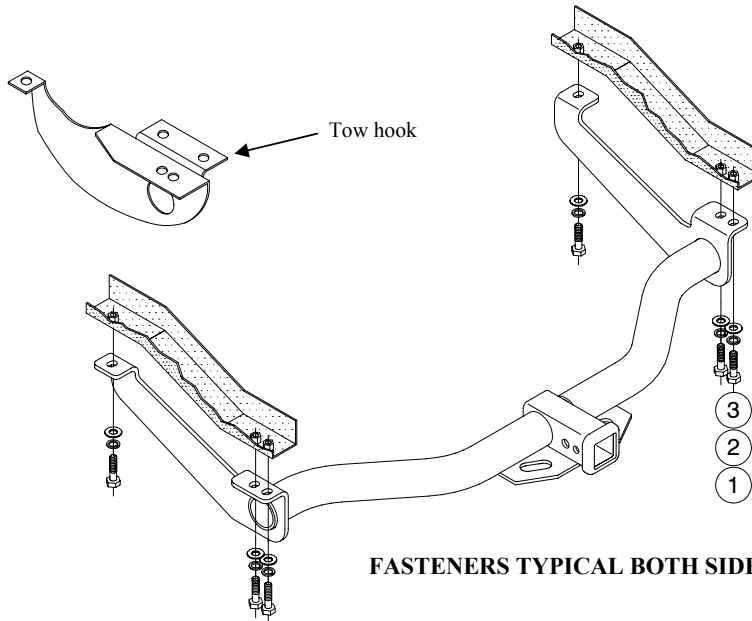

**FASTENERS TYPICAL BOTH SIDES OF VEHICLE**

①	Qty. (6)	Hex bolt M12 x 1.25 x 45mm CL8.8	③	Qty. (6)	Flat washer 1/2"
②	Qty. (6)	Lock washer 1/2"			

1. Remove tow hook if present and return to owner.
2. Raise hitch into position, aligning holes in hitch with the existing weld nuts in vehicle's frame rail.
3. Install M12 hex bolt, lock washer and flat washer as shown (hand tighten only until all fasteners are installed).

Tighten all M12 CL8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.