

Installation Instructions

Toyota Highlander

Part Numbers:

44076

Equipment Required:

Fastener Kit: 44517


Wrenches: 14mm Wrench & Socket,
17mm Wrench & Socket, 6" Extension

Drill Bits: None

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	Not For Use With Spring Bars	
Weight Carrying Ball Mount	3500 (1589 Kg)	350 (159 Kg)

Wiring Access Location: SUV3, SUV4

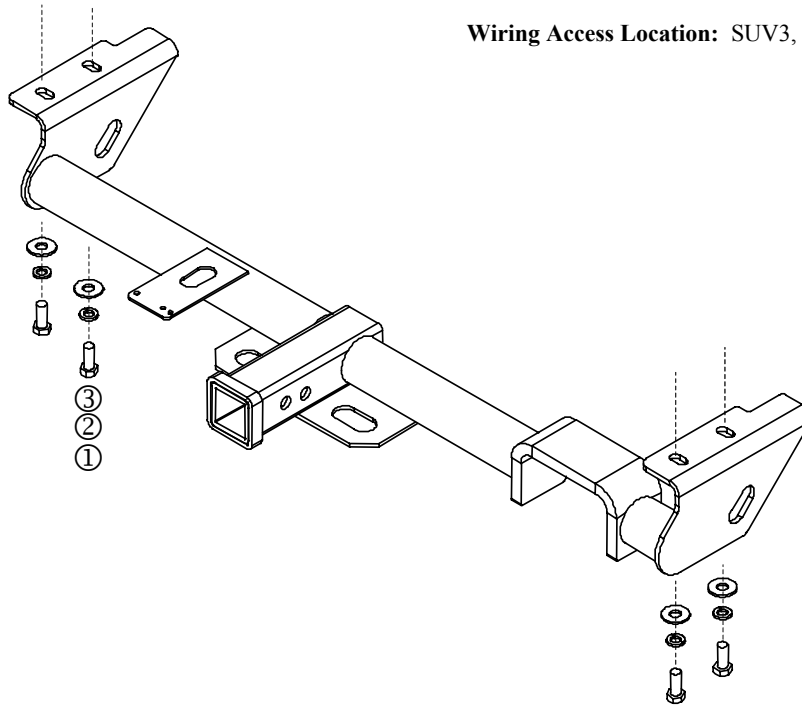

①	Qty. (4)	Bolt M10 X 1.25 X 40	③	Qty. (4)	Flat Washer 3/8
②	Qty. (4)	Lock Washer M10			

1. Remove the tie down brackets. Discard the existing bolts and tie down brackets.
2. Install the hitch over the tailpipe and up against the bottom of the frame. Match the hitch holes on each side with the frame holes.
3. Install the bolts, lock washers and flat washer through the hitch into the weld nuts in the frame.

Tighten all M10 fasteners with torque wrench to 35 Lb.-Ft. (47 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.