

Installation Instructions

Honda Odyssey


Part Numbers:

75270

44174

87479

78234 U-HAUL

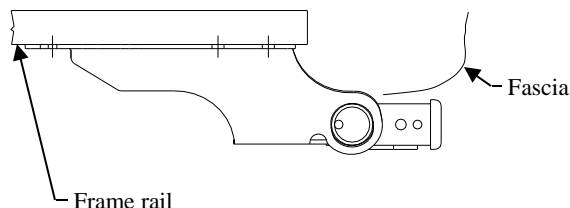

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	5000 (2270 Kg)	675 (306 Kg)
Weight Carrying Ball Mount	4500 (2043 Kg)	675 (306 Kg)

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: 75270F

Wrenches: 18mm

Drill Bits: None

Wiring Access Location: SUV3

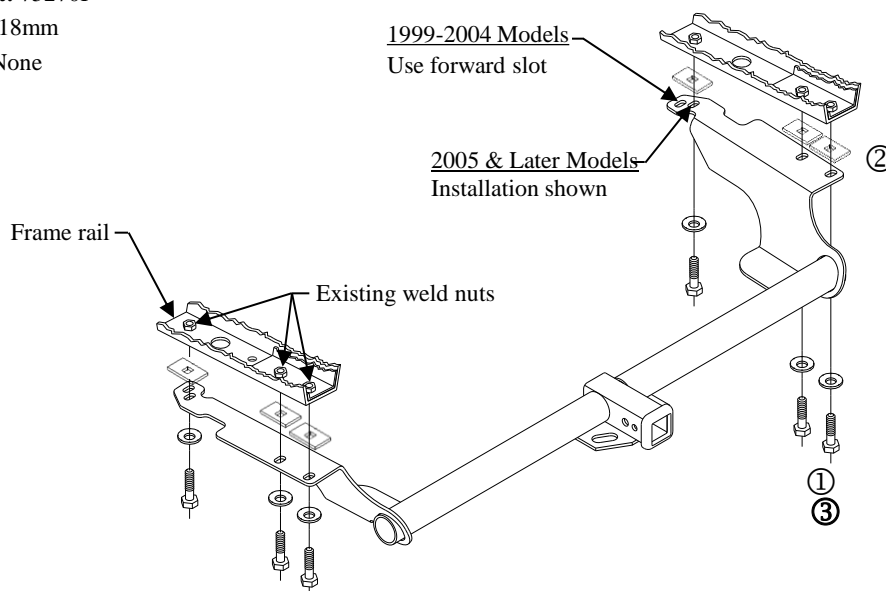

Note: Fasteners typical both sides

①	Qty. (6)	Bolt M12 X 1.25 X 35mm	③	Qty. (6)	Conical Washer
②	Qty. (6)	1/4" X 1-1/2" X 2" Blocks			

Note: If present, remove plastic appearance panel which covers driver's side frame rail. Return appearance panel and fasteners to vehicle owner.

1. Lower vehicle exhaust and raise hitch into position.
2. Install the six (6) M12 fasteners and blocks as shown above.

Note: 1999-2004 models use the most forward slots in the hitch side brackets.

3. Re-install vehicle exhaust.

Tighten all M12 Cl8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.