

# Installation Instructions

**Nissan Frontier  
Suzuki Equator**


Part Numbers:

**75282**

**44526**

**87539**

**75990 UHAUL**

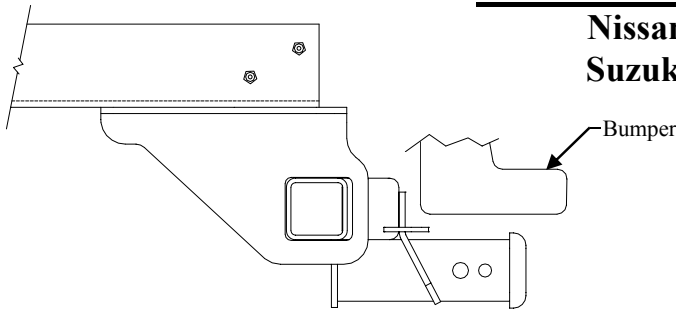

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>8,000 (3 632 Kg)</b>	<b>800 (363 Kg)</b>
Weight Carrying Ball Mount	<b>5,000 (2 270 Kg)</b>	<b>750 (341 Kg)</b>

## Hitch Shown In Proper Position


### Equipment Required:

**Fastener Kit:** 75282F

**Wrenches:** 19mm

**Drill Bits:** None

**Wiring Access Location:** PU3

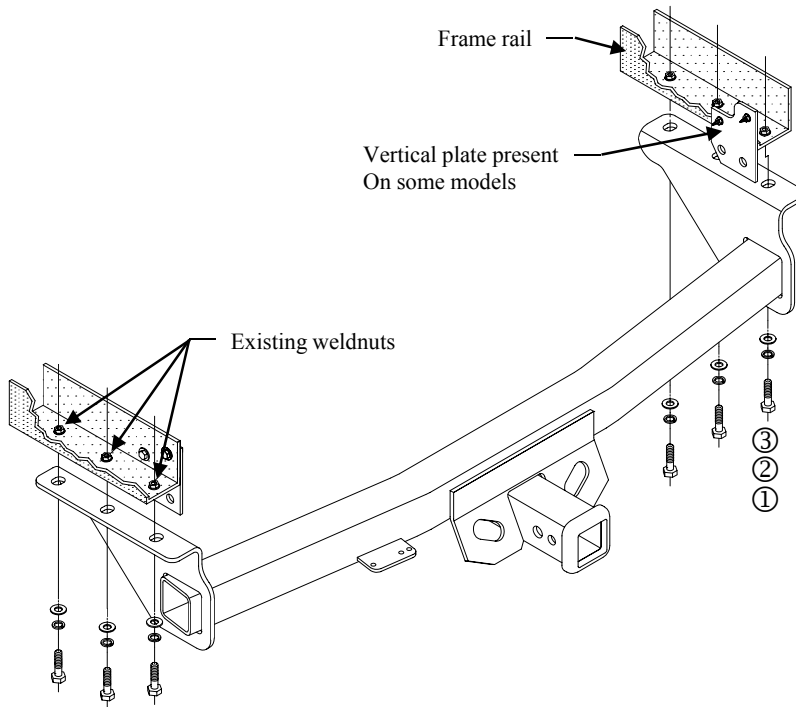

**Note: Fasteners typical both sides**

<b>①</b>	Qty. (6)	Hex Bolt M12 x 1.25 x 35mm	<b>③</b>	Qty. (6)	Flat Washer
<b>②</b>	Qty. (6)	Lock Washer			

**1. Raise hitch into position and install fasteners as shown above.**

**Tighten all M12 CL8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N\*M)**

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.