

Installation Instructions

Part Numbers:

75421


44537

70761

78211 U-Haul

Kia Sedona Van

Hyundai Entourage

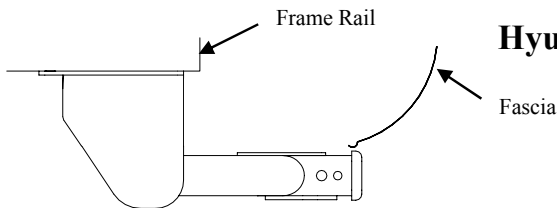

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	4000 (1816 Kg)	400 (182 Kg)
Weight Carrying Ball Mount	3500 (1589 Kg)	350 (159 Kg)

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: 75421F

Wrenches: 19mm

Drill Bits: None

Wiring Access Location: SUV1 & SUV2

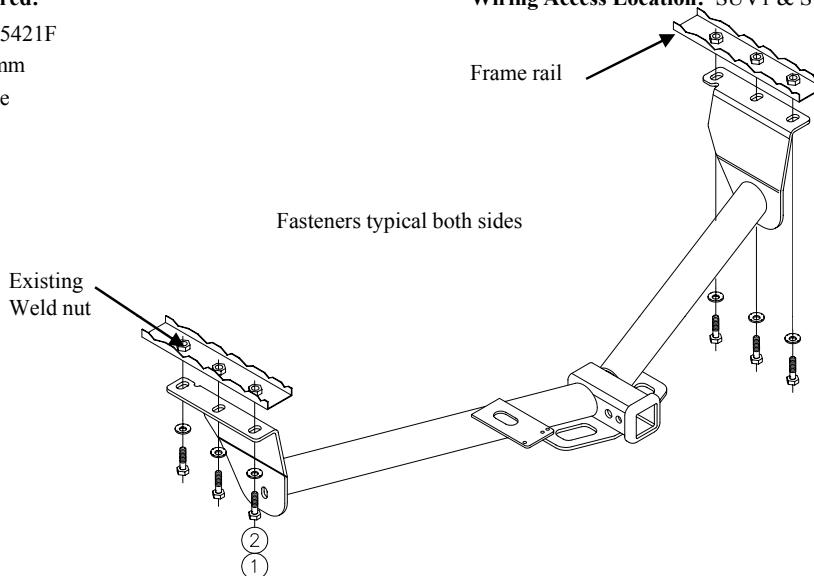

① Qty. (6) Hex Bolt M12 X 1.25

② Qty. (6) Conical Washer

1. Remove the exhaust from its hangers to get better access to frame fastener location.
2. Raise hitch on the passenger side over exhaust pipe and slowly rotate hitch into position.
3. Secure hitch by loosely installing all the bolts.
4. Push hitch forward against installed bolts.
Tighten all m12 fasteners with torque wrench to 76 Lb.-Ft. (103 N*M)
5. Reattach previously removed exhaust hangers.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.