

Installation Instructions


Part Numbers:

Kia Sorento

75516

87425

44558

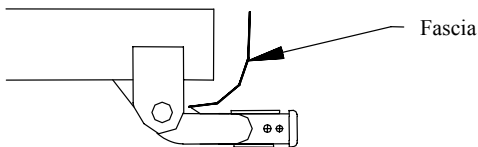

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	5000 (2268 Kg)	500 (227 Kg)
Weight Carrying Ball Mount	5000 (2268 Kg)	500 (227 Kg)

Wiring Access Location: SUV7


Hitch Shown In Proper Position

Equipment Required:

Fastener Kit: 75516F

Wrenches: 19mm

Drill Bits: None

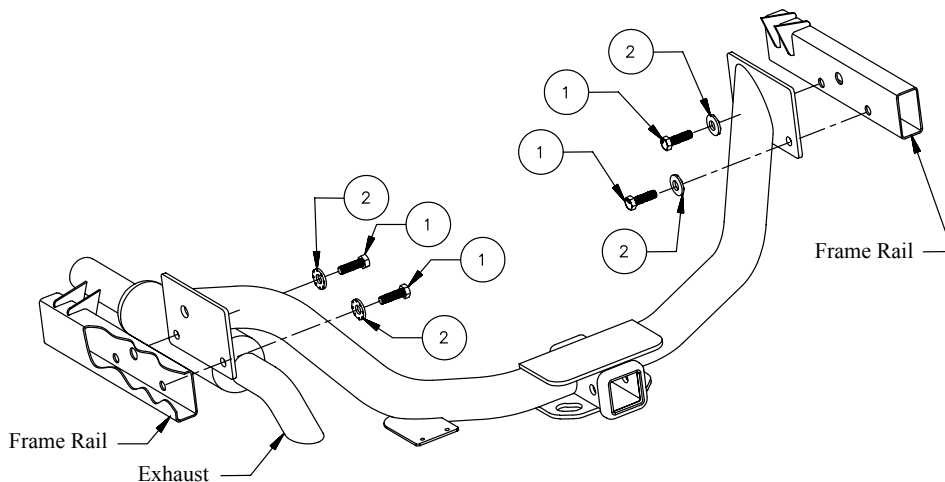

①	Qty. (4)	M12 X 1.50 X 40mm CL 10.9 Hex Bolt	②	Qty. (4)	Conical Toothed Washer
---	----------	------------------------------------	---	----------	------------------------

Spare tire may need to be lowered for installation.

1. Raise receiver over exhaust and into position between vehicle frame rails.
2. Install M12 X 1.50 Hex bolts and conical toothed washers into existing weldnuts.

Tighten all M12 X 1.50 CL10.9 fasteners with torque wrench to 92 Lb.-Ft. (125 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.