

Installation Instructions


DODGE NITRO

Part Numbers:

75517

87426

44559

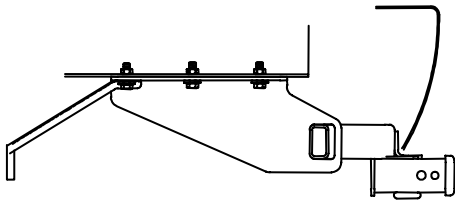

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	6000 (2721 Kg)	600 (272 Kg)
Weight Carrying Ball Mount	5000 (2268 Kg)	500 (227 Kg)

Hitch Shown In Proper Position

Equipment Required:


Fastener Kit: 75517F

Wrenches: 18mm, 19mm

Drill Bits: NONE

Hitch requires 5/8" pin & clip

Wiring Access Location: SUV 1 & 2

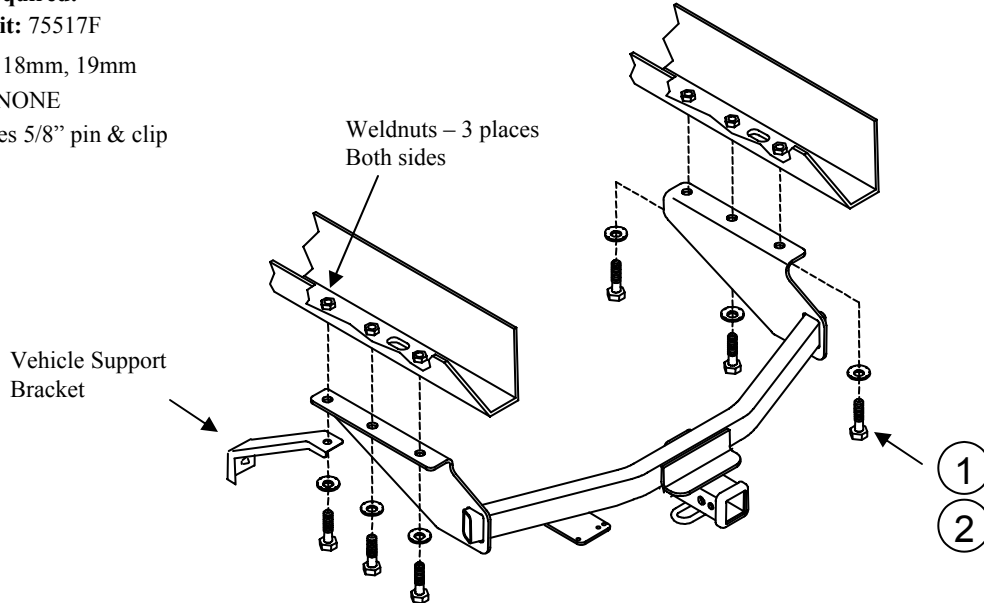

①	Qty. (6)	M12 X 1.75 X 40mm CL 8.8 Hex Bolt	②	Qty. (6)	Conical Toothed Washer 1/2
---	----------	-----------------------------------	---	----------	----------------------------

1. Remove bolt from driver's side vehicle support bracket and return to vehicle owner.
2. Raise hitch into position.
Note: For vehicles equipped with a full size spare tire, it may be necessary to temporarily lower spare tire.
3. Position hitch between frame & support bracket (driver's side) and loosely install the six M12 bolts and conical toothed washers as shown.
4. Tighten all fasteners to 75 Lb-Ft (102 N*M).
5. Raise spare tire if lowered in step 2.

Tighten all M12 CL 8.8 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.