


Installation Instructions

Nissan Quest

Part Numbers:
75714
87609
44663
75228 U-Haul

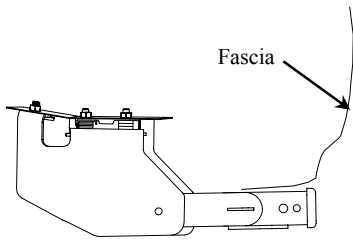

Hitch Shown In Proper Position


Equipment Required: Lubricant or soapy water, tape

Fastener Kit: 75714F

Wrenches: 18mm, 19mm, 6" Ratchet Extension

Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	Not For Use With Spring Bars	
Weight Carrying Ball Mount	3500 (1589 Kg)	525 (239 Kg)

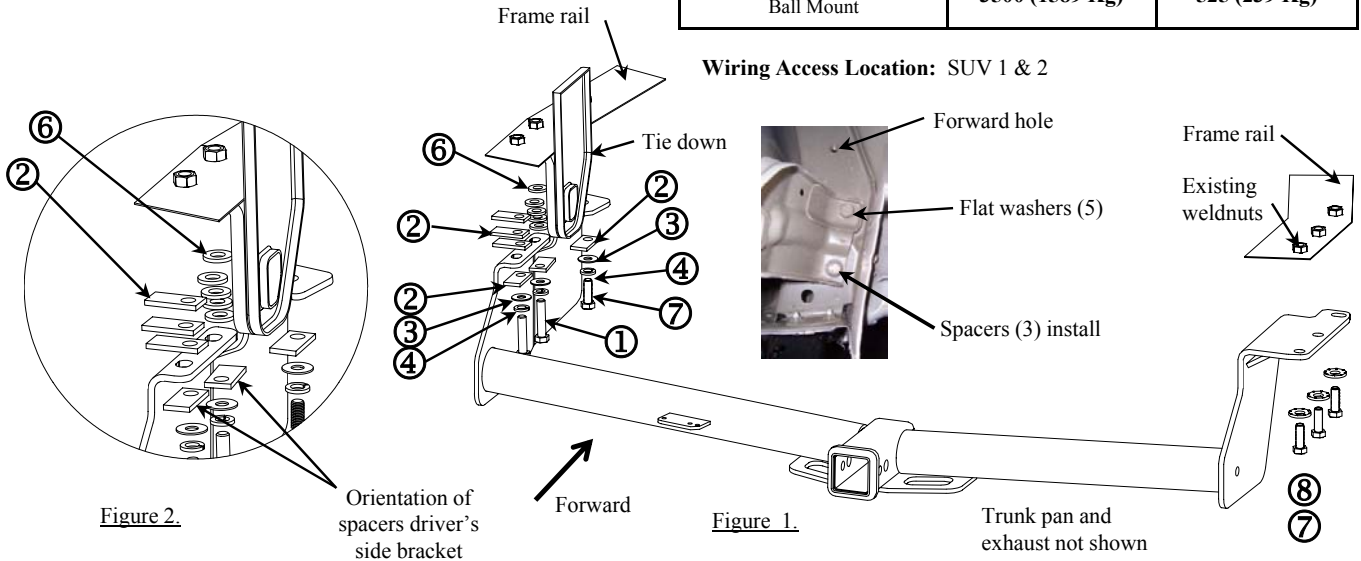

①	Qty. (2)	Hex Bolt M12 X 1.25 X 55 CL8.8	⑥	Qty. (5)	Flat washer 1/2" (Black)
②	Qty. (6)	Spacer 3/16" X 1.00 X 1.50	⑦	Qty. (4)	Hex Bolt M12 X 1.25 X 45 CL8.8
③	Qty. (3)	Flat Washer 7/16" (Silver)	⑧	Qty.(4)	Conical Washer 1/2" (Yellow)
④	Qty. (3)	Lock Washer 1/2"	⑨		

- Lower exhaust system at the rubber isolator. Spraying a lubricant or soapy water on the metal hanger rod and the rubber isolator helps removal.
- Remove the (2) bolts on the tie down on driver's side frame rail. Return fasteners to owner.
- Tape (3) spacers (item 2), and (5) flat washers (item 6) together for ease of installation.
- Clean threads to assure bolts start. Spray some lubricant into each weldnut. Work bolt in and out until cleaned out. Next get rid of the lubricant. Use any good household detergent, and flush clean.
- Raise hitch over exhaust, and install bolt (item 7) and conical washer (item 8) to hold hitch in position.
- Raise hitch in position on driver's side install the forward bolt, lock washer, flat washer, and spacer, to hold hitch in position.
- Slide taped spacers (item 2) into position, between tie down and hitch bracket. Install spacer, flat washer, lock washer and hex bolt (item 1). Do not tighten.
- Slide taped washers (item 6) into position, between tie down and hitch bracket. Install spacer, flat washer, lock washer and hex bolt (item 1). Hand tighten fastener and orient spacers as shown Figure 2.
- Install remaining fasteners to passenger's side frame rail.
- Tighten all fasteners to called-out torque specification.
- Reattach exhaust.

Tighten all M12 CL8.8 fasteners with torque wrench to 42 Lb.-Ft. (57N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.