


# Installation Instructions

Part Numbers:

All require OEM Bumper  
**Chevrolet Suburban\*, Chevrolet Tahoe\*,  
 GMC Yukon XL\*, GMC Yukon\*,  
 Cadillac Escalade, Chevrolet Avalanche,**  
 \*Vehicles with amber turn signals

**75725  
 87614  
 44668**

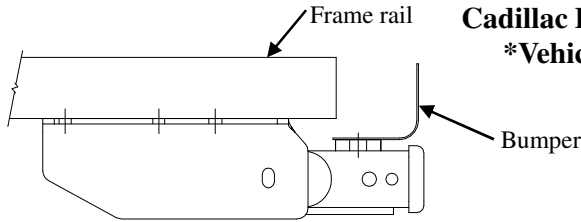

**Hitch Shown In Proper Position**


**Do Not Exceed Lower of Towing Vehicle  
 Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>10,000 (4540 Kg)</b>	<b>1000 (454 Kg)</b>
Weight Carrying Ball Mount	<b>6000 (2724 Kg)</b>	<b>900 (409 Kg)</b>

**Equipment Required:**

- Fastener Kit:** 75725GF
- Wrenches:** 7/8, 22mm
- Drill Bits:** None

**Wiring Access Location: SUV6**

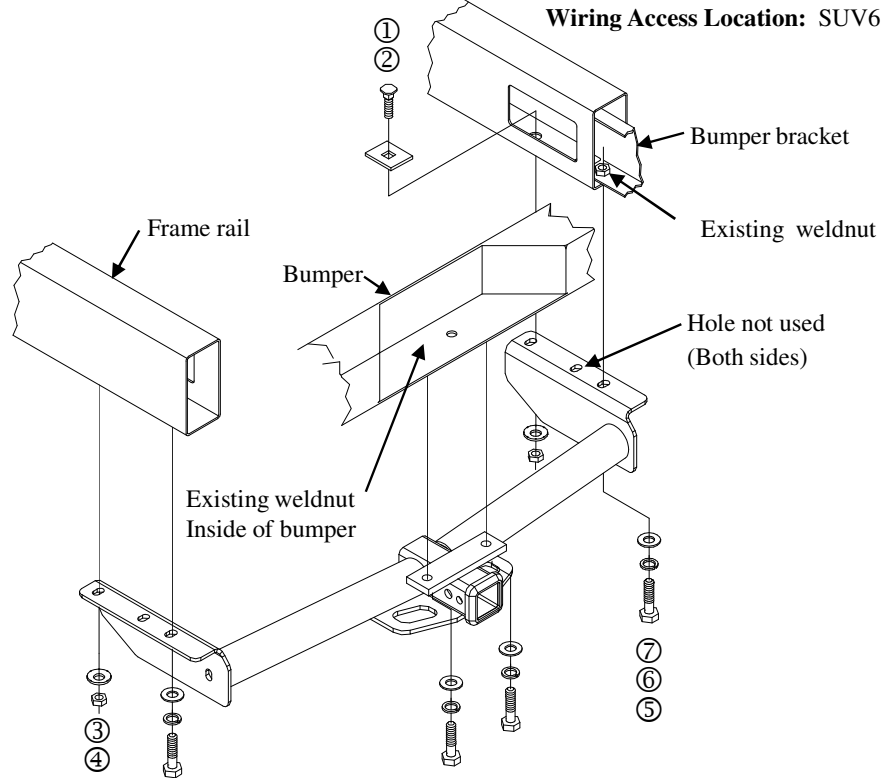

**Note: Fasteners typical  
 both sides**

<b>①</b>	Qty. (2)	Carriage Bolts 1/2-13 X 1.75 GR 5	<b>⑤</b>	Qty. (4)	Hex Bolt M14 X 2.00 X 40mm CL 10.9
<b>②</b>	Qty. (2)	Spacer	<b>⑥</b>	Qty. (4)	Lock Washer
<b>③</b>	Qty. (2)	Conical Washer	<b>⑦</b>	Qty. (4)	Flat Washer
<b>④</b>	Qty. (2)	Hex Nut 1/2-13			

1. Remove existing M14 bumper bracket bolts on both sides from bottom surface of frame and return to vehicle owner.
2. Raise hitch into position and install as shown with fasteners provided.

Tighten all 1/2 GR5 fasteners with torque wrench to 75 Lb.-Ft. (102 N\*M)

Tighten all M14 CL10.9 fasteners with torque wrench to 115 Lb.-Ft. (156 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.