


Installation Instructions

**Nissan Frontier
Suzuki Equator**

Part Numbers:
51147

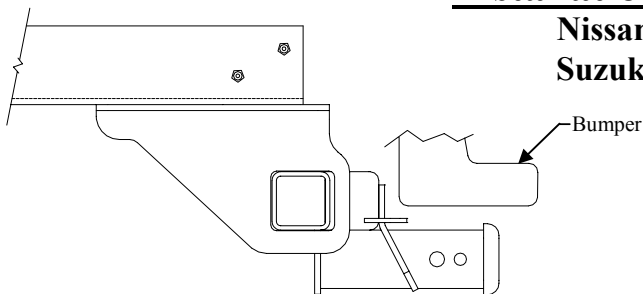

Hitch Shown In Proper Position

Equipment Required:

Fastener Kit: 51147F


Wrenches: 19mm

Drill Bits: None

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	8,000 (3 632 Kg)	800 (363 Kg)
Weight Carrying Ball Mount	5,000 (2 270 Kg)	500 (227 Kg)

Wiring Access Location: PU3

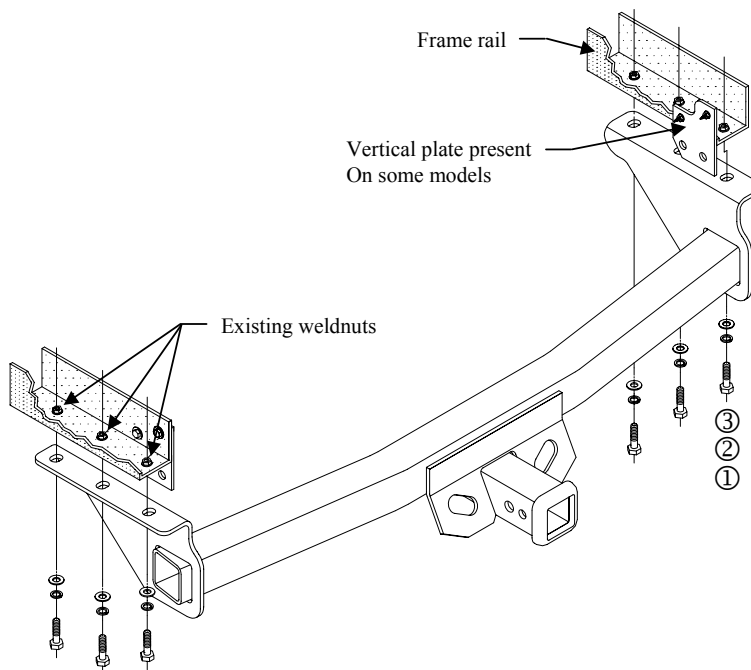

Note: Fasteners typical both sides

①	Qty. (6)	Hex Bolt M12 x 1.25 x 35mm	③	Qty. (6)	Flat Washer
②	Qty. (6)	Lock Washer			

1. Raise hitch into position and install fasteners as shown above.

Tighten all M12 CL8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.