

Installation Instructions


Part Numbers:

Hyundai Sonata

24757

77133

60816

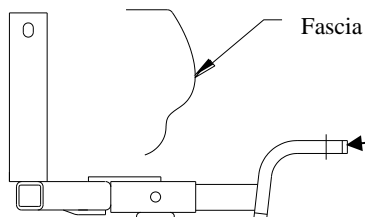

(Sold separately)

Drawbar Kit:

3592

Or

6803

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

2000 LB Max Gross Trailer Weight

200 LB Max Tongue Weight

Hitch Shown In Proper Position


Wiring Access Location: PC3, PC4

Equipment Required:

Fastener Kit: 24757F or 60816F

Wrenches: 10mm, 18mm, 9/16

Drill Bits: None

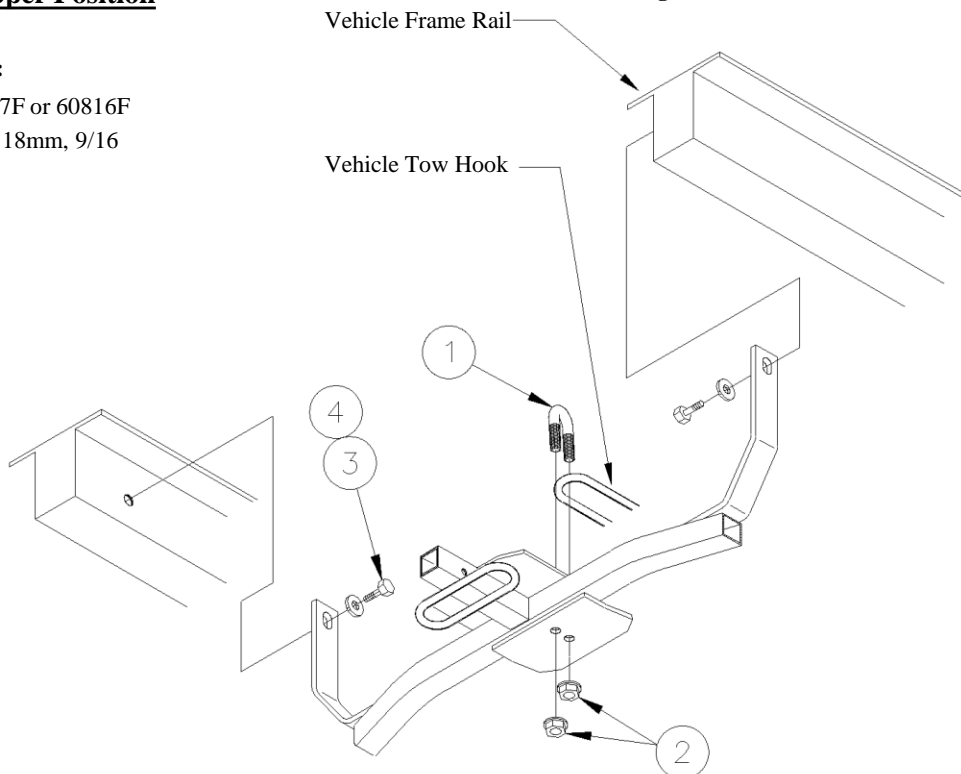

①	Qty. (1)	3/8-16 U-Bolt	③	Qty. (2)	M10 x 1.25 x 40mm Hex Bolt
②	Qty. (2)	3/8-16 Flanged Locknut	④	Qty. (2)	Conical Toothed Washer

NOTE:

On vehicles with single exhaust, remove appearance panel which covers driver's side frame rail by removing seven fasteners. Return appearance panel and fasteners to vehicle owner.

1. Lift hitch into position and install u-bolt over vehicle tow hook and down thru holes in vehicle center bracket. Install 3/8" flanged locknuts.
2. Install M10 bolts and conical toothed washers thru frame straps into existing weld nuts in vehicle frame rails, one per side.

Tighten all 3/8 GR2 fasteners with torque wrench to 20 Lb.-Ft.

Tighten all M10 CL8.8 fasteners with torque wrench to 42 Lb.-Ft.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.