

Installation Instructions

VW Passat (Except 4Motion)

VW Passat Wagon (Except 4Motion)

VW CC

Part Numbers:
24848
60264
77221
24831 (U-HAUL)

Note: Fascia trim required (Sold separately)

Drawbar Kit:
 3594

Drawbar must be used in the **RISE** position only.

Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or

2000 LB (908 Kg) Max Gross Trailer Weight
200 LB (90.8 Kg) Max Tongue Weight

Wiring Access Location: Passat Sedan PC1, 2
 Wagon PC1,2
 CC- TBA

Hitch Shown In Proper Position

Equipment Required: Utility Knife

Fastener Kit: 24848F

Wrenches: T-20, T-25 Torx Driver®, 13mm, 11/16" and Extension Driver

Drill Bits: 1/2"

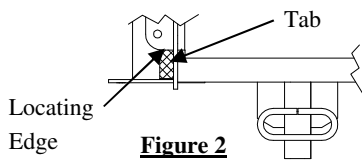


Figure 2

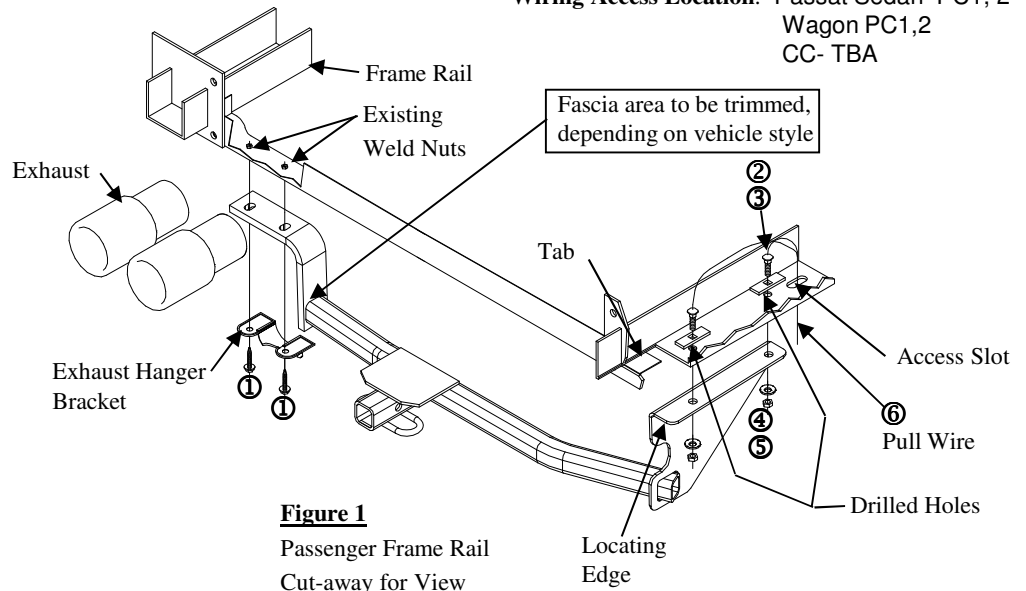


Figure 1

Passenger Frame Rail
 Cut-away for View

Fascia trim required. Obtain vehicle owners approval before cutting

①	Qty. (2)	Bolt M8 X 1.25 X 55 CL 9.8	④	Qty. (2)	Conical Washer 7/16"
②	Qty. (2)	Bolt, Carriage 7/16-14 X 1.50 GR 5	⑤	Qty. (2)	Nut 7/16-14
③	Qty. (2)	Block 1/4 X 1 X 3	⑥	Qty. (1)	Pull wire

- Remove plastic fascia covering the passenger side frame rail of the vehicle by removing the (5) Torx screws. Return plastic fascia covering and screws to vehicle owner. Remove the two plastic fascia nuts from the fascia tabs (Do not discard).
- Remove the (2) bolts from the exhaust hanger bracket as shown in Figure 1 to lower the exhaust. Return bolts to owner.
- Slide the driver's side bracket above the exhaust bracket. Note: Sandwiching the hitch bracket between frame and exhaust hanger bracket. Using the (2) M8 bolts loosely tighten the fasteners. Note: Rotate the hitch for ease of installation.
- Align the passenger bracket with the locating edge and the tab see Figure 2 (check hitch for alignment perpendicular of the vehicle making sure the bracket is flat against the frame rail). The passenger side bracket may need to be pushed flat against the frame rail. Then using the hitch as a template mark the hole locations. Drill the 1/2" holes.
 Optional: Lower the hitch to drill (2) 1/2" hole into the frame rails. Repeat step 3.
- Fishwire the passenger side fasteners through the access slot in the frame rail, through the side bracket of the hitch (rearward attachment first) and install conical washers and hex nuts.
- Trim the Fascia on the driver's side near the exhaust as needed. Obtain vehicle owners approval before cutting.
- Reattach fascia tabs

Tighten all M8 X 1.25 CL9.8 fasteners with torque wrench to 20 Lb.-Ft. (27 N*M)

Tighten all 7/16-14 Gr. 5 fasteners with torque wrench to 50 Lb.-Ft. (68 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.