



Installation Instructions

PART NUMBERS: 76028, 84028

WARNING

To prevent **SERIOUS INJURY, DEATH or PROPERTY DAMAGE:**

- **ALWAYS read, understand and follow warnings and instructions for your hitch BEFORE installation. Keep for future reference.**
- **DO NOT cut, weld or modify this receiver.**
- **CHECK all fasteners are tight and your hitch is securely mounted to your vehicle periodically.**
- **ALWAYS read, understand and follow all warnings and instructions for your vehicle and for other accessories you will use with your hitch BEFORE use.**
- **LOAD the trailer heavier in front.**
- **DO NOT exceed lower of towing vehicle manufacturer’s rating or:**

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	4500 lb. (2043 kg)	675 lb. (306 kg)
Weight Distributing	4500 lb. (2043 kg)	675 lb. (306 kg)

- **ALWAYS wear your seatbelt.**
- **SLOW DOWN when towing, NEVER exceed any posted speed limit.**
- **If EXCESS SWAY occurs, take your foot off the gas pedal and hold the steering wheel as steady as possible. DO NOT apply your brakes and DO NOT speed up.**

LIMITED LIFETIME WARRANTY

1. **Limited Lifetime Warranty (“Warranty”).** Cequent Performance Products, Inc. (“We”, “Us” or “Our”) warrants to the original consumer purchaser only (“You” or “Your”) that the product will be free from material defects in both material and workmanship, ordinary wear and tear excepted. The Warranty is valid only if (a) the products are returned to Us for inspection and testing; (b) Our inspection discloses to Our satisfaction that any alleged nonconformance are material and have not been caused by misuse, neglect, wear and tear, improper installation, unsuitable storage, improper repair, alteration, or accident; and (c) the products were installed, maintained and used in accordance with Our instructions. THE WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (OTHER THAN THE WARRANTY OF TITLE AS PROVIDED BY THE UNIFORM COMMERCIAL CODE IN EFFECT IN MICHIGAN), INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SAID WARRANTIES BEING EXPRESSLY DISCLAIMED.
2. **Obligations of Purchaser.** Any returned product that is replaced by Us becomes our property. You may be responsible for return shipping costs. Please retain your purchase receipt to verify date of purchase and that You are the original consumer purchaser. The product and the purchase receipt must be provided to Us in order to process Your Warranty claim.
3. **Exclusive Remedy.** Product replacement is Your sole and exclusive remedy under this Warranty. We shall not be liable for service or labor charges incurred in removing or replacing a product. IN NO EVENT WILL WE BE RESPONSIBLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES.
4. **Assumption of Risk.** You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.
5. **Governing Law.** This Warranty gives You specific legal rights, and You also may have other rights which vary from state to state. This Warranty is governed by the laws of the State of Michigan, without regard to rules pertaining to conflicts of law. The state courts located in Oakland County, Michigan shall have exclusive jurisdiction for any disputes relating to this Warranty.



Installation Instructions

PART NUMBERS: 76028, 84028

Applications:

Years	Make	Models
2005-Current*	Chevrolet	Equinox
2010-Current*	GMC	Terrain
2006-2009	Pontiac	Torrent
2002-2007	Saturn, Vue, Except Redline	

*Visit our website for the most up to date information regarding application years and trim levels.









Installation Time: 30 Min.

The time listed above is the average time for professional installers. If you do not feel comfortable performing this installation on your own or are in need of assistance, please contact a professional installer.




Representative Vehicle Photo

Equipment Required:

 Safety Glasses	 Ratchet	 18 mm 19 mm 3 / 4" Sockets	 Torque Wrench
 6" Socket Extension	 Saturn Vue only 3/4" Wrench	 2016 Chevrolet Equinox only Tape Measure	 Utility Knife

DO NOT EXCEED LOWER OF TOWING VEHICLE MANUFACTURER'S RATING OR:

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	4500 lb. (2043 kg)	675 lb. (306 kg)
Weight Distributing	4500 lb. (2043 kg)	675 lb. (306 kg)

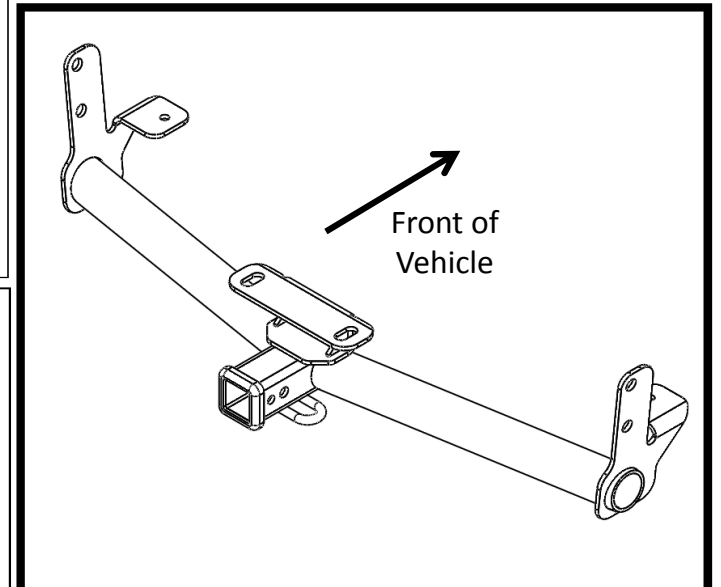

Hitch Illustration

Always wear SAFETY GLASSES when installing hitch

Installation Instructions

PART NUMBERS: 76028, 84028

Fasteners typical both sides.



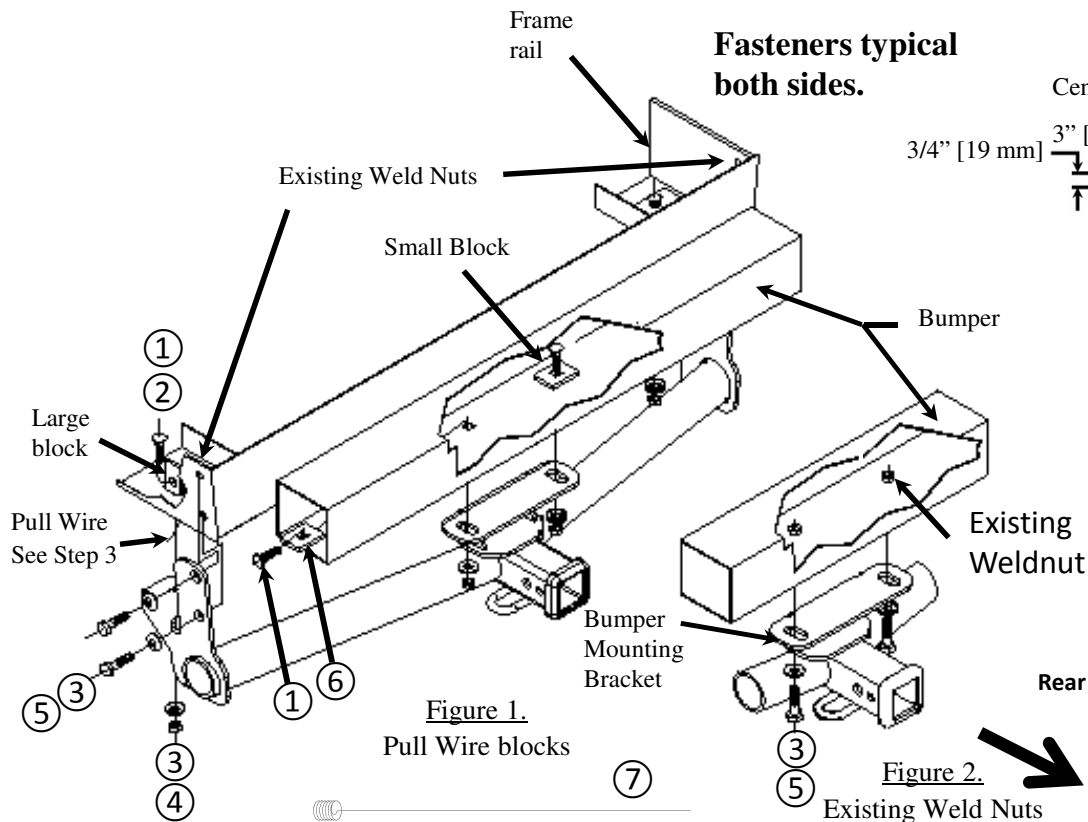


Figure 1.
Pull Wire blocks

Figure 2.
Existing Weld Nuts

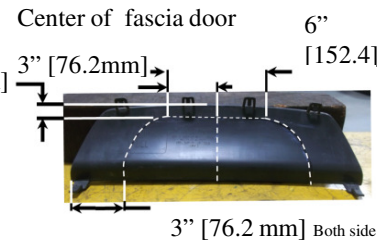

3" [76.2 mm] Both side
Figure 4.
Optional Fascia trimming for 2016 and newer Chevrolet Equinox

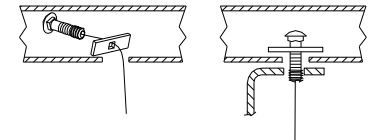

Example of pull wire procedure











Figure 3

Fastener Kit : 76028F

①	Qty. (4)	Carriage bolt ½-13 x 1.50 GR5	
②	Qty. (2)	Spacer .250 x 1.50 x3.00	
③	Qty. (8)	Conical washer ½"	
④	Qty. (4)	Hex Nut ½ -13 GR2	
⑤	Qty. (6)	Bolt M12x1.75x45 CL10.9	
⑥	Qty. (2)	Spacer .250 x 1.50 x 2.0	
⑦	Qty. (4)	Pull wire ½-13	

1. Remove the fascia door, if present.
2. Feed the carriage bolt and large block thru slots on bottom of frame rails using the pull wire, as shown [Figure 3](#)
3. Raise the hitch into position; lifting the bumper mounting bracket over the fascia (where needed). Secure with M12 bolts and conical washers into the existing weld nuts, being careful not to push the bolts into the frame, as shown [Figure 1](#).
4. Feed conical washer over pull wire, using the washer to hold the bolt in place remove the pull wires and attach the hex nut. Hand tighten all bolts.
5. **On vehicles without existing weldnuts in the bumper:** Pull carriage bolts and small blocks thru end of the bumper and feed through the bumper mounting bracket using the pull wire. Attach conical washer and nut. As shown [Figure 1](#).
5. **On vehicle with existing weldnuts in bumper:** Install the M12 bolts and conical washer through the bumper mounting bracket into the existing weld nuts in the bumper, as shown [Figure 2](#).
6. Tighten all 1/2-13 GR5 fastener with torque wrench to 75 Lb.-Ft. (102 N*M). Tighten all M12 CL10.9 fasteners with torque wrench to 92 Lb.-Ft. (125 N*M)

⚠ Proper torque is needed to keep the hitch secure to the vehicle when towing.

7. Replace the fascia door on the 2005-2015 Equinox. For 2016 and newer see [Figure 4](#) for optional trimming. (Obtain owners permission prior to trimming). For all other models return fascia door to owner.

Note: Due to different configuration of the vehicle there will be extra hardware left over.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.

1. Remove the fascia door, if present.



2. Feed the carriage bolt and large block thru slots on bottom of frame rails using the pull wire, as shown [Figure 3](#)



3. Raise the hitch into position; lifting the bumper mounting bracket over the fascia (where needed). Secure with M12 bolts and conical washers into the existing weld nuts, being careful not to push the bolts into the frame, as shown [Figure 1](#).



4. Feed conical washer over pull wire, using the washer to hold the bolt in place remove the pull wires and attach the hex nut. Hand tighten all bolts.



5. **On vehicles without existing weldnuts in the bumper:** Pull carriage bolts and small blocks thru end of the bumper and feed through the bumper mounting bracket using the pull wire.


Attach conical washer and nut. As shown Figure 1.

On vehicle with existing weldnuts in bumper: Install the M12 bolts and conical washer through the bumper mounting bracket into the existing weld nuts in the bumper, as shown Figure 2.



6. Tighten all 1/2-13 GR5 fastener with torque wrench to 75 Lb.-Ft. (102 N*M). Tighten all M12 CL10.9 fasteners with torque wrench to 92 Lb.-Ft. (125 N*M)

⚠ Proper torque is needed to keep the hitch secure to the vehicle when towing.

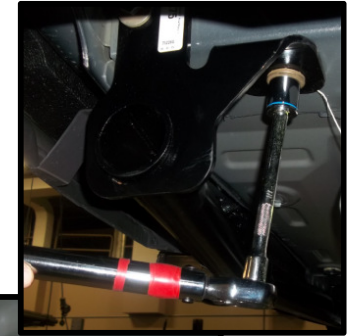

7. Replace the fascia door on the 2005-2015 Equinox. For 2016 and newer see Figure 4 for optional trimming. (Obtain owners permission prior to trimming). For all other models return fascia door to owner.
Note: Due to different configuration of the vehicle there will be extra hardware left over.

