



Installation Instructions

PART NUMBERS: 76076, 84076, CQT76076

WARNING

To prevent **SERIOUS INJURY, DEATH or PROPERTY DAMAGE:**

- **ALWAYS read, understand and follow warnings and instructions for your hitch BEFORE installation. Keep for future reference.**
- **DO NOT cut, weld or modify this receiver.**
- **CHECK all fasteners are tight and your hitch is securely mounted to your vehicle periodically.**
- **ALWAYS read, understand and follow all warnings and instructions for your vehicle and for other accessories you will use with your hitch BEFORE use.**
- **LOAD the trailer heavier in front.**
- **DO NOT exceed lower of towing vehicle manufacturer’s rating or:**

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	7700 lb. (3496 kg)	770 lb. (349 kg)
Weight Distributing	N/A	N/A

- **ALWAYS wear your seatbelt.**
- **SLOW DOWN when towing, NEVER exceed any posted speed limit.**
- **If EXCESS SWAY occurs, take your foot off the gas pedal and hold the steering wheel as steady as possible. DO NOT apply your brakes and DO NOT speed up.**

LIMITED LIFETIME WARRANTY

1. **Limited Lifetime Warranty (“Warranty”).** Cequent Performance Products, Inc. (“We”, “Us” or “Our”) warrants to the original consumer purchaser only (“You” or “Your”) that the product will be free from material defects in both material and workmanship, ordinary wear and tear excepted. The Warranty is valid only if (a) the products are returned to Us for inspection and testing; (b) Our inspection discloses to Our satisfaction that any alleged nonconformance are material and have not been caused by misuse, neglect, wear and tear, improper installation, unsuitable storage, improper repair, alteration, or accident; and (c) the products were installed, maintained and used in accordance with Our instructions. **THE WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (OTHER THAN THE WARRANTY OF TITLE AS PROVIDED BY THE UNIFORM COMMERCIAL CODE IN EFFECT IN MICHIGAN), INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SAID WARRANTIES BEING EXPRESSLY DISCLAIMED.**
2. **Obligations of Purchaser.** Any returned product that is replaced by Us becomes our property. You may be responsible for return shipping costs. Please retain your purchase receipt to verify date of purchase and that You are the original consumer purchaser. The product and the purchase receipt must be provided to Us in order to process Your Warranty claim.
3. **Exclusive Remedy.** Product replacement is Your sole and exclusive remedy under this Warranty. We shall not be liable for service or labor charges incurred in removing or replacing a product. **IN NO EVENT WILL WE BE RESPONSIBLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES.**
4. **Assumption of Risk.** You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.
5. **Governing Law.** This Warranty gives You specific legal rights, and You also may have other rights which vary from state to state. This Warranty is governed by the laws of the State of Michigan, without regard to rules pertaining to conflicts of law. The state courts located in Oakland County, Michigan shall have exclusive jurisdiction for any disputes relating to this Warranty.



Installation Instructions

**PART NUMBERS: 76076, 84076,
CQT76076**

Applications:

Years	Make	Models
2017-Current*	Audi	Q7

*Visit our website for the most up to date information regarding application years and trim levels.









Installation Time: 60 min.

The time listed above is the average time for professional installers. If you do not feel comfortable performing this installation on your own or are in need of assistance, please contact a professional installer.




Representative Vehicle Photo

Equipment Required:

 Safety Glasses	 Ratchet	 T25 Torx 18MM Sockets	 Torque Wrench
 Plastic Trim Tools	 Flat Head Screw Driver	 6" Socket Extension	 Tin Snips

**DO NOT EXCEED LOWER OF TOWING VEHICLE
MANUFACTURER'S RATING OR:**

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	7700 lb. (3496 kg)	770 lb. (349 kg)
Weight Distributing	N/A	N/A

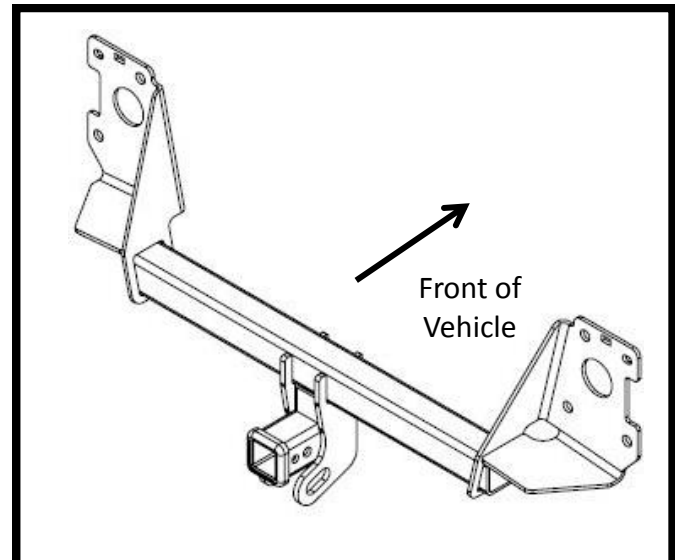

Hitch Illustration

**Always wear SAFETY GLASSES
when installing hitch**

Installation Instructions

PART NUMBERS: 76076, 84076, CQT76076

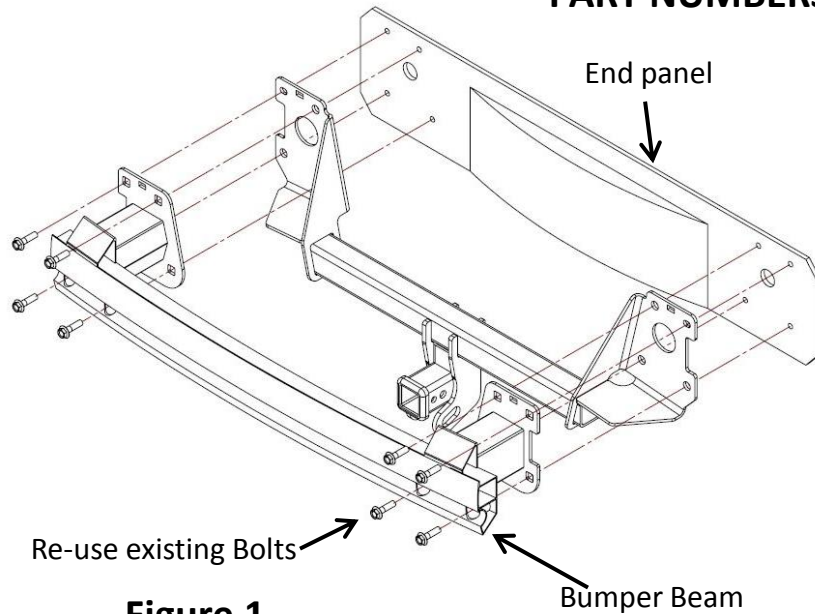


Figure 1



Figure 2

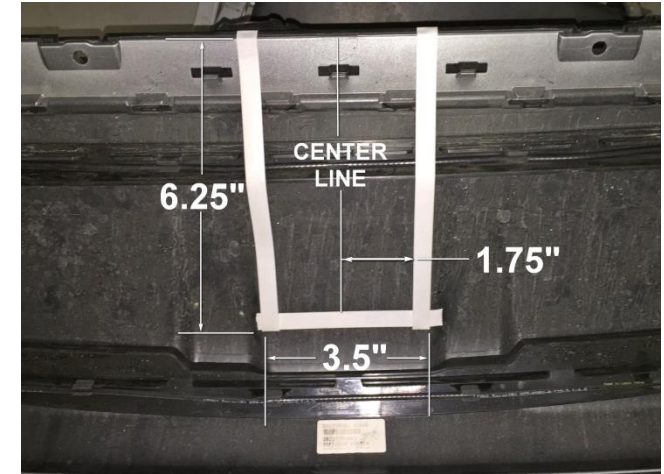


Figure 3

Remove bumper fascia and bumper beam.

1. Remove screws using T25 Torx bit – Remove (4) screws exposed at wheel well liner. Pull back wheel liner to expose an additional (1) screw for removal. Remove (2) screws from the bottom of each wheel well liner. Remove (4) screws from the middle underside area of the fascia. Do the same on both sides of vehicle.
2. Gently pry/pull off the body trim piece at the upper wheel well to expose (2) screws to be removed, using T25 Torx bit. Note: Plastic body panel removal tools suggested to ease removal.
3. Gently pull off vehicle bumper fascia. Note: Plastic body panel removal tools suggested to ease removal. You will need to disconnect/unplug all electric connectors from sensors and lights attached to the bumper fascia and unclip the wiring from the bumper fascia to remove it from the vehicle. Set the bumper fascia aside.
4. Remove the bumper beam by removing (4) bolts each side with an 18mm socket.

Install hitch.

1. Raise hitch and bumper beam into position aligning holes with weldnuts in the vehicle end panel. Sandwich the hitch between the bumper beam and the end panel. Re-use existing bolts. See Figure 1.
2. **Tighten all hitch fasteners with torque wrench to 68 Lb.-Ft. (92 N*M)**

⚠ Proper torque is needed to keep the hitch secure to the vehicle when towing.

Trim and reinstall vehicle fascia.

1. Unclip the sensor antenna wire from the vehicle forward edge of the inside of the bumper fascia to move it out of the trim area. Figure 2
2. Trim fascia as shown in Figure 3.
3. Reinstall fascia in reverse order of steps 1-3.
4. Once bumper fascia is in place, re-attach the sensor antenna wire.


Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.


Remove screws using T25 Torx bit – Remove (4) screws exposed at wheel well liner. Pull back wheel liner to expose an additional (1) screw for removal.



Remove (2) screws from the bottom of each wheel well liner. Remove (4) screws from the middle underside area of the fascia. Do the same on both sides of vehicle.

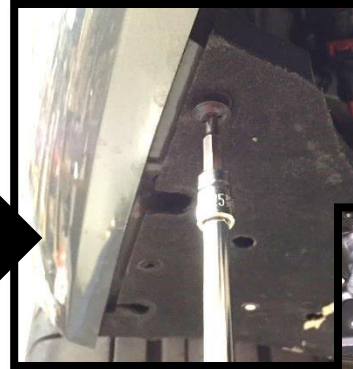

Gently pry/pull off the body trim piece at the upper wheel well to expose (2) screws to be removed, using T25 Torx bit. Note: Plastic body panel removal tools suggested to ease removal.

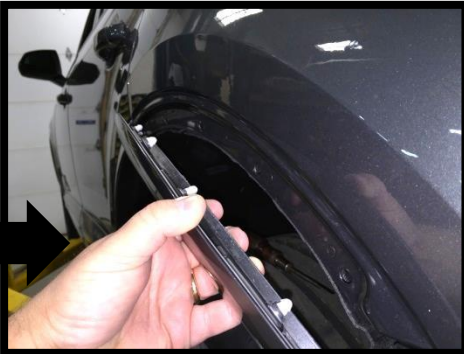

Gently pull off vehicle bumper fascia. Note: Plastic body panel removal tools suggested to ease removal. You will need to disconnect/unplug all electric connectors from sensors and lights attached to the bumper fascia and unclip the wiring from the bumper fascia to remove it from the vehicle. Set the bumper fascia aside.



Remove the bumper beam by removing (4) bolts each side with an 18mm socket.



Raise hitch and bumper beam into position aligning holes with weldnuts in the vehicle end panel. Sandwich the hitch between the bumper beam and the end panel. Re-use existing bolts. See Figure 1.




Tighten all hitch fasteners with torque wrench to 68 Lb.-Ft. (92 N*M)

⚠ Proper torque is needed to keep the hitch secure to the vehicle when towing.



Unclip the sensor antenna wire from the vehicle forward edge of the inside of the bumper fascia to move it out of the trim area. Figure 2

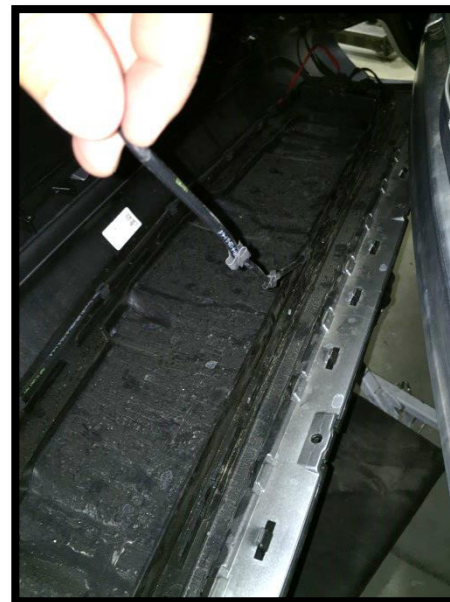

Trim fascia as shown in Figure 3.



Reinstall fascia in reverse order of steps 1-3.

Once bumper fascia is in place, re-attach the sensor antenna wire.

