



Installation Instructions

PART NUMBERS: 76080, 84080, CQT76080

⚠ WARNING

To prevent **SERIOUS INJURY, DEATH or PROPERTY DAMAGE:**

- **ALWAYS read, understand and follow warnings and instructions for your hitch BEFORE installation. Keep for future reference.**
- **DO NOT cut, weld or modify this receiver.**
- **CHECK all fasteners are tight and your hitch is securely mounted to your vehicle periodically.**
- **ALWAYS read, understand and follow all warnings and instructions for your vehicle and for other accessories you will use with your hitch BEFORE use.**
- **LOAD the trailer heavier in front.**
- **DO NOT exceed lower of towing vehicle manufacturer’s rating or:**

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	4500 lb. (2043 Kg)	675 lb. (306kg)
Weight Distributing	N/A	N/A

- **ALWAYS wear your seatbelt.**
- **SLOW DOWN when towing, NEVER exceed any posted speed limit.**
- **If EXCESS SWAY occurs, take your foot off the gas pedal and hold the steering wheel as steady as possible. DO NOT apply your brakes and DO NOT speed up.**

LIMITED LIFETIME WARRANTY

1. **Limited Lifetime Warranty (“Warranty”).** Cequent Performance Products, Inc. (“We”, “Us” or “Our”) warrants to the original consumer purchaser only (“You” or “Your”) that the product will be free from material defects in both material and workmanship, ordinary wear and tear excepted. The Warranty is valid only if (a) the products are returned to Us for inspection and testing; (b) Our inspection discloses to Our satisfaction that any alleged nonconformance are material and have not been caused by misuse, neglect, wear and tear, improper installation, unsuitable storage, improper repair, alteration, or accident; and (c) the products were installed, maintained and used in accordance with Our instructions. **THE WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (OTHER THAN THE WARRANTY OF TITLE AS PROVIDED BY THE UNIFORM COMMERCIAL CODE IN EFFECT IN MICHIGAN), INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SAID WARRANTIES BEING EXPRESSLY DISCLAIMED.**
2. **Obligations of Purchaser.** Any returned product that is replaced by Us becomes our property. You may be responsible for return shipping costs. Please retain your purchase receipt to verify date of purchase and that You are the original consumer purchaser. The product and the purchase receipt must be provided to Us in order to process Your Warranty claim.
3. **Exclusive Remedy.** Product replacement is Your sole and exclusive remedy under this Warranty. We shall not be liable for service or labor charges incurred in removing or replacing a product. **IN NO EVENT WILL WE BE RESPONSIBLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES.**
4. **Assumption of Risk.** You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.
5. **Governing Law.** This Warranty gives You specific legal rights, and You also may have other rights which vary from state to state. This Warranty is governed by the laws of the State of Michigan, without regard to rules pertaining to conflicts of law. The state courts located in Oakland County, Michigan shall have exclusive jurisdiction for any disputes relating to this Warranty.



Installation Instructions

PART NUMBERS: 76080, 84080, CQT76080

Applications:

Years	Make	Models
2016-Current*	Buick	Envision

*Visit our website for the most up to date information regarding application years and trim levels.









Installation Time: 45 min.

The time listed above is the average time for professional installers. If you do not feel comfortable performing this installation on your own or are in need of assistance, please contact a professional installer.




Representative Vehicle Photo

Equipment Required:

 Safety Glasses	 Ratchet	 T25 Torx 18MM Sockets	 Torque Wrench
 Plastic Trim Tools	 Flat Head Screw Driver	 6" Socket Extension	 Tin Snips

DO NOT EXCEED LOWER OF TOWING VEHICLE MANUFACTURER'S RATING OR:

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight
Weight Carrying	4500 lb. (2043 Kg)	675 lb. (306kg)
Weight Distributing	N/A	N/A

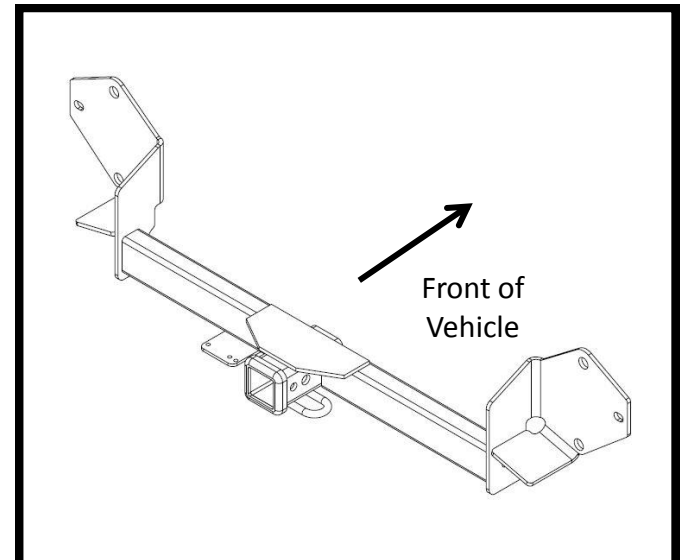

Hitch Illustration



Always wear **SAFETY GLASSES** when installing hitch

Installation Instructions

PART NUMBERS: 76080, 84080, CQT76080

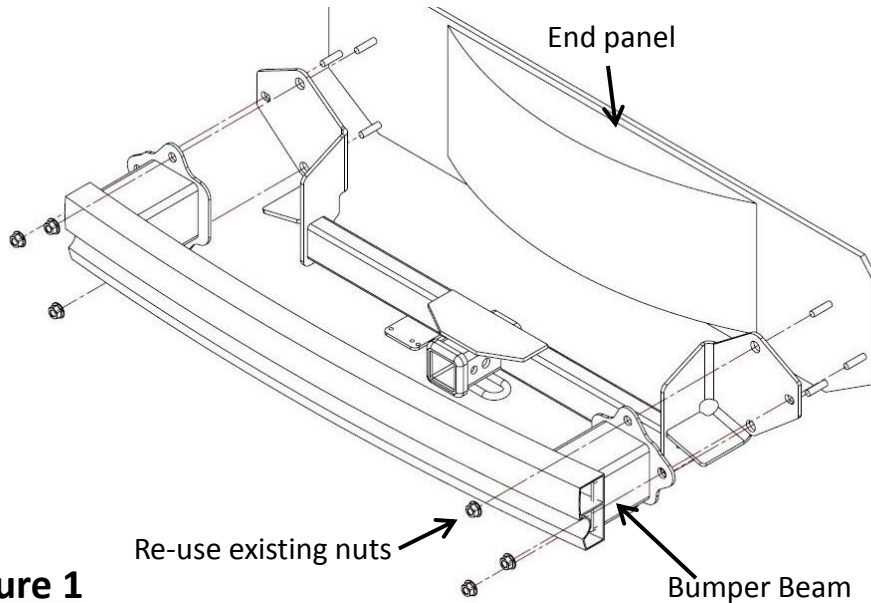


Figure 1



Figure 2



Figure 3

Remove bumper fascia, taillights, and bumper beam.

1. Remove screws using T15 Torx bit – Remove (3) screws exposed at wheel well liner. Remove (2) screws from the middle underside area of the fascia. Do the same on both sides of vehicle.
2. Gently pry/pull off the body trim piece at the upper wheel well (Figure 2) to expose (1) screws to be removed, using 7mm socket. Note: Plastic body panel removal tools suggested to ease removal.
3. Open the liftgate, remove (2) phillips screws from fascia one each side. Remove taillights, pry off screw covers to expose T15 screws, (2) each side. Pull taillights gently rearward to release, unplug and set aside.
4. Gently pull off vehicle bumper fascia. Note: Plastic body panel removal tools suggested to ease removal. You will need to disconnect/unplug the electric connector on the passenger side. Set the bumper fascia aside.
5. Remove the bumper beam by removing (3) nuts each side with a 15mm socket.

Install hitch.

1. Raise hitch and bumper beam into position aligning holes with studs in the vehicle end panel. Sandwich the hitch between the bumper beam and the end panel. Re-use existing nuts. See Figure 1.
2. **Tighten all hitch fasteners with torque wrench to 38 Lb.-Ft. (52 N*M)**



Proper torque is needed to keep the hitch secure to the vehicle when towing.

Reinstall vehicle fascia.

1. Reinstall fascia and taillights in reverse order of steps 1-4
2. May need to use provided cable ties to attach fascia to (2) bottom attachments. (FIGURE 3)
3. Vehicle fascia has a removable panel for hitch usage. Panel may be replaced when hitch is not in use.


Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.

Remove screws using T15 Torx bit – Remove (3) screws exposed at wheel well liner. Remove (2) screws from the middle underside area of the fascia. Do the same on both sides of vehicle.



Gently pry/pull off the body trim piece at the upper wheel well (Figure 2) to expose (1) screws to be removed, using 7mm socket. Note: Plastic body panel removal tools suggested to ease removal.

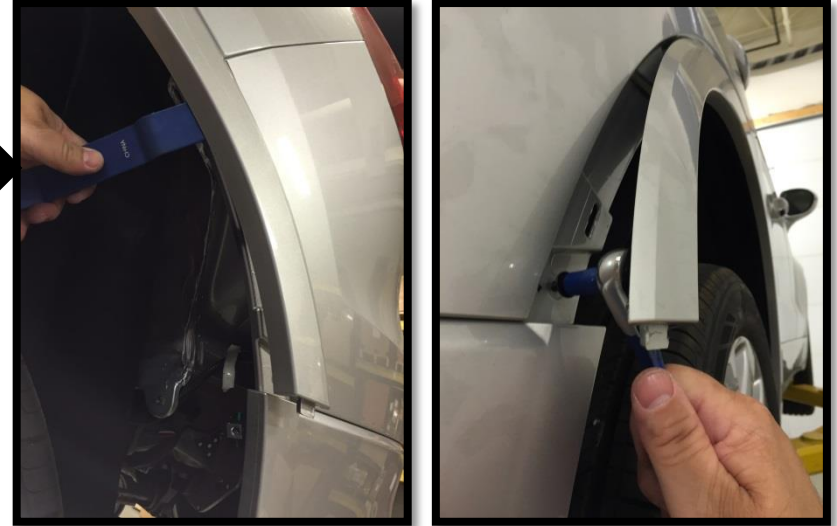


Open the liftgate, remove (2) phillips screws from fascia one each side.




Remove taillights, pry off screw covers to expose T15 screws, (2) each side. Pull taillights gently rearward to release, unplug and set aside.



Gently pull off vehicle bumper fascia. Note: Plastic body panel removal tools suggested to ease removal. You will need to disconnect/unplug the electric connector on the passenger side. Set the bumper fascia aside.

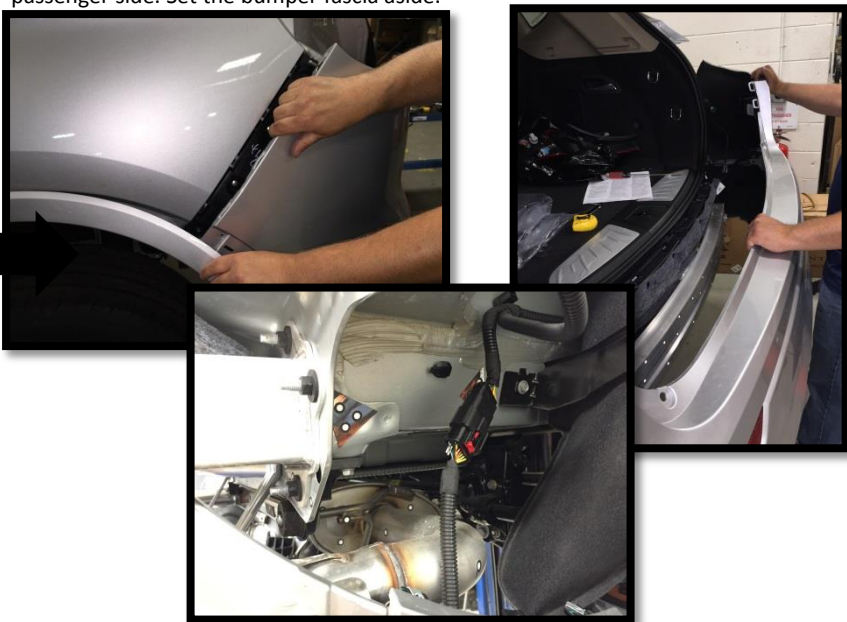

Remove the bumper beam by removing (3) nuts each side with a 15mm socket.

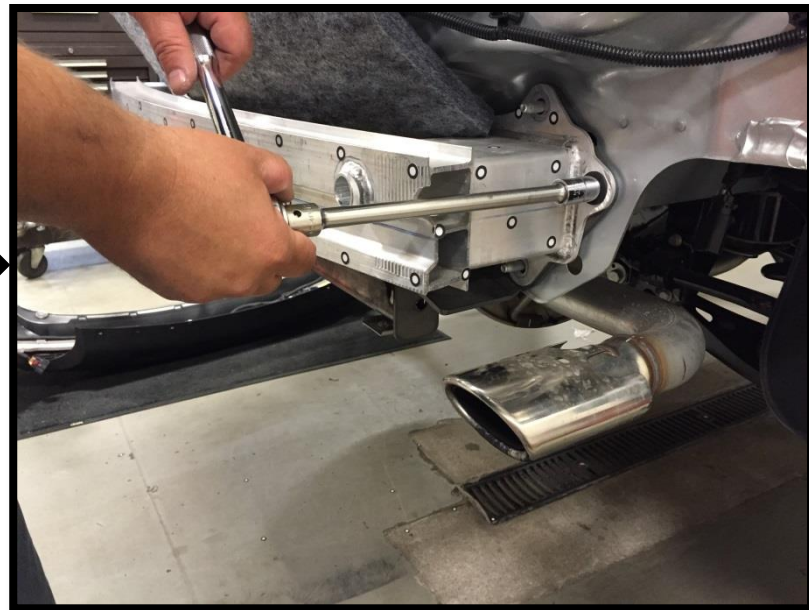

Raise hitch and bumper beam into position aligning holes with studs in the vehicle end panel. Sandwich the hitch between the bumper beam and the end panel. Re-use existing nuts. See Figure 1.



Tighten all hitch fasteners with torque wrench to 38 Lb.-Ft. (52 N*M)


⚠ Proper torque is needed to keep the hitch secure to the vehicle when towing.



Reinstall fascia and taillights in reverse order of steps 1-4



May need to use provided cable ties to attach fascia to (2) bottom attachments. (FIGURE 3)

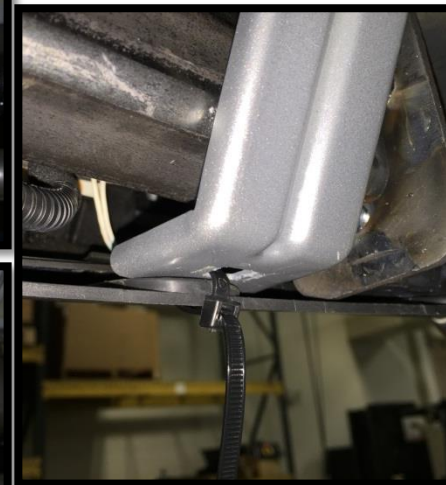

Vehicle fascia has removable panel for hitch usage. Panel may be replaced when hitch is not in use.

