

# Installation Instructions

## T-Connector




Pathfinder

Xterra


Frontier

### READ THIS FIRST:


Read and follow all instructions carefully before beginning installation.

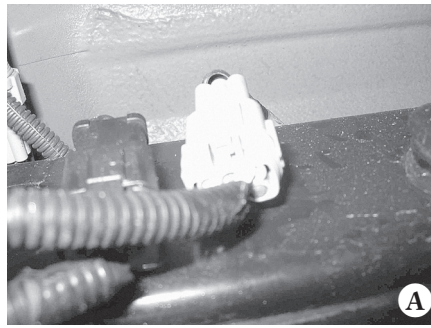


Pathfinder

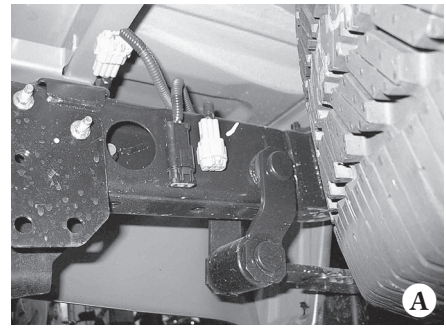

Frontier

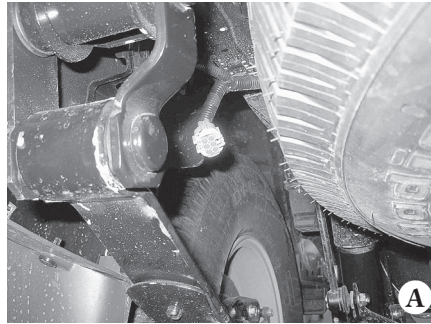

Xterra

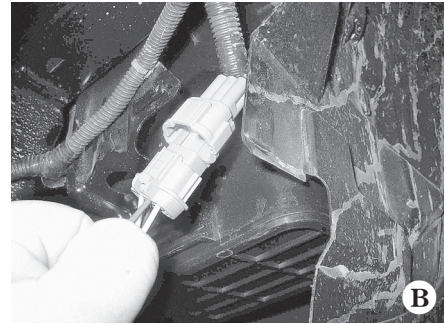

B

## ENGLISH

- From underneath the vehicle, locate the T-connector harness. Locate the vehicle tow plugs, located near the driver's side rear tire. **A**.
- Tow Plug Replacement**
  - Remove the original OEM wiring harness from connector **B**. All connector surfaces should be clean and free of dirt.

**New Installation**

  - Remove the protective cap from connector. All connector surfaces should be clean and free of dirt.
- Connect the T-Connector end to the vehicle's mating connector. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
- Nissan Xterra without Tow Package**
  - Taillight function on the tow plug will not work unless an OEM relay harness (not included) is purchased. See Nissan Dealer for more information.
- Plug the 7-way socket (provided) into the Trailer Tow Harness. Route 7-Way to the center of vehicle. Mount the 7-Way end in an accessible location with a bracket or electrical box (not included). Secure the remainder of the T-connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would cut or pinch the wire.

### ⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.



### ⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of vehicle manufacturer rating or:

- Max. stop/turn light: (10 amps)
- Max. tail lights: (10 amps)
- Max. backup: (10 amps)
- Max. power circuit: (20 amps)
- Max. trailer brakes: 3 Axles/6 brakes (18 amps)

Read vehicle's owners manual & instruction sheet for additional information.