



Ford F-150

2015+ Sport Mud Guards

Installation Instructions★

★ Professional installation is recommended

CONTENTS: Front &/or Rear F-150 REGEN MUD GUARDS+ HARDWARE

FRONT HARDWARE:

2-Clamp Brackets
4-1/4-20 Bolts
8-Washers
4-Locknuts
4-1/4-20 U-Clips

REAR HARDWARE:

2-Clamp Brackets
4-1/4-20 Bolts
8-Washers
4-Locknuts
2-1/4-20 U-Clips

TOOLS NEEDED:

-Ratchet w/ 7/16" & 7/32"
socket or **Open End
Wrenches**
-Pliers and/or **Slotted
Screw Driver**



Before beginning installation:

1. Read through assembly procedure before starting installation
2. Have necessary tools for installation
3. Make sure location for installation is clean and flat
4. Use of safety glasses & gloves is recommended
5. Verify contents of hardware packages from lists above

Front Installation

1. Turn front wheels to facilitate installation of Mud Guard and Fasteners
2. Remove factory screws (using 7/32" socket or wrench) from bottom fender well lip to expose factory mounting holes using pliers and/or slotted screw driver.
3. Pull away plastic trim & place provided U Clips over factory holes in 2 locations along bottom of fender well lip. (Photo 1) NOTE: VEHICLES WITH FENDER FLARES REQUIRE HOLES DRILLED FOR PROPER FASTENING (Photo 2)
4. Place flap on to fender well making sure bottom holes in flap align with U Clips in factory locations.
5. Fasten w/ 1/4-20 bolts and washers.
6. Next, with bottom of flap fastened loosely, pull top of flap away from fender well and place clamp bracket on fender well lip to align 2 top holes in flap with 2 studs on clamp bracket. Once aligned place fender washers and locknuts onto studs and tighten to allow bracket to clamp onto lip. (Photo 3 & 4)
7. Adjust alignment of flap and tighten all fasteners.

REPEAT ABOVE STEPS ON OPPOSITE SIDE


Rear Installation

1. Remove factory push clips (plastic) from bottom fender well lip with pliers and/or slotted screwdriver.
2. Pull away plastic trim & place provided U Clips over factory holes in 2 locations along bottom of fender well lip. (Photo 1) NOTE: VEHICLES WITH FENDER FLARES REQUIRE HOLES DRILLED FOR PROPER FASTENING (Photo 2)
3. Place flap on to fender well making sure bottom holes in flap align with U Clips in factory locations.
4. Fasten with ¼-20 bolts and washers.
5. Next, with bottom of flap fastened loosely, pull top of flap away from fender well and place clamp bracket on fender well lip to align 2 top holes in flap with 2 studs on clamp bracket. Once aligned place fender washers and locknuts onto studs and tighten to allow bracket to clamp onto lip. (Photo 3 & 4)
6. Adjust alignment of flap and tighten all fasteners.

REPEAT ABOVE STEPS ON OPPOSITE SIDE



WITHOUT FENDER FLARE

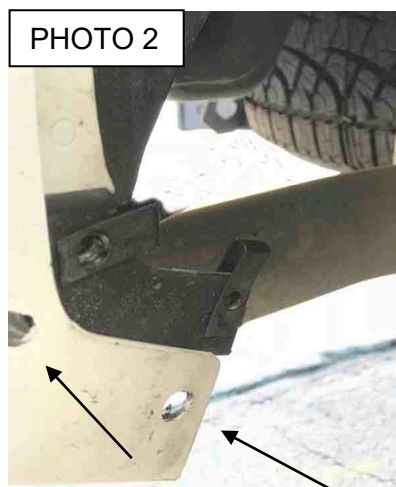

WITH FENDER FLARE

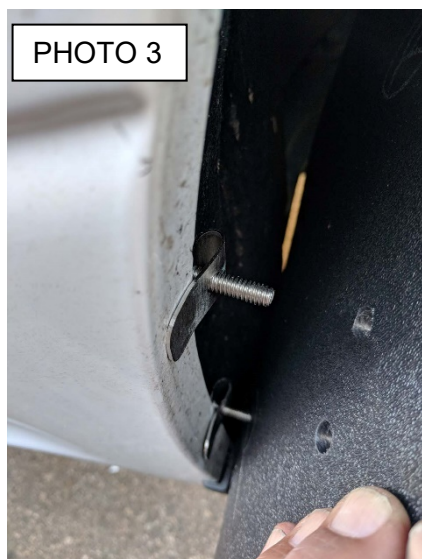


PHOTO 3



PHOTO 4