


Aluminum Blower Motor Assembly Cover

911

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (8) #10/32x1/2" S/S Button Head Screw - MC92949A265
- (8) #10/32 S/S Nuts - MC91831A41 1
- (8) S/S #10 Washers - MC92141A011
- (1) Aluminum Blower Motor Assembly Cover

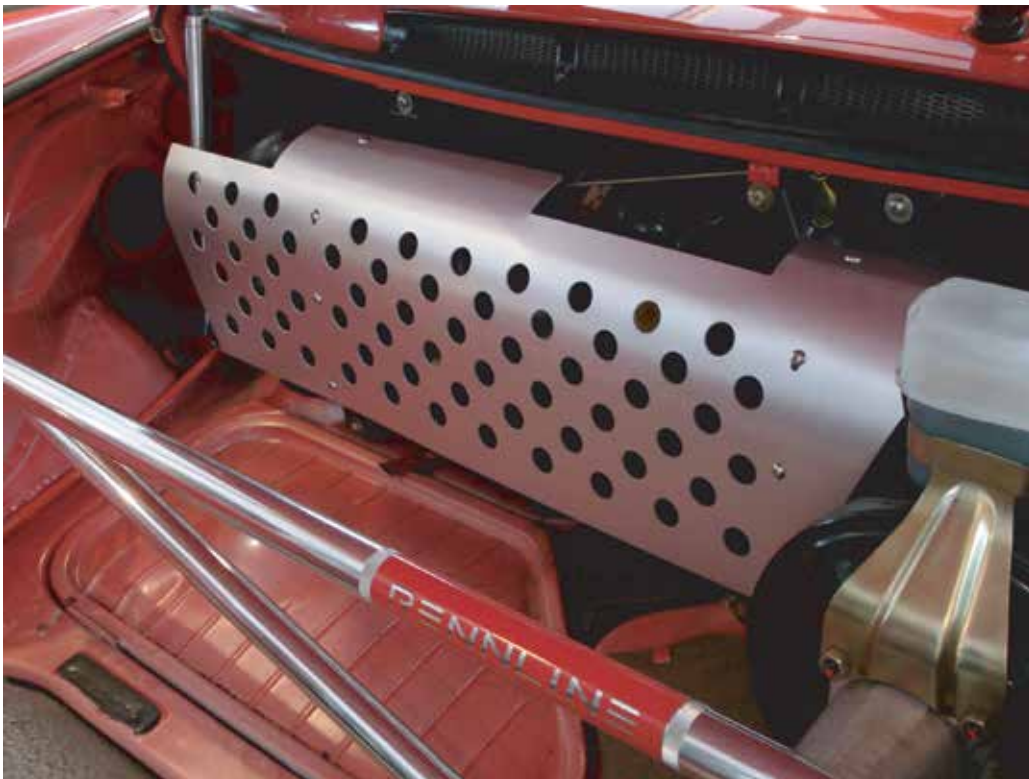

- Step 1 - Remove the factory unit from car.
- Step 2 - Drill out the (8) rivets and remove the (2) U-shaped brackets.
- Step 3 - Attach the Rennline cover to the factory U- shaped brackets using the supplied (8) button head screws and nuts.
- Step 4 - Reinstall unit into car using the factory hardware.