

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.


INSTALLATION INSTRUCTIONS Radio/Heater Control Block Off Plate Porsche 964/993

1. Radio or heater controls must be removed from car.
2. Slide block off/switch plate into component hole.
3. Install the (2) backer plates as shown in drawing using the supplied 10/32 nuts and washers.
4. Install switches if applicable.

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (1) Block off plate
- (2) Backer plates
- (2) S/S #10 Washers - MC92141A011
- (2) S/S Nyloc Nut 10/32 - MC90101A225

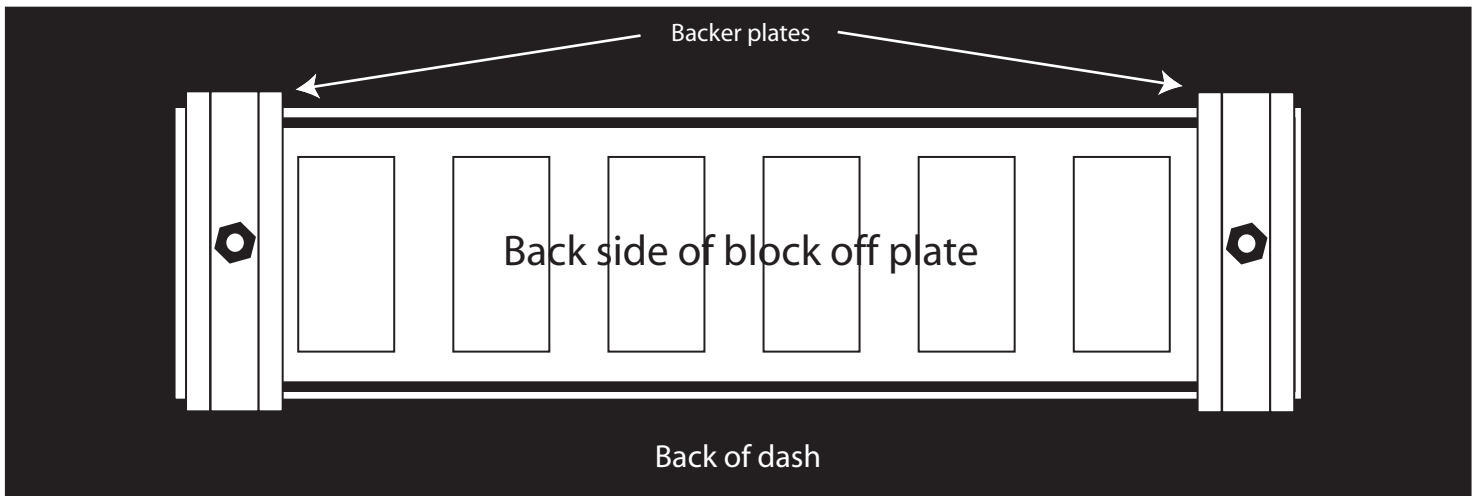

P/N I20, I21

Check out an excellent selection of interior parts on our website.