

READ BEFORE INSTALLATION


The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

INSTALLATION INSTRUCTIONS FOR THROTTLE EXTENSIONS

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (2) 10-32 x 1/4" S/S Oval Screw - MC92949A261
- (1) (Heel Kit) Throttle Extension
- (1) Backer Plate

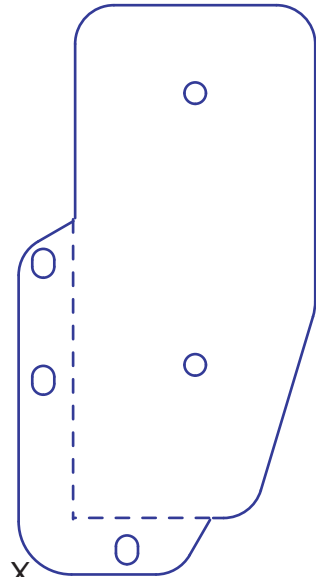

Step 1

A. Attach throttle extensions to the backer plate using the supplied #10-32 X 1/4" S/S screws. Note: Only the top and bottom holes will be used. The center will be left empty.



Step 2

A. Install the assembled throttle extension unit between your Rennline rubber grip throttle cover and your factory plastic pedal. Install using the hardware supplied in your pedal cover kit.

