


## 2 Point Strut Brace

911/930 (1966-89)

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

**Parts List:**

- (2) SB60 Brackets
- (1) FK EM8 Rod End
  - (1) 1/2"-20 Jam Nut MC94846A525
- (1) FK EML8 Rod End
  - (1) 1/2"-20 Jam Nut MC99612A133
- (2) 1/2"-13 x 1.25" SS Button Head Screw MC 92949A714
- (2) 1/2"-13 SS Nut MC 94805A125
- (2) 1/2" SS Washer 98017A209

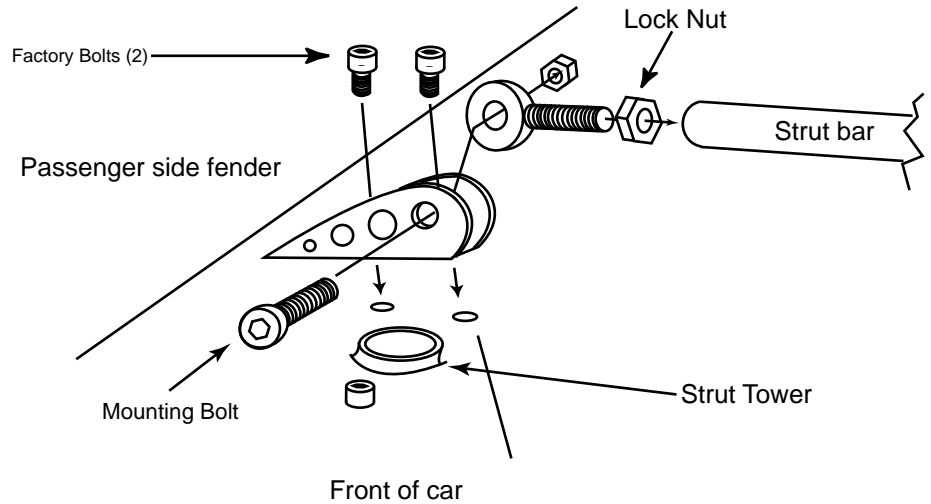

- 1) Remove the (2) rear factory bolts on both sides of the car as shown above.
- 2) Install brackets and bar as shown and tighten mounting bolts. If you are installing this unit into a car with carpet, you must make cuts into carpet prior to installing bar (see photo) Note: All left handed treads are marked in red.
- 3) Mount strut brace into car using the factory bolts removed in step 1 and tighten to factory specification. Note: Bar length is adjusted by holding the brackets stationary and rotating the bar.
- 4) Once strut brace is installed, turn bar (in the direct that shortens the bar) until you feel restriction and tighten lock nuts.

