


READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

INSTALLATION INSTRUCTIONS FOR "FULL RACE" TRACK MAT
Fits 1989-98 Porsche C2/C4/993 (Passenger Side)

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (1) Track Mat
- (1) Mounting Bumper Kits (Detail A) -
 - (1) Rubber Bumper MC8884T25
 - (1) 6mm S/S Jam Nut - MC93935A335
 - (1) 6mm x 20mm Button Head S/S Screw MC91239A326
 - (2) Stainless Steel Embossed Washers
- (2) 6MM Nutcerts - MC95105A183
- (2) Stainless Steel Embossed Washer
- (2) 6mm x 12mm Button Head S/S Screw MC91239A318
- (1) NutCert tool - T05
- (1) NutCert installation bolt M6x18mm - MC91280A328

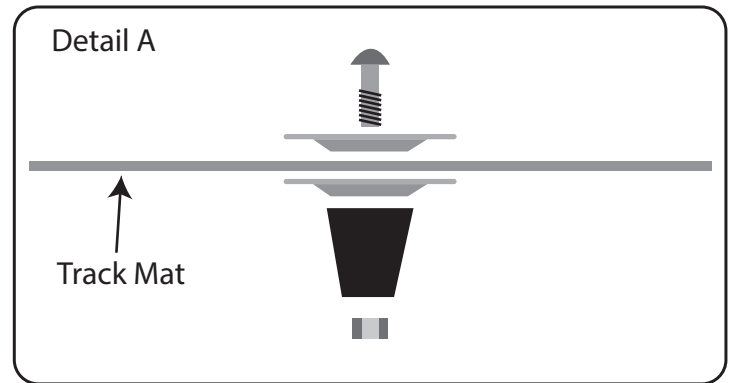

Attach rubber bumper to the mounting hole closest to the center tunnel of the car using the supplied M6 machine screw and (2)embossed washers. Note: The Track Mat goes between the 2 washers, both have the ebossed area facing down.



Install Track Mat into car and drill 3/8" holes into frame rail in the center of the Track Mat mounting holes.



Remove track mat and use supplied riv nut tool to install the riv nuts and then install the embossed washers using he supplied M6 Hardware.