

**Aluminum Skid Plate**


Mini - R50, R52, R53  
W/Manual Transmission

**READ BEFORE INSTALLATION**

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation.  
If anything is missing contact us immediately.

- (1) Skid Plate
- (4) M10 X 16 MC91280A622 HEX BOLT
- (4) M10 WASHERS MC91166A280

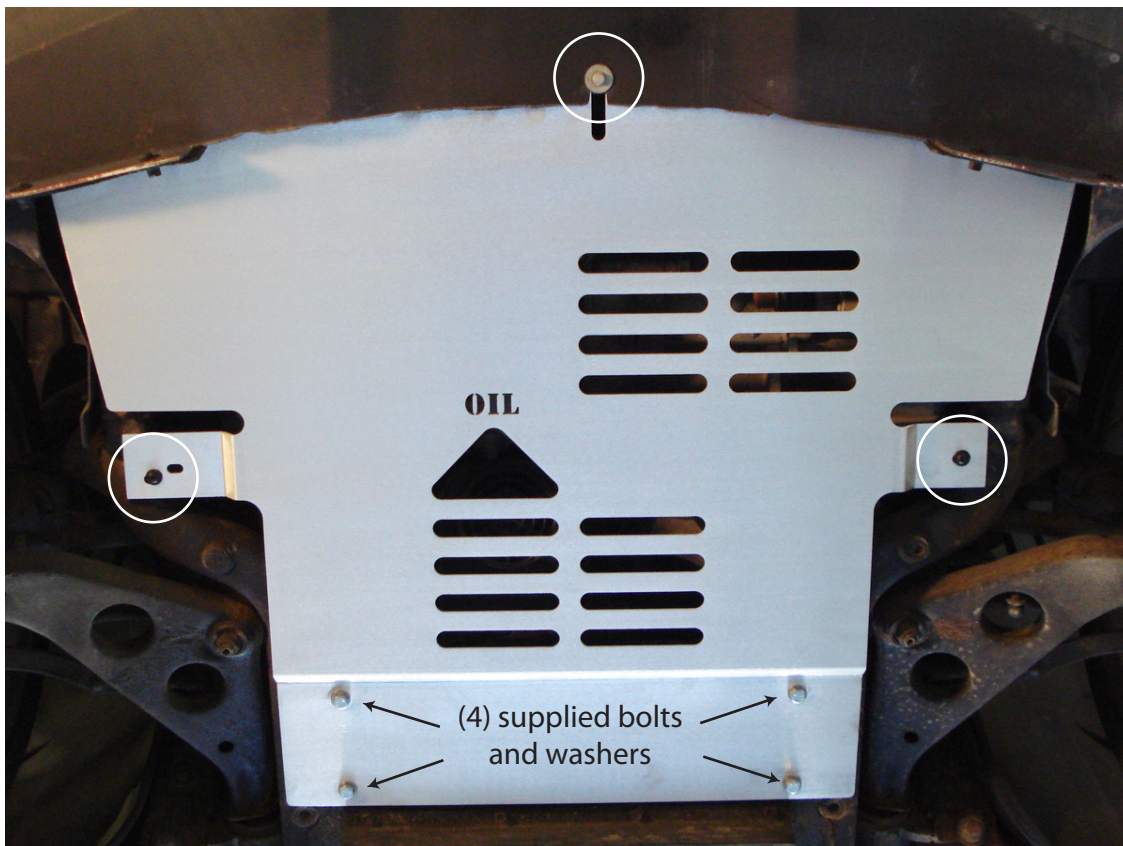

Remove the factory plastic splash guard and install the aluminum unit using the (3) factory screws circled and the (4) supplied bolts and washers.