

Aluminum Skid Plate

Mini - R55, R56, R57

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (1) Skid Plate
- (2) Rubber Bumpers P/N -MC93945K33
- (2) 1/4-20 nuts P/N- MC95462A029
- (2) Mounting Brackets with 1/4-20 cage nuts
- (2) M12 x 90 bolts P/N MC91280A737
- (4) M12 washers P/N MC91166A290
- (2) M12 nuts P/N MC90591A181
- (2) Spacers P/N - SB67-C12
- (2) 1/4-20 x .875 S/S Button head screws P/N MC92949A541
- (2) 1/4-20 x .375 S/S Button head screws P/N MC92949A535
- (8) 1/4" S/S washers - MC92141A029




Step 1 - Remove the (2) plastic covers as shown above. These will not be reused.



Step 2 - Remove the (2) Subframe bolts on each side of the car and install the skid plate brackets as shown above. Note: Work on one side of the car at a time.



Step 3 - Install the (2) rubber standoffs as shown above. Using the supplied nuts and washer.

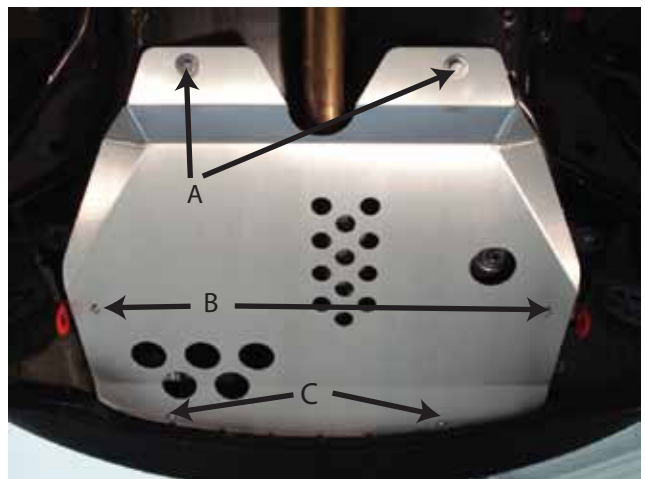

Step 4 - Install the skid plate as shown. (A) M12 bolts, Washers and Spacers. (B) 7/8" button head screws and washers (C) 3/8" button head screws and washers.