



Retro USA Inc.

## CA1HV Installation Instructions


**Read All Instructions Carefully Before Starting Installation!**

### Pre-Installation

- 1.) Inspect product for damages that might have been caused by shipping before installing on vehicle. Retro USA Inc. will not accept damaged returns that have been installed on the vehicle.
- 2.) Test fit all parts on the vehicle prior to installation.
- 3.) Do not remove any red tape linings before installation. These will be removed during the installation process.
- 4.) **Important:** Prepare vehicle for installation by cleaning all adhesion surfaces. Vehicle surface must be clean and dry for proper adhesion. Use isopropyl alcohol and a cloth to remove existing wax and dirt residue.



### Installation Tip

- To make the red lining tabs easily accessible during installation, fold the tabs back 45° in the direction that they will be pulled. It may be necessary to slightly lift the part during installation so that the linings pull off easily and do not tear.
- Install products in a cool shaded area. Make sure that vehicle surface is cool and clean before installing any products.
- Tape can take up to 72 hrs to fully cure and attain 100% adhesion. For maximum adhesion to vehicle do not pressure wash around products, use excessive force on products, or expose products to extreme heat or cold for up to 72 hrs after installation.

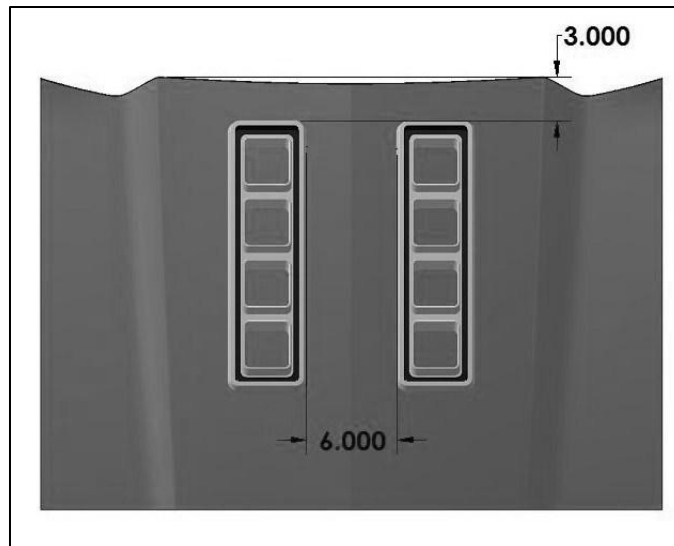


### Hood Vent Installation

- 1.) Begin installation by masking off the vehicle hood to help properly align the vents. Use the diagram above to aid in masking off the hood. See picture below for an example of how the vehicle hood can be masked off.
- 2.) Once the hood is masked off, remove the tape lining from the rear of the vents as shown below. The rear of the vents is the end without the drain holes.

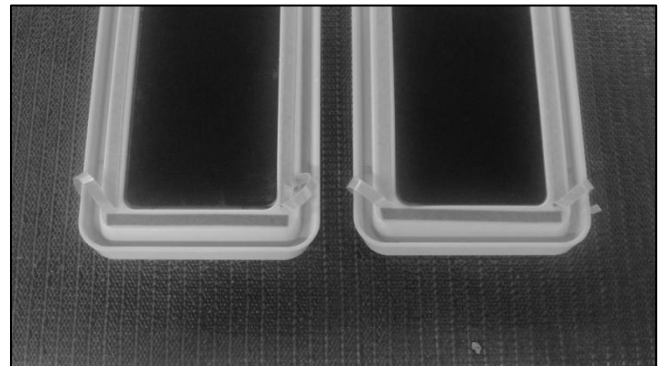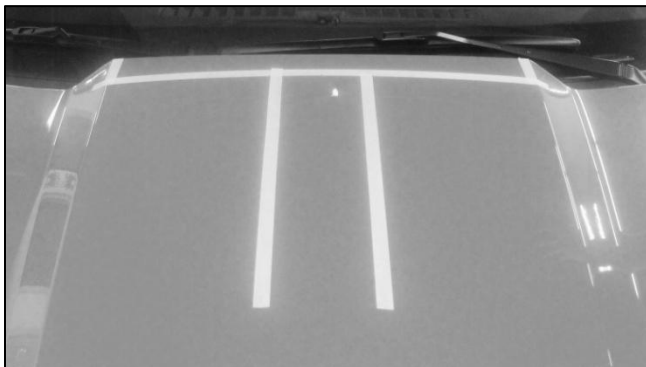


- 3.) Align one of the vents on the vehicle hood using the masking tape that you laid out on the hood as shown below. Be sure all three remaining tabs are exposed.


**Note: Both vents will work on either side of the vehicle.**

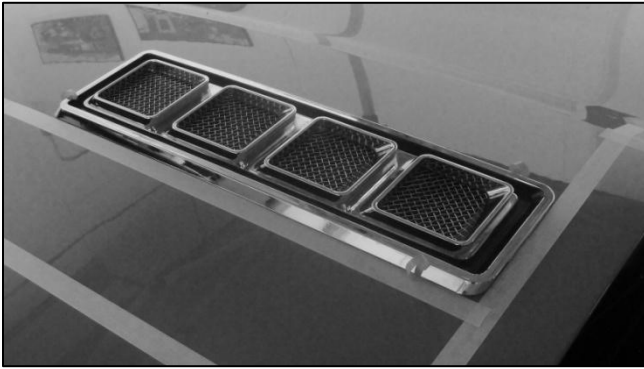


- 4.) Once the vent is properly aligned press down firmly on the vent where the lining has been removed as shown below. Apply the pressure to the painted black surface. This is the surface directly above the tape.

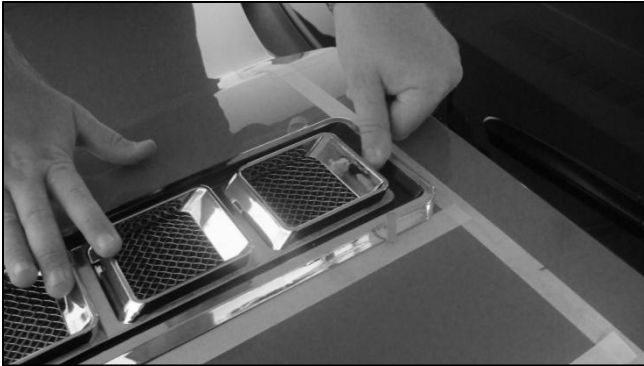

- 5.) Pull the inside tab toward the front of the vehicle as shown below. Be sure vent remains properly aligned as you pull the tab. Apply firm pressure where the lining has been removed. Again, apply the pressure to the painted surface.  
**Caution: Use extreme care when pulling liner so as not to tear the liner. See Installation Tips.**

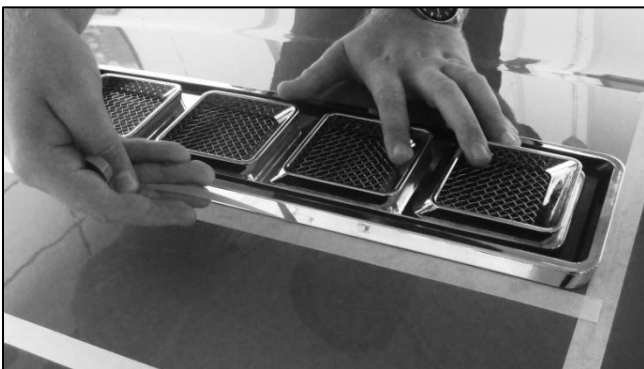


- 6.) Pull the outside tab toward the front of the vehicle as shown below. Apply firm pressure where the lining has been removed.

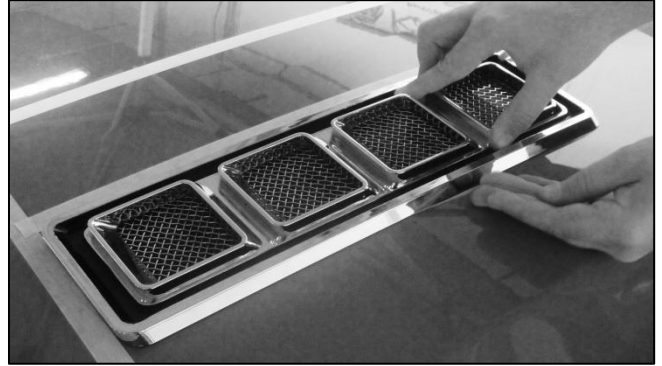

- 7.) Pull the front tab toward the opposite side of the vent as shown below. Apply firm pressure where the lining has been removed.



- 8.) Repeat steps 3-7 with the driver side of the vehicle. See picture below.

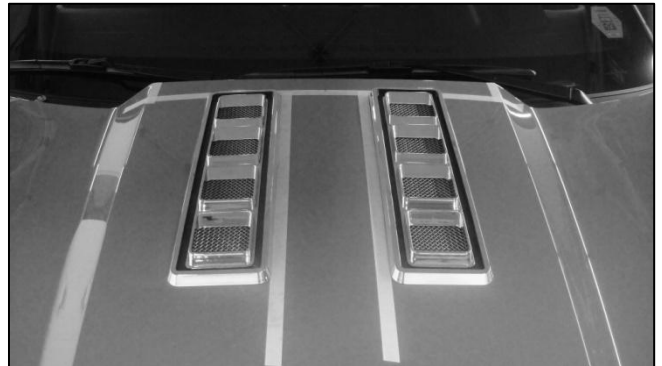

- 9.) Congratulations! You have installed the Camaro Hood Vents.



## Retro USA Inc. CA1QM Installation Instructions

### Read All Instructions Carefully Before Starting Installation!

#### Pre-Installation


- 1.) Inspect product for damages that might have been caused by shipping before installing on vehicle. Retro USA Inc. will not accept damaged returns that have been installed on the vehicle.
- 2.) Test fit all parts on the vehicle prior to installation.
- 3.) Do not remove any red tape linings before installation. These will be removed during the installation process.
- 4.) **Important:** Prepare vehicle for installation by cleaning all adhesion surfaces. Vehicle surface must be clean and dry for proper adhesion. Use isopropyl alcohol and a cloth to remove existing wax and dirt residue.

#### Installation Tip

- To make the red lining tabs easily accessible during installation, fold the tabs back 45° in the direction that they will be pulled. It may be necessary to slightly lift the part during installation so that the linings pull off easily and do not tear.
- Install products in a cool shaded area. Make sure that vehicle surface is cool and clean before installing any products.
- Tape can take up to 72 hrs to fully cure and attain 100% adhesion. For maximum adhesion to vehicle do not pressure wash around products, use excessive force on products, or expose products to extreme heat or cold for up to 72 hrs after installation.

#### Quarter Molding Installation


- 1.) Start with the passenger side of the vehicle
- 2.) Begin installation by pulling back the top tab slightly exposing about 1" of tape as shown below.

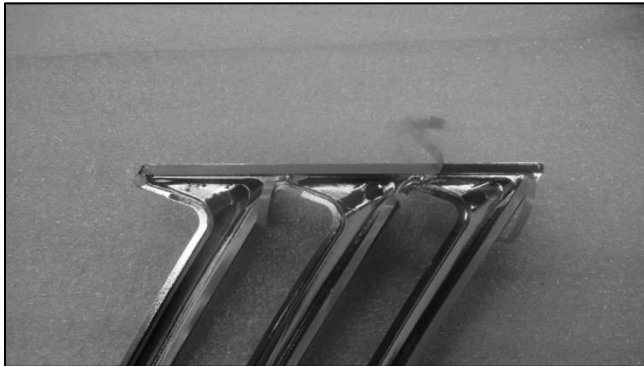


- 3.) Align quarter molding on the vehicle over the existing louvers impressions on the quarter panel as shown below. Quarter molding should be flush with vehicle quarter panel. Be sure all 5 tabs are exposed.




- 4.) Once quarter molding is properly aligned, press firmly on the quarter molding where the lining has been pulled back as shown below. This will hold the quarter molding in place while you pull the remaining tabs.

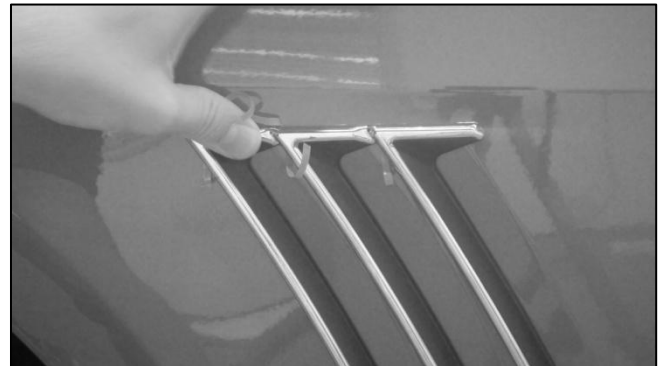


- 5.) Pull the entire top tab toward the front of the vehicle. Be sure that Quarter Molding remains properly aligned as you pull the tab. Apply firm pressure where lining has been removed. **Caution: Use extreme care when pulling liner so as not to tear the liner. See Installation Tips.**

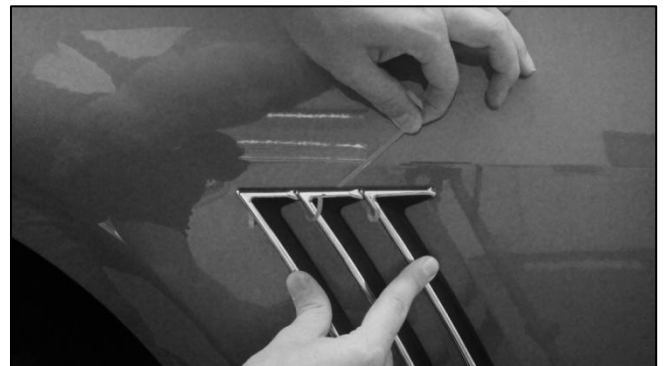

- 6.) Pull the three middle tabs toward the bottom of the vehicle starting with the rear most tab as shown below. Be sure quarter molding remains properly aligned when pulling tabs. Apply firm pressure where lining has been removed.

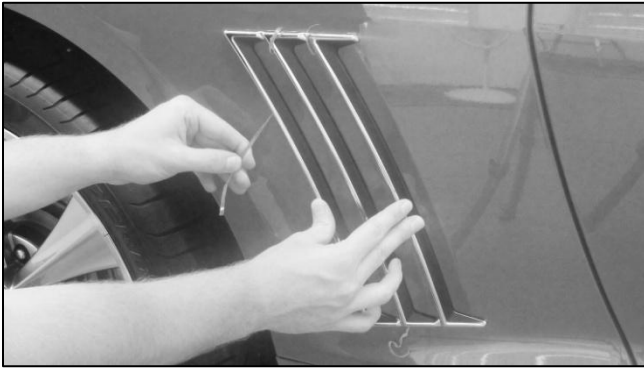

- 7.) Pull the bottom tab toward the front of the vehicle as shown below. Apply firm pressure where the lining has been removed.

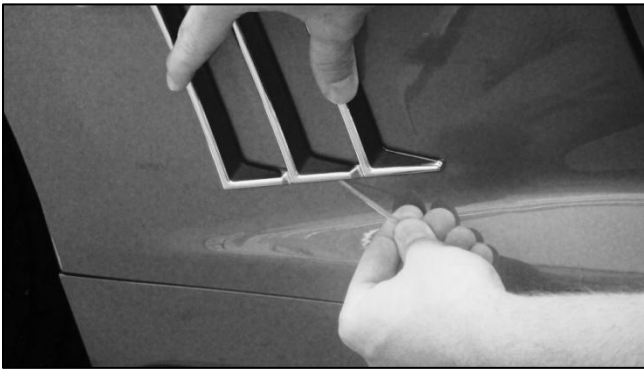

- 8.) Repeat steps 2-7 on the driver side of the vehicle.
- 9.) Congratulations! You have installed the Camaro Quarter Moldings.