



**INSTALLATION INSTRUCTIONS FOR 1995-1/2-2004
TOYOTA TACOMA 4 X 4 AND PRERUNNER, 2000-06 TUNDRA,
1996-2002 4RUNNER. DIFFERENTIAL DROP KIT
PART NUMBER RTDD1-KB**

(MANDATORY TO MINIMIZE OR AVOID CV BOOT WEAR)

1. Remove both skid plates under the front of the vehicle. Save the OEM bolts (total of nine (9) 12mm bolts).
2. Remove factory 19mm x 7" long bolts and nuts, supporting the front differential. (See Figure 1). Save the OEM washers for step 3.
3. Install Revtek spacers RTDDS-1 between the two front differential supports and front cross-member. Fasten to cross-member using new ½ x 8" long bolts and nuts (making sure to reuse the factory washers). (See Figure 2.)
4. Install the FRONT skid plate using three (3) OEM bolts on the front and two (2) new M8 x 35mm bolts in the rear. DO NOT TIGHTEN YET.
5. To install the REAR skid plate, elongate the rear mounting holes with a file for fitment. Once holes are elongated, mount rear skid plate with OEM 12mm bolts.
6. Torque all skid plate bolts to specs.

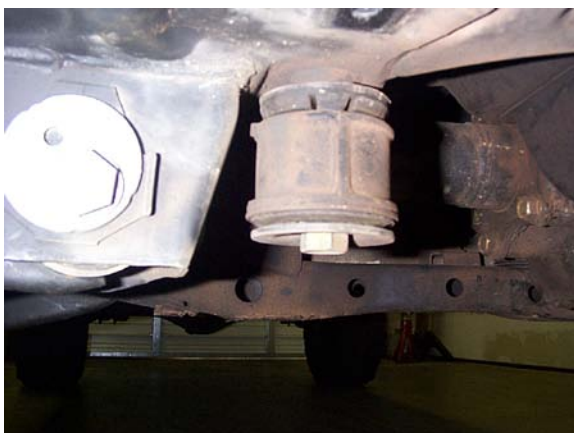


Figure 1



Figure 2