



**INSTALLATION INSTRUCTIONS FOR  
DODGE 2500/3500 SWAY BAR END LINK KIT  
PART NUMBER SBLO4DS**

Install the new Revtek U-brackets. The U-bracket attaches to the bottom of the sway bar on either end using the supplied 1/2 X 1 1/2 bolt up through the U-bracket and 1/2" (flange nut) on top of the sway bar end with the upper hole in the U-bracket closest to the outside of the vehicle. Do not tighten completely yet. See fig C.

Install the bushings and sleeves into the sway bar end links, us some lithium grease to ease installation and prevent squeaks. See fig D.

Attach the sway bar end links to the lower mount on the front of the axle with the supplied 1/2" X 3 bolts, washers and nyloc nuts. You will want the nuts to face the inside of the vehicle. Only snug at this point. See fig D.

Attach the upper end of the sway bar end link to the bottom of the U-bracket using the supplied 1/2 X 3 bolts, washers, and nyloc nuts. You will want the nut to face the outside of the vehicle here. Only snug at this time. See fig C.

Once you have all of the sway bar parts in place then you can tighten the nuts and bolts to 30 lb. ft of torque, all nuts and bolts use a 19mm wrench.



FIGURE C

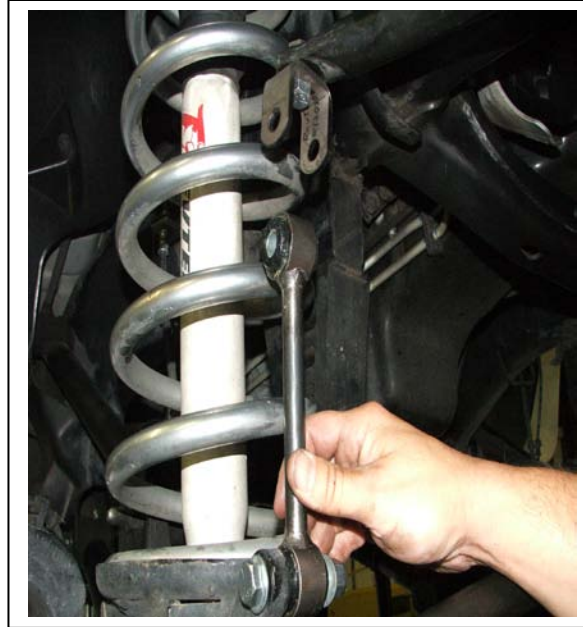


FIGURE D