





RHINO-RACK

43256 - Pioneer Corner Bracket


Warning:

- Use only non-stretch fastening ropes or straps.
Exercise care when transporting wind-resistant loads. Special consideration must be taken when cornering or braking.
- Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Do not "overload". A safety factor of 1.5 is required for off-road use.


Side Tab Kit required.

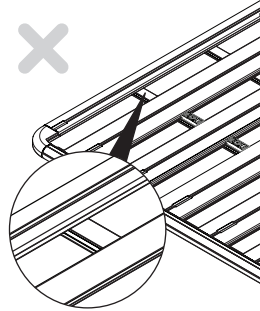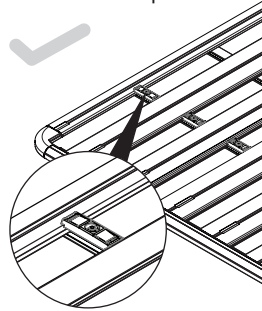


40kg Maximum





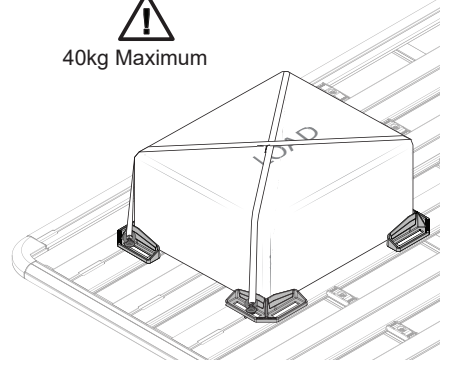


Item	43256	Qty	Part No.
1	Eye-nut	4	C079
2	M8 x 30mm x 2mm Washer	4	C949
3	Corner Bracket	4	CA1787
4	Corner Anchor	4	CA1788
5	M8 x 25mm Hex Bolt	4	B169
6	Instructions	1	R1845

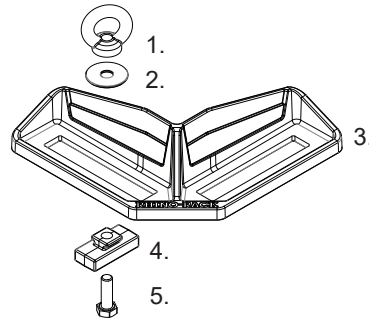

Instructions

- 1** - Measure the load
- Medir la carga

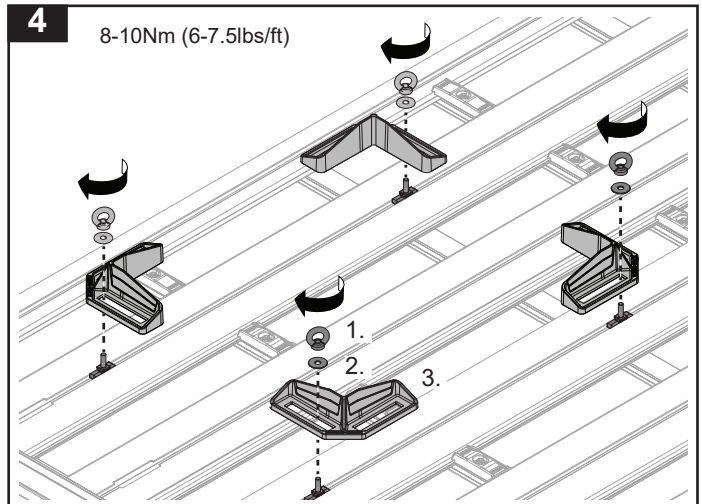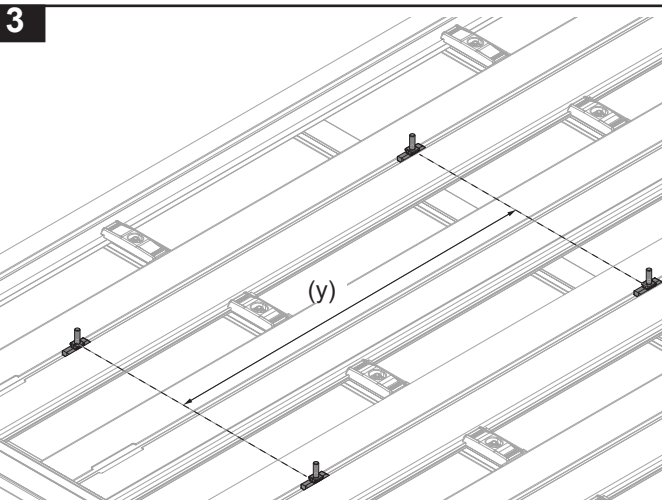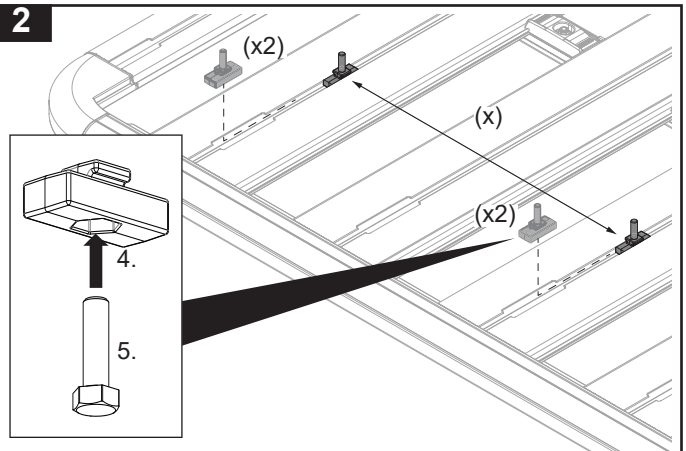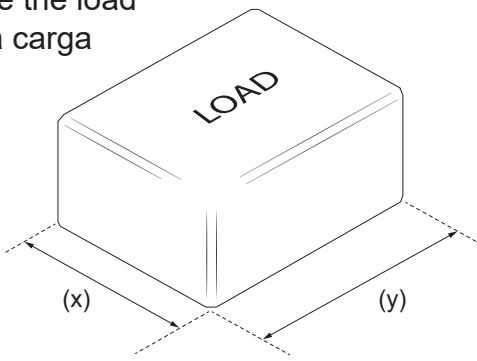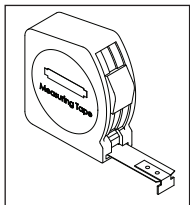

Fit Time: 10min
Issue No: 01
Issue Date: 12/03/2019

43256 - Pioneer Corner Bracket

5

