



RHINO-RACK

QMHD05

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Quick Mount Leg HD Bar Spacer	2	M709
3	M6x40 Socket HD Cap Screw	2	B047
4	Instructions	1	R569


*Note:

RLT600 Parts as separate.

Fix the Quick [Mount Spacer](#) to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:

5mm Allen Key

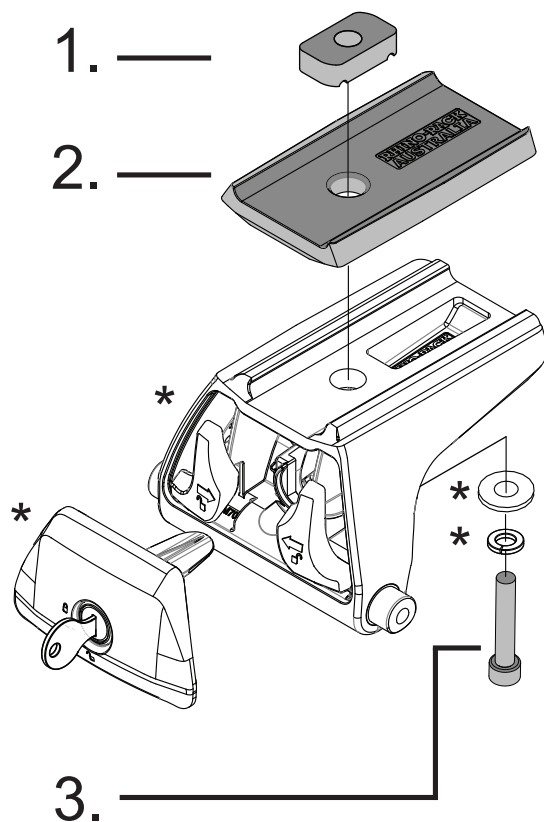

Note: Max Spacer height 30mm