




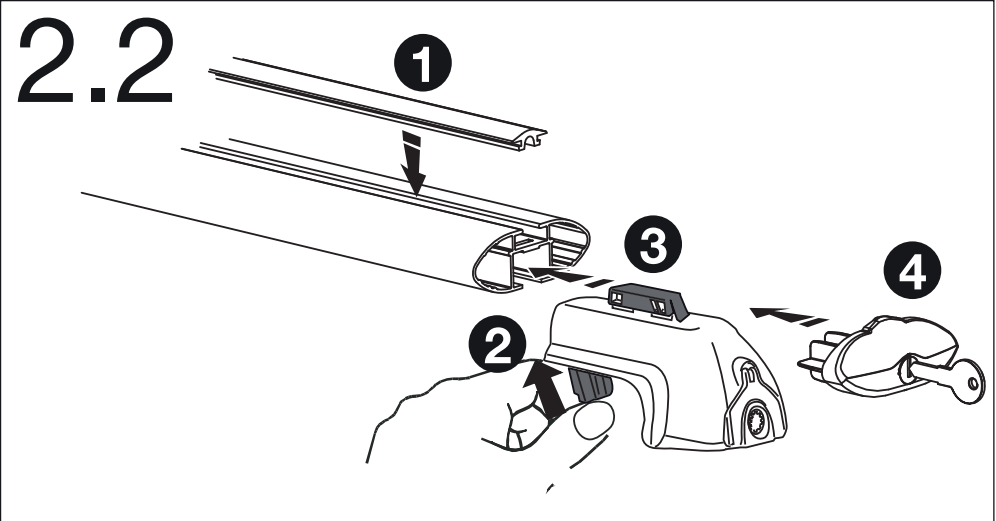


RHINO-RACK

- SX024 - BMW 3-series Touring 2010-2012
- SX036 - BMW 3-series Touring 2013-
- SX037 - BMW 5-series Touring 2010-
- SX033 - BMW X1 2009-
- SX026 - BMW X3 2011-
- SX024 - BMW X5 2007-
- SX038 - Mini Countryman 2010-
- SX025 - Volvo V60 2011-
- SX025 - Volvo XC60 2008-

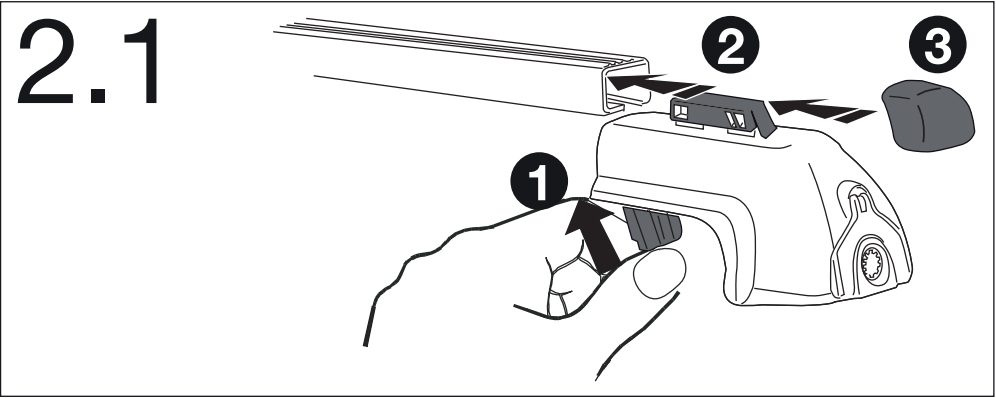

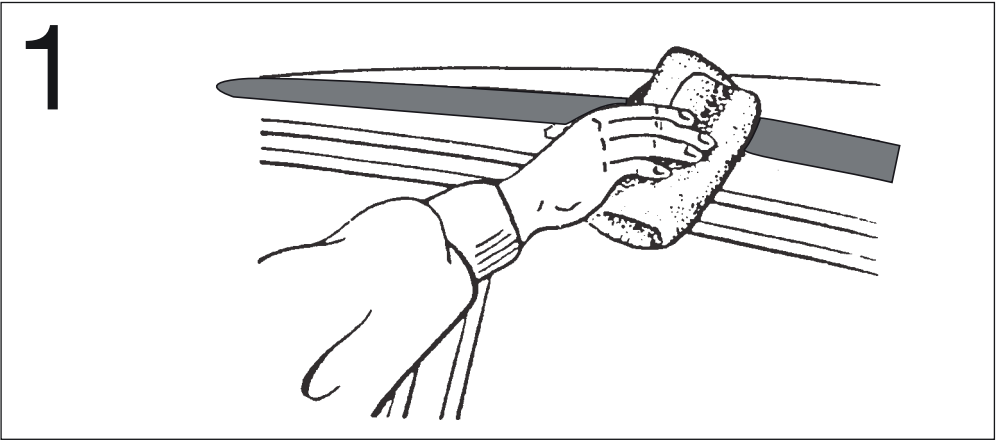


2.3

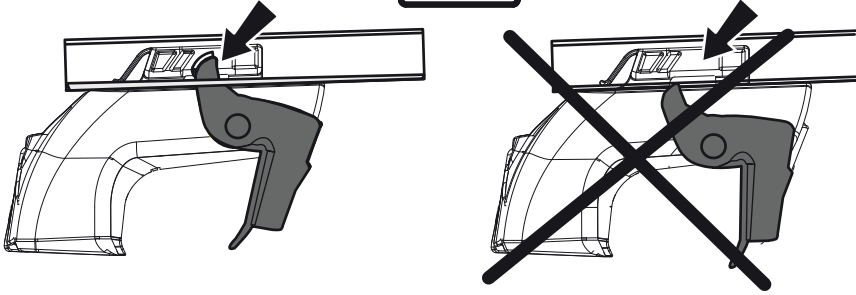


3.1

1

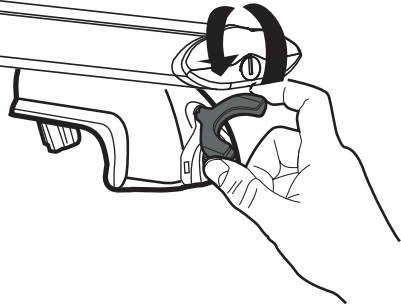


2

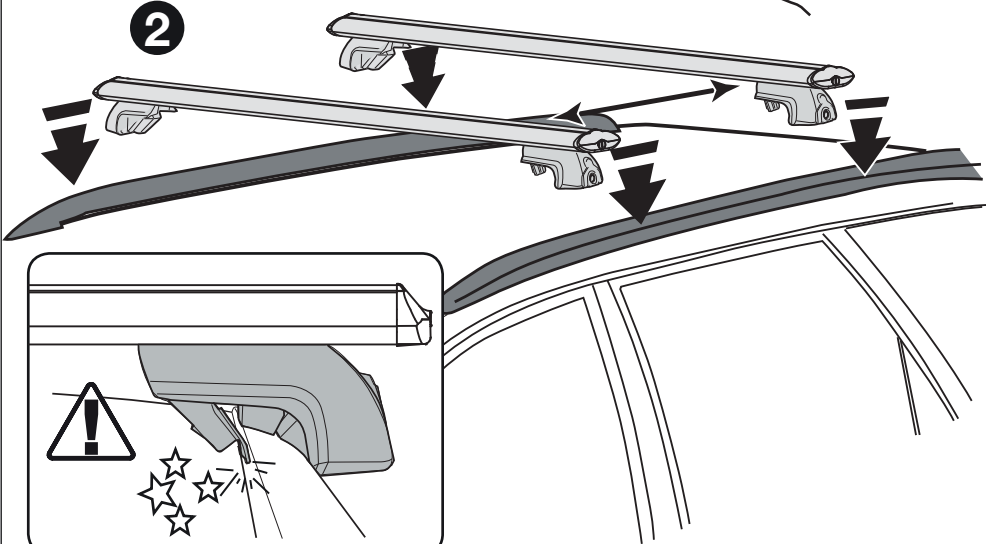






3.2






BMW 3 series, 5 series, X3, X5









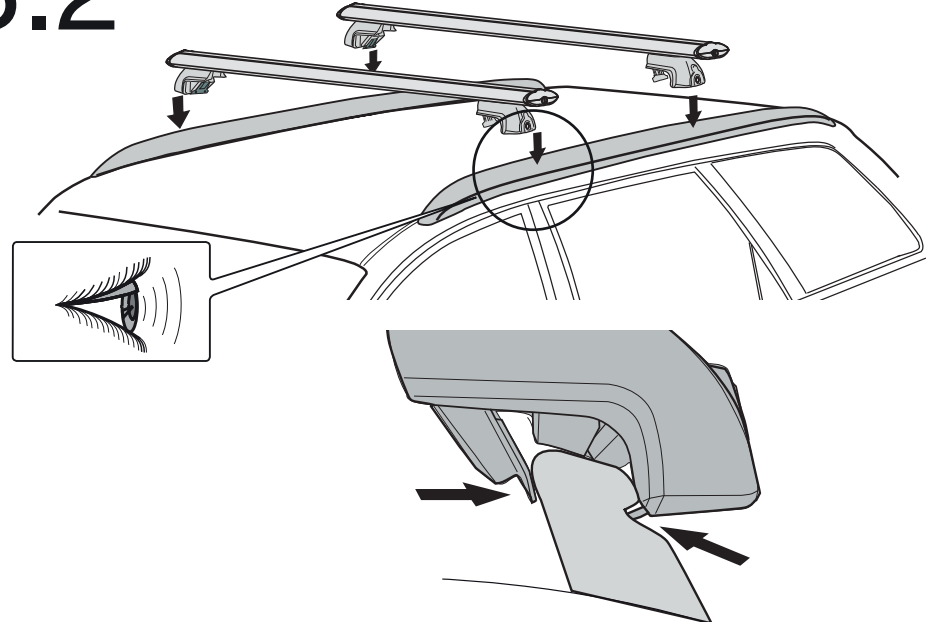


VOLVO XC60 & V60

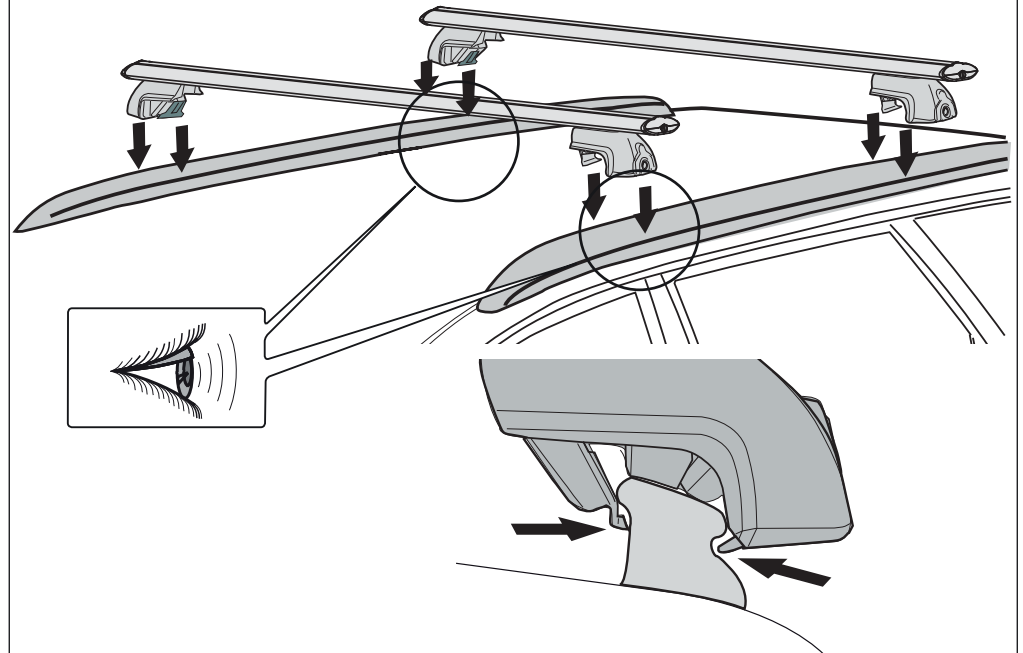


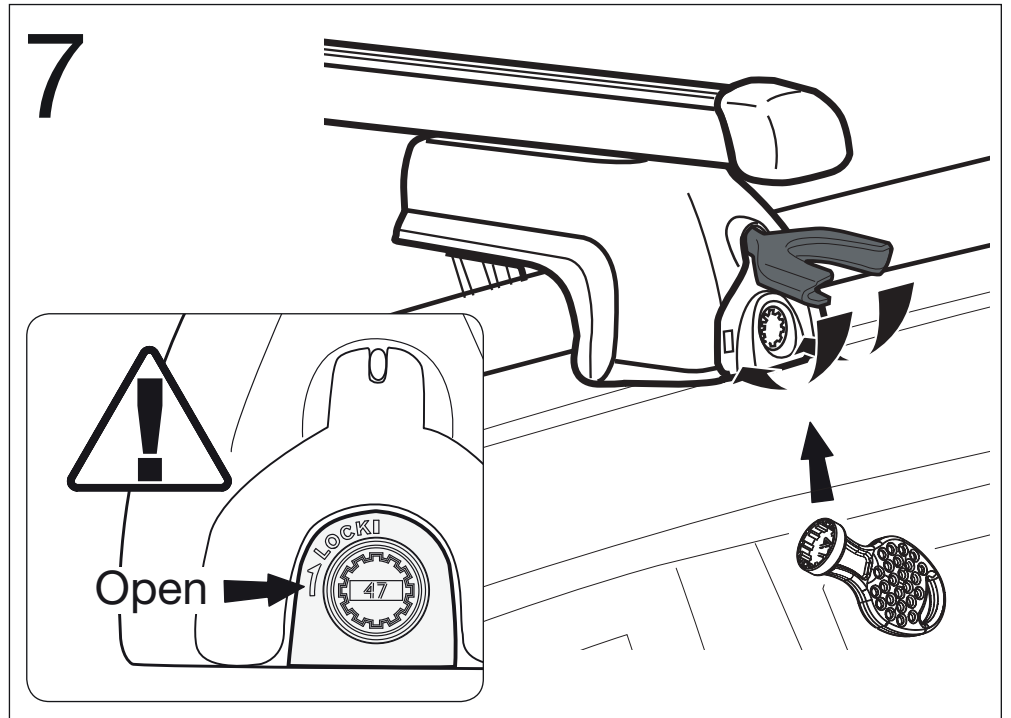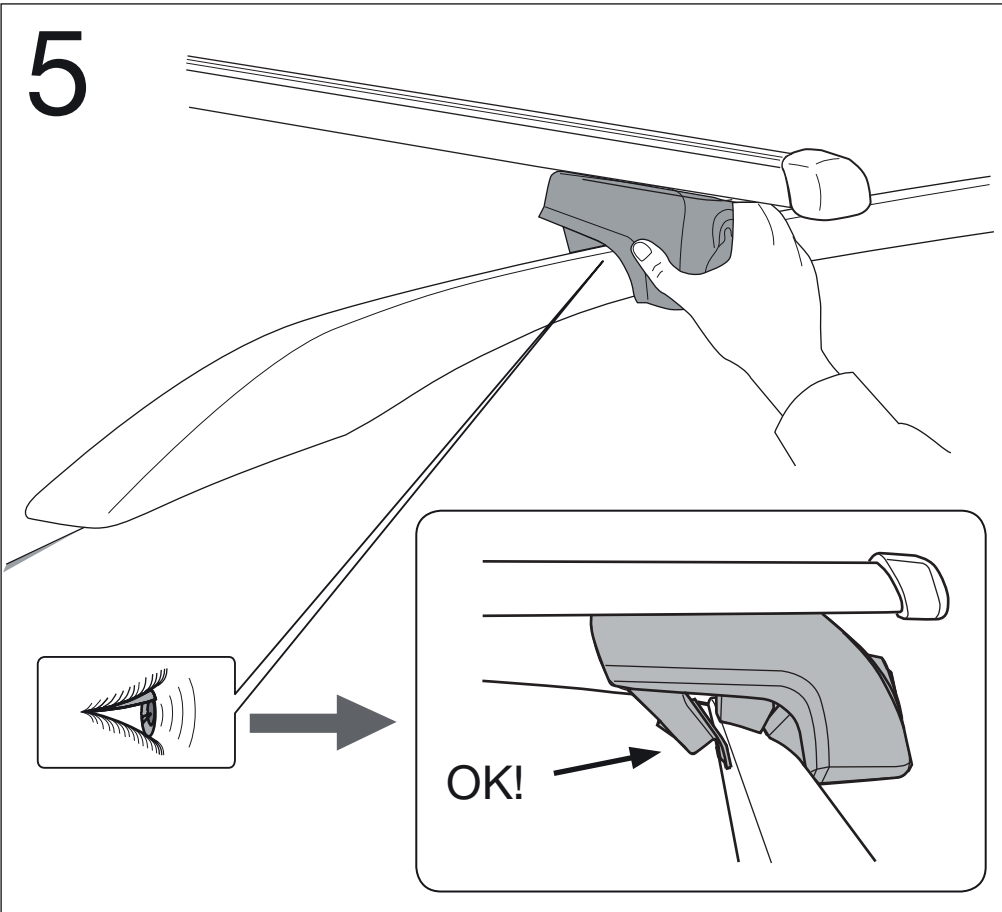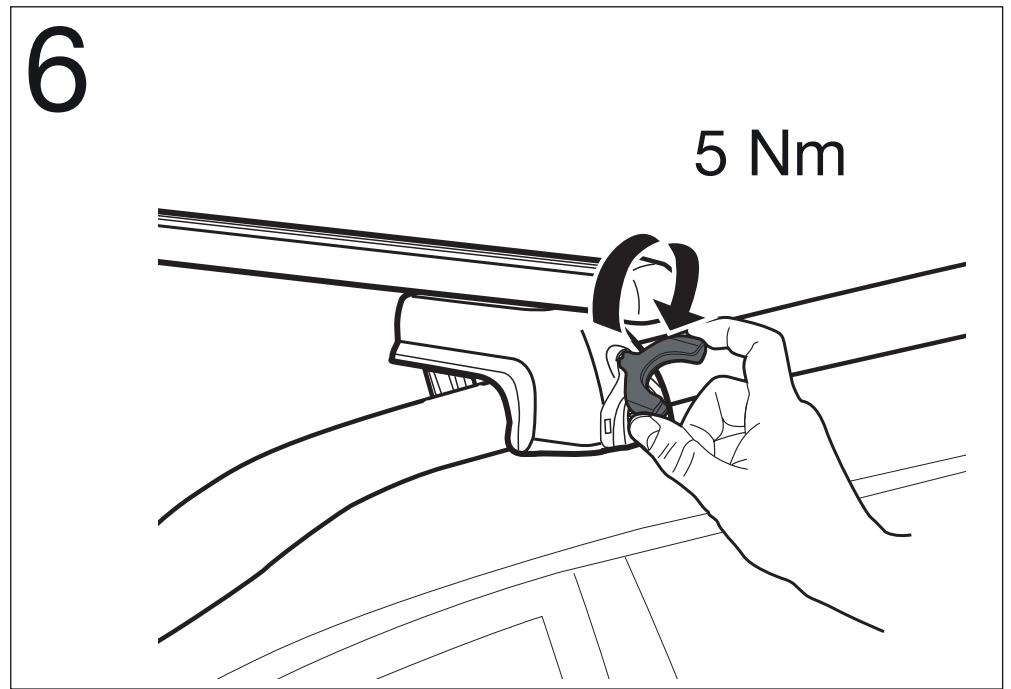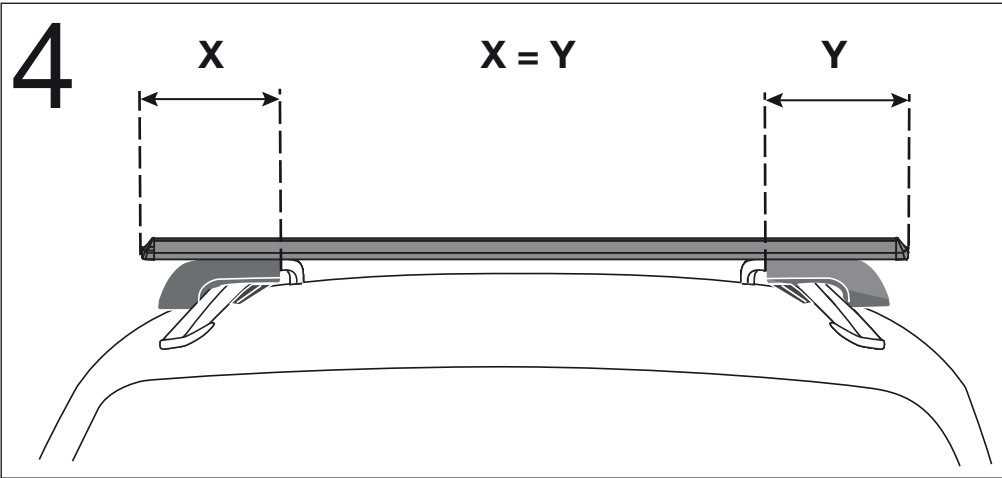

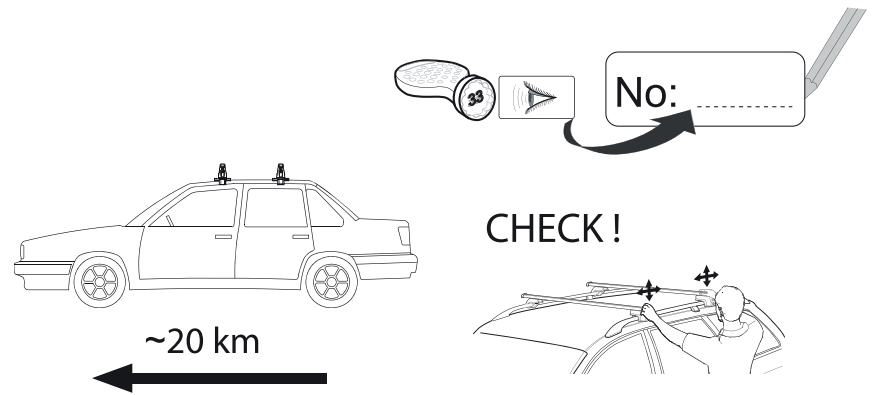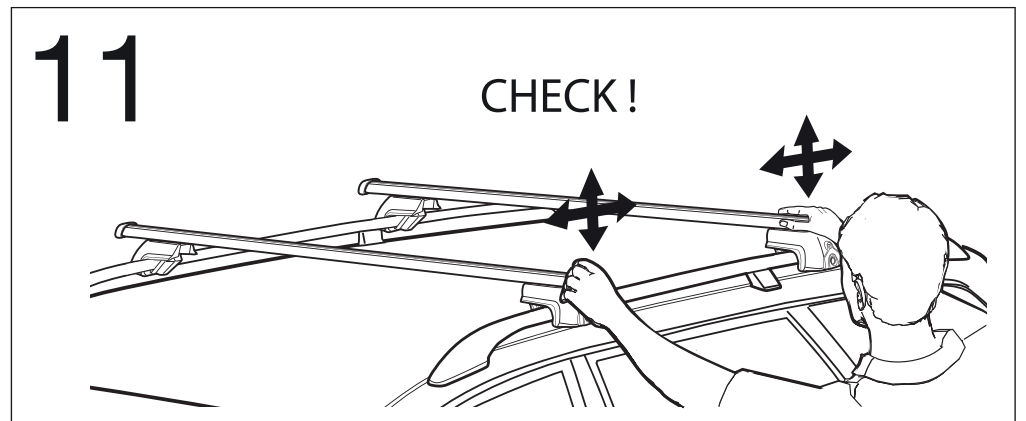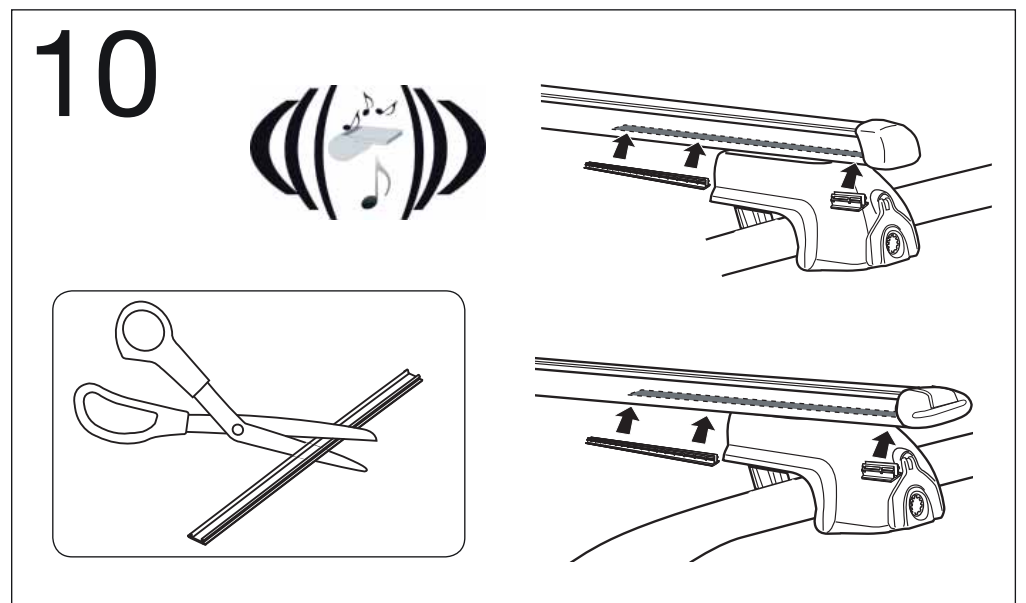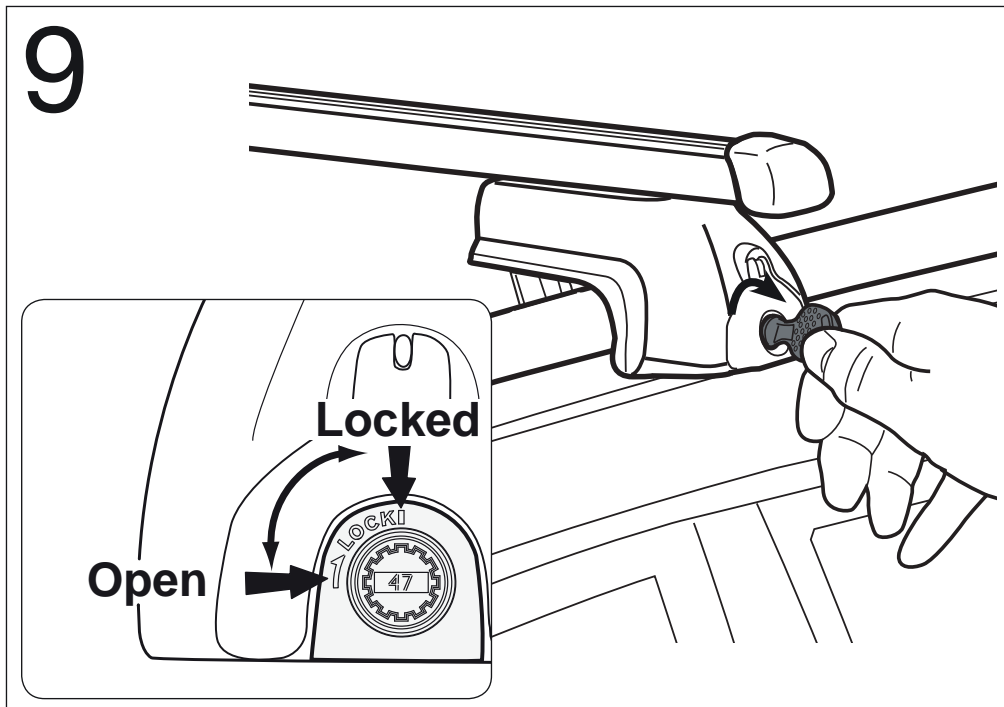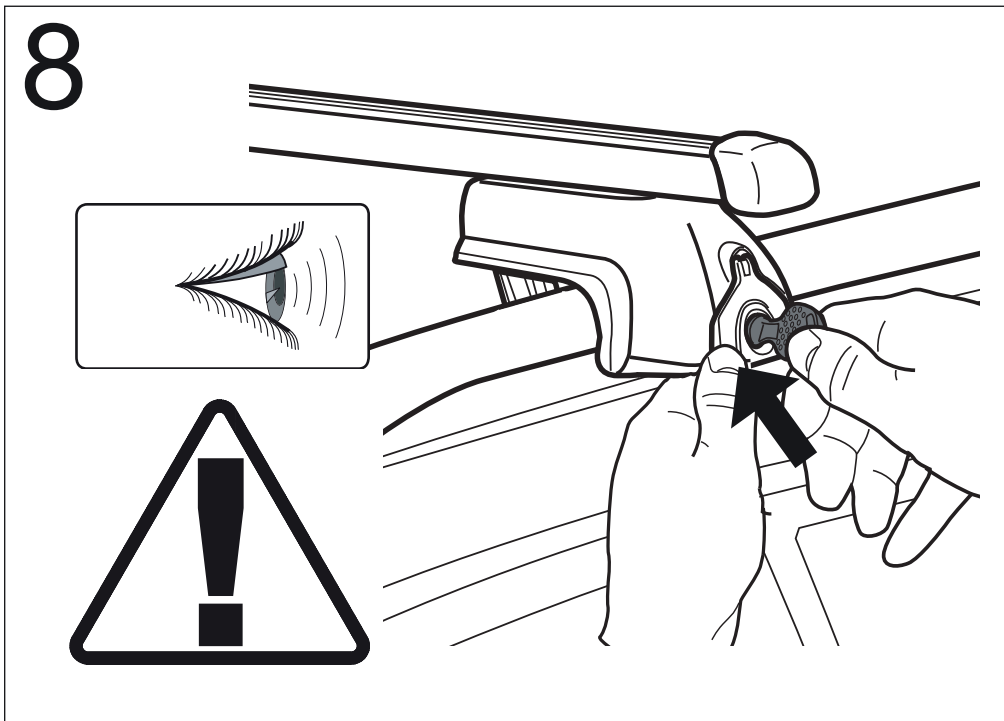

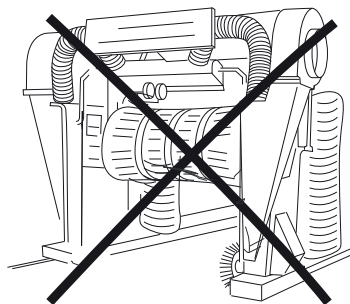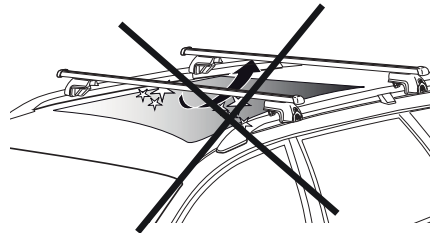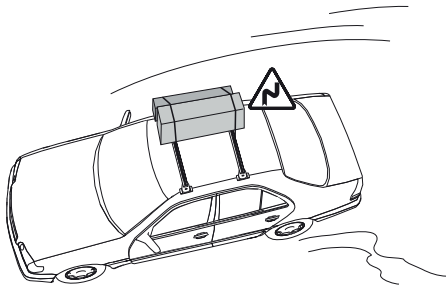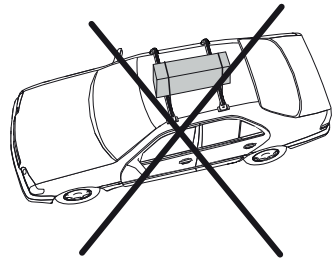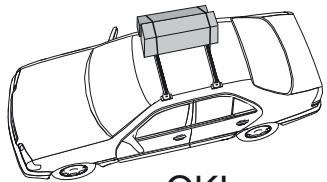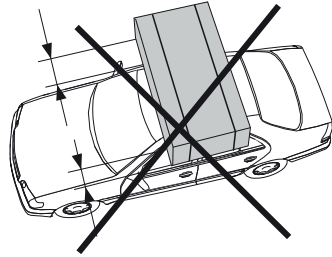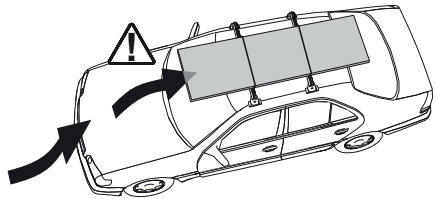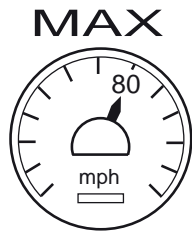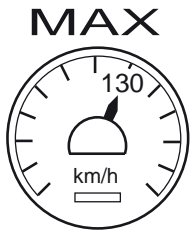


SPARE PARTS LIST

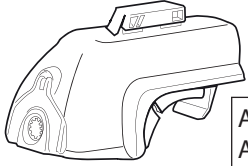


x 1

Art. 302458 (SX024)
Art. 302459 (SX037)
Art. 302460 (SX025)
Art. 302461 (SX026)

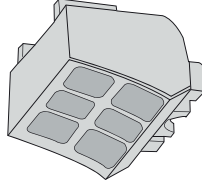


x 1

Art. 121661 (SX024)
Art. 121662 (SX037)
Art. 121663 (SX025)
Art. 121662 (SX026)

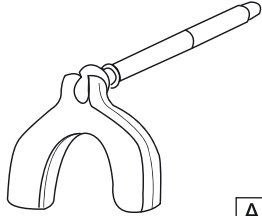


x 1

Art. 302560

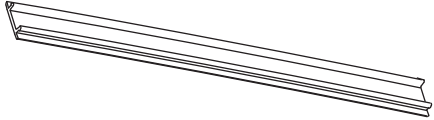


x1

Art. M641




x1

Art. 121091 +XX

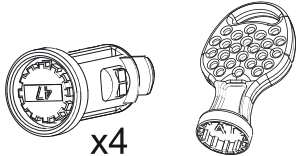


x4 x2

Art. 594907




x1

Art. M626

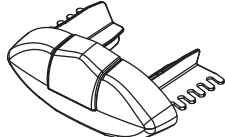


x1

Art. M645



x1



x1

Art. RRC141

Please Note: Rhino-Rack is using the MONT BLANC Foot Pack on Rhino [crossbars](#).