European Bar Fit Kit (32102)

Place these instructions in the vehicle's glove box after installation is complete.


Important: Please read these instructions carefully prior to installation.


Check the contents of kit before commencing fitment and report any discrepancies

Parts List

Item	Component Name	Qty	Part No.
1	M6 U-bolt	2	C064
2	European Adapter Block	2	M083
3	M6 x 16mm Flat S/S Washer	4	W031
4	M6 Spring S/S Washer	4	W004
5	M6 Stainless Steel Nut	4	N056
6	Fitting Instructions	1	RR216

This kit is to be used in conjunction with the fitting kit supplied with your Rhino-Rack Sunseeker Awning

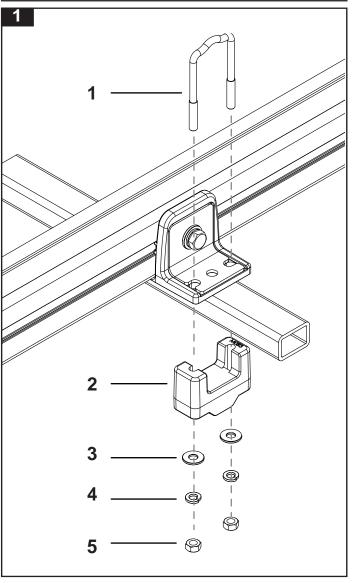

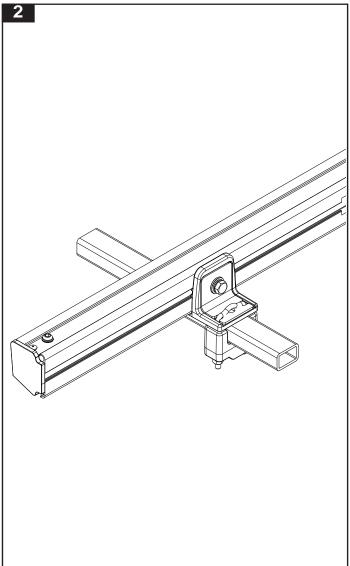

Learn more about roof racks and cargo carriers we have.