




# RHINO-RACK

## Recovery Track Front/Side 75° degree Bracket (43159)

Requires a Maxtrax Mounting Pin Set MTXMPS


**Important:** Please read these instructions carefully prior to installation.  
Please refer to your fitting instruction to ensure that the bracket is installed in the correct locations.  
Check the contents of kit before commencing fitment and report any discrepancies.  
Place these instructions in the vehicle's glove box after installation is complete.

### Layout

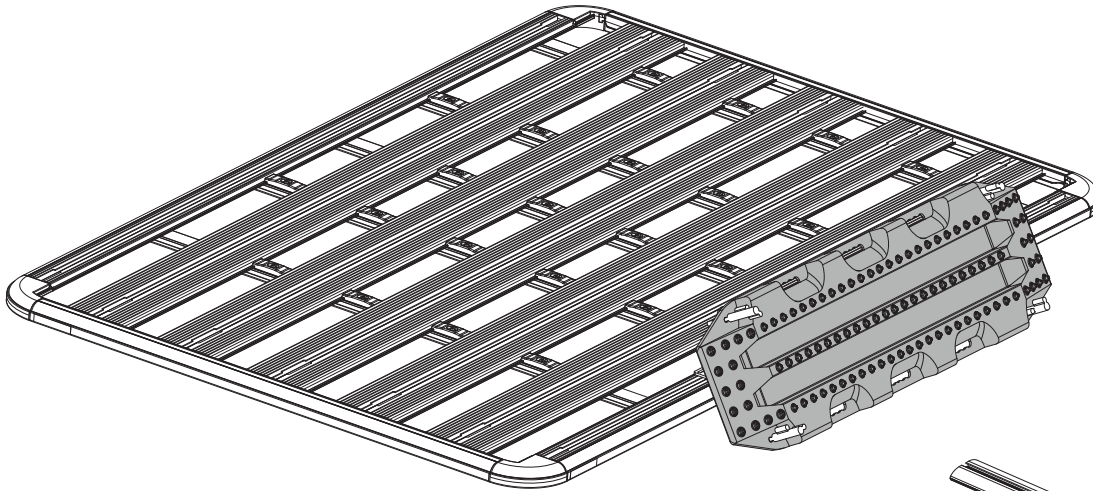

Can be used in conjunction with a  
Rhino-Rack Shovel Holder bracket.  
RSHB & RSHB-L

Distance between bars must be between  
795mm to 980mm for use with MaxTrax.

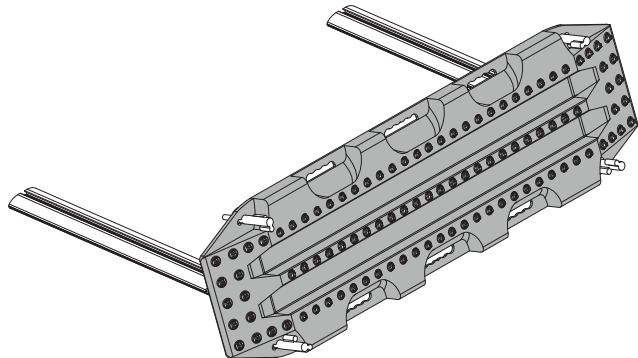

### Important Information

#### Recommendations:

The recommended maximum number of Maxtrax fitted on a set of bracket is 2. If fitting 3 or 4, a 43197 must be used to support the side rail.

Compatible with all Rhino-Rack Trays

Rhino-rack bars must be within 795 to 980mm distance apart.

#### Note for Dealers and Fitters:

It is your responsibility to ensure instructions are given to the end user or client.



## Recovery Track Front /Side 75°degree Bracket (43159)



Item	Component Name	Qty.	Part No.
1	Maxtrax Side/Front Bracket	2	CA1425
2	M6 x 20 Hex Bolt	6	B082
3	M6 Spring Washer	6	W004
4	M6 Flat Washer	6	W031
5	M6 Nut Plate	2	CA1426
6*	Mounting Pins	4	-
7*	M10 Flat Washer	4	-
8*	M10 Nyloc Nut	4	-
9	Fitting instruction	1	R668

Parts List
*Sold Separately



Mounting Pin Set
(not included)
Parts Required
Maxtrax Spanner Mounting Pin Set

**1** Assemble the bracket as in layout A, B or C with any of the available options as shown. Do the same for the other bracket and adjust so that they are 890mm apart. Finger tighten at this stage.


Bracket Head Layout options:

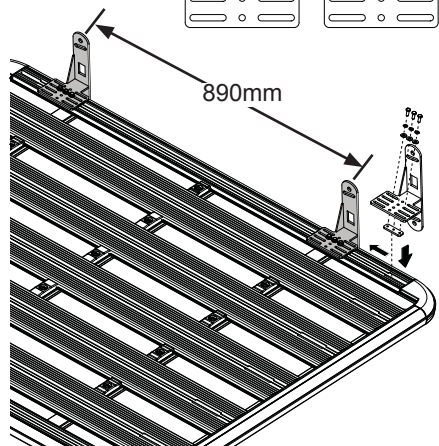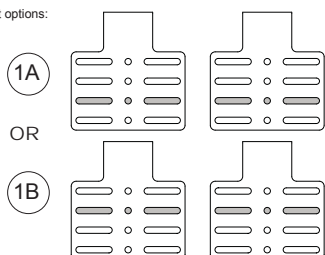


Hardware:  
6 x Bolt  
2 x Nut

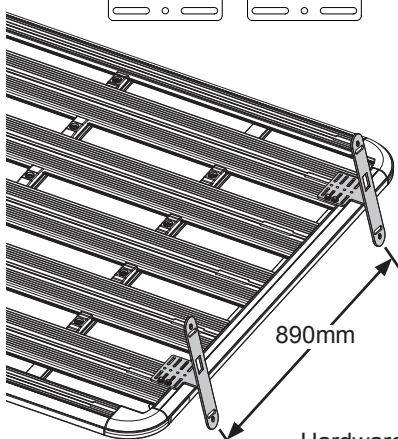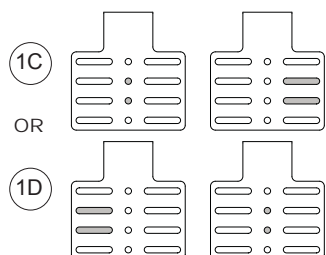

Hardware:  
4 x Bolt  
2 x Nut

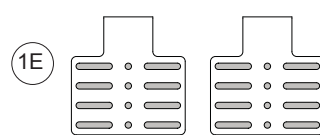

Layout is dependant on the distance between the bars.  
Min Distance: 795mm  
Max Distance: 980mm

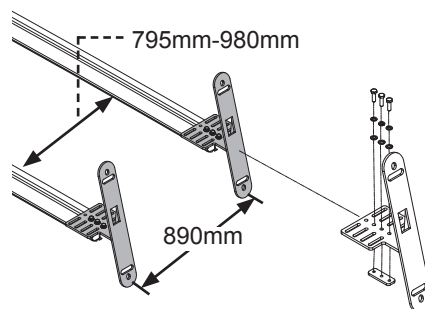


Hardware:  
6 x Bolt  
2 x Nut




If extra clearance is needed from the bracket, then utilise the outermost slots as shown:



**2** Assemble the mounting pins onto the brackets. Make sure that the pins are unlocked and facing outwards. Finger Tighten.

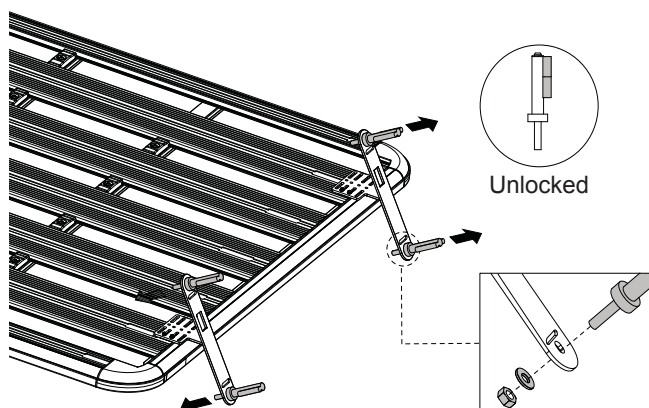

**3** Place the Maxtrax through the mounting pins, onto the brackets. Make some adjustments if required. Tighten the nuts and lock the mounting pins.

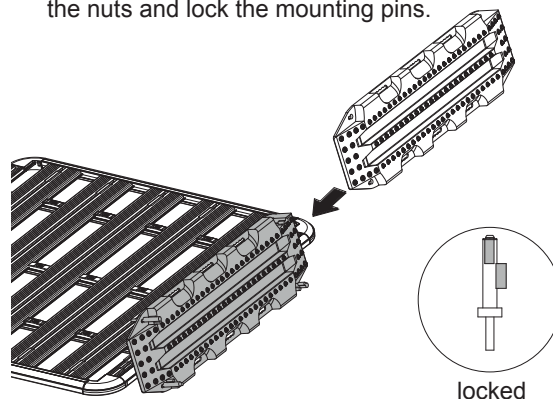




## Recovery Track Front/Side 75°degree Bracket (43159)


### Mounting 3 or 4 Recovery Tracks

Note: If mounting a quantity of 3 or 4 Recovery Tracks on a Pioneer platform or Pioneer Tradie, support bracket 43197 is required to support the side rail.

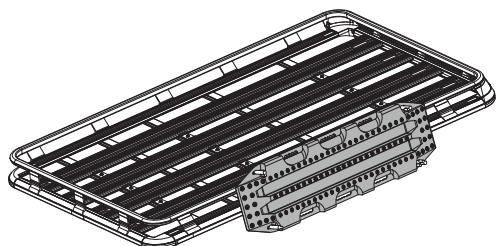


Pioneer Tray with welded sides does not require support bracket.


Note: When fitting to 45100B or 41100B/41101B you will be required to use the 43199 Strap Kit, MTXMPS cannot be used,

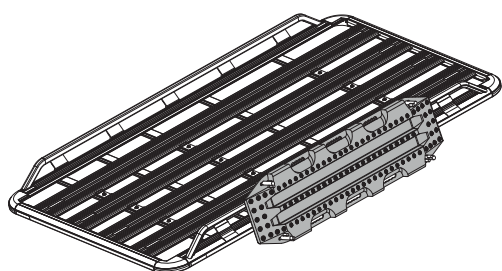


Pioneer Tradie

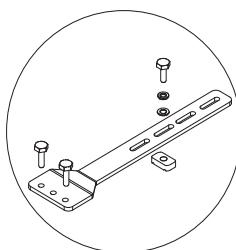


43197

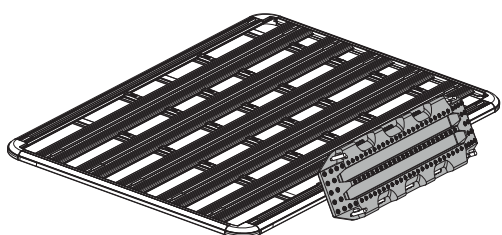

Pioneer Platform Tray



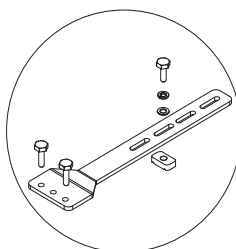


43197

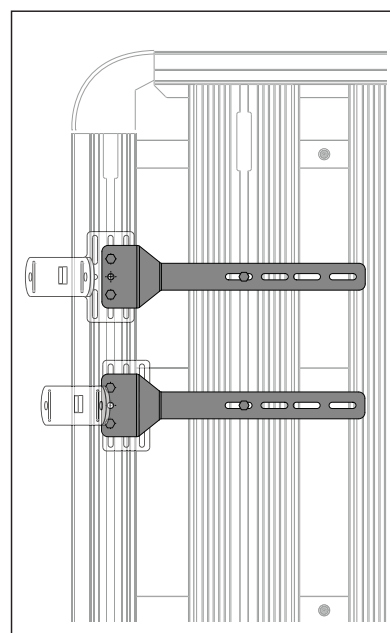

### Rhino-Rack Shovel Holder - RSHB (sold separately)

Assemble and tighten the bracket after step 1 or 2 as shown. Ensure that the nut is positioned horizontally as shown in the rear view.

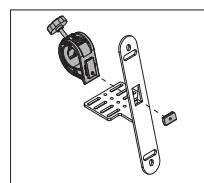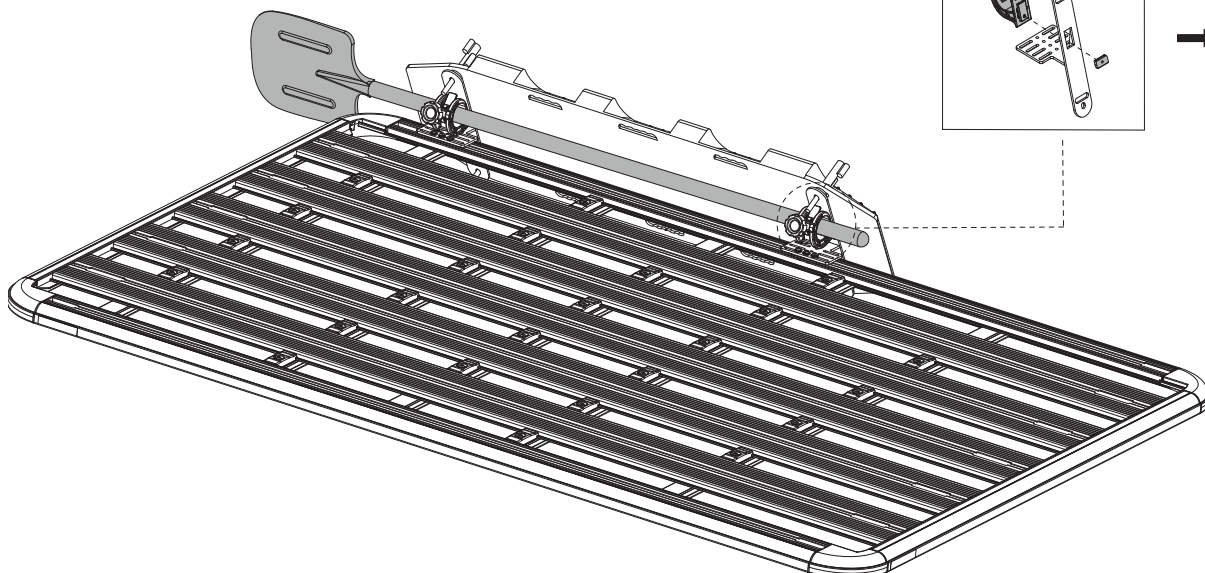

Rear View