



**Part # 11289000**  
**65-70 Impala Panhard Bar Kit**

**Components:**

1	90000998	Panhard bar – TW 33.875" (C-C 35.75")
1	90001942	Rubber bushing – Pressed into panhard bar
1	90001946	Kevlar lined Heim end - .75" thread x .75" I.D.
1	99752004	3/4"-16 SAE jam nut
2	90000724	Aluminum T-bushing
1	90000461	Panhard bar axle stud


**Hardware:**

1	99622006	5/8" SAE Nylok jam nut	Panhard bar stud
1	99561003	9/16" x 3" SAE Gr. 8 bolt	Panhard bar to frame
2	99562001	9/16" SAE Nylok jam nut	Panhard bar
1	99563001	9/16" USS flat washer	Panhard bar stud
1	99603003	5/8" USS flat washer	Panhard bar stud

# **STRONG**ARMS™

by Air Ride Technologies

## Installation Instructions

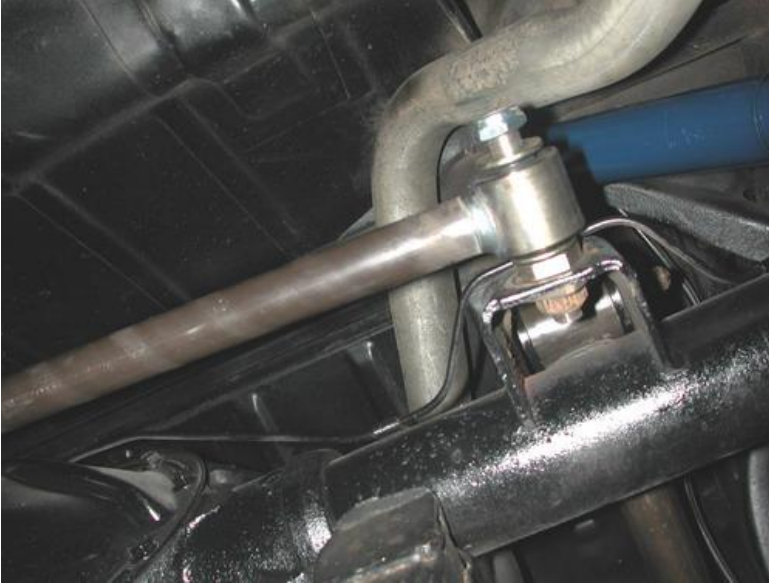

1. Replace the factory panhard bar with the new one using the new stud and hardware supplied. The rubber rod end will be attached to the axle.



2. The Heim end will attach to the frame using the 9/16" x 3" bolt and Nylok nut. Two aluminum T-bushings need to be installed on each side of the Heim end.

3. The panhard bar should be approximately 35 3/4" center eye to center eye, but may need adjusted to center the axle. This should be checked at ride height.