



**Anti-Theft Trailer Ball / & Lock**      100T10, 100T12  
**Fits: 1 7/8" - 2" Couplers**

The correct attachment of this product is critical and beyond the control of Rightline Gear. The safe use and long life of this product depends entirely on your good judgment and following these directions.


---

**Using The Coupler Ball**

---

Without Included Coupler Lock (100T10)

1-With the included ziptie, attach the Trailer Coupler Ball to the trailer chain (Fig 1).

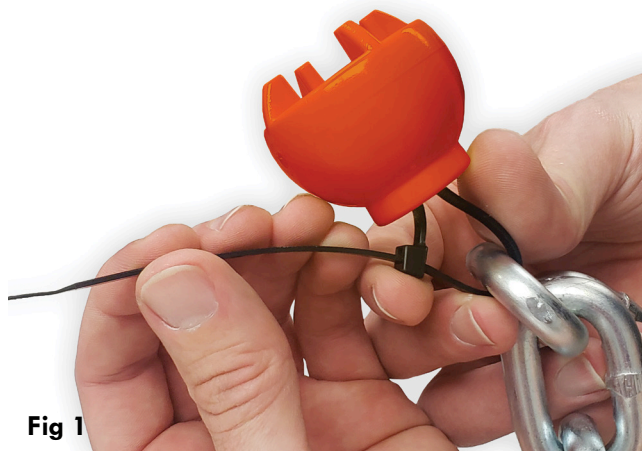

**Fig 1**

2-Lift the coupler latch and place the Trailer Ball inside the coupler (Fig 2).



**Fig 2**

3-Close the coupler latch and secure with lock (sold separately).

With Included Coupler Lock (100T12)

1-Follow Steps 1-2 from the previous section.

2-Open the Coupler Lock by turning the key counter-clockwise (Fig 3).



**Fig 3**

3-Close the coupler latch and run the Coupler Lock through it (Fig 4).



**Fig 4**

4-Close the coupler lock by turning the key clockwise. (Fig 5).



**Fig 5**

Discover other trailer hitches and towing on our website.