


The correct attachment of this product is critical and beyond the control of Rightline Gear. The safe use and long life of this product depends entirely on your good judgment and following these directions.


### Attach In A Truck Bed

1-Load your gear at the front near the cab or at the rear near the tailgate.

2-Move the ratchet handle to the unlocked position (Fig 1).

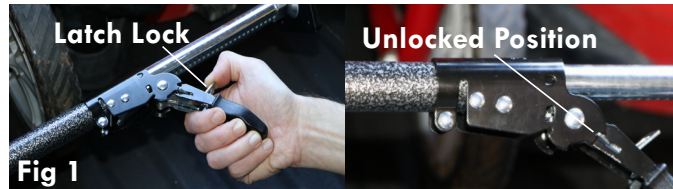

3-Pull the inner silver bar to extend the Cargo Bar to the approximate width of the truck bed (Fig 2).

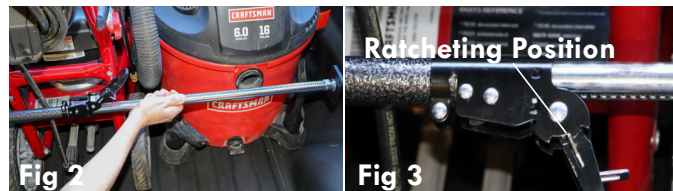

4-Move the ratchet handle to the ratcheting position. (Fig 3).

5-Move the handle back and forth until the Cargo Bar tightens slightly against the walls of the truck bed. Ensure your gear will not slide underneath or fall over the top of the Cargo Bar (Fig 4).


**NOTE: MAKE SURE THE CARGO BAR WILL SECURELY MOUNT TO THE TRUCK BED (THE CARGO BAR MAY NOT WORK WITH SOME DROP-IN BED LINERS).**



6-Rotate the rubber pads (Fig 5), if necessary, and move the handle back and forth until the Cargo Bar tightens snugly against the walls of the truck bed.

**CAUTION: DO NOT APPLY EXCESSIVE FORCE TO YOUR TRUCK BED OR DROP-IN BED LINER.**

7-Move the ratchet handle to the locked position (Fig 6).

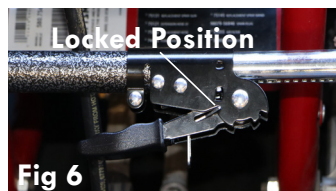

8-To release the Cargo Bar, move the ratchet handle to the unlocked position (Fig 7) and push the silver inner bar into the outer bar.



### Attach In A SUV

1-Inspect your SUV's cargo area and identify mounting points for the Cargo Bar.

**WARNING: DO NOT USE SUV WINDOWS AS MOUNTING POINTS FOR THE CARGO BAR. SOME PLASTIC TRIM PIECES MAY NOT BE STRONG ENOUGH TO SUPPORT THE CARGO BAR.**

2-Load your gear against the rear seats in the cargo area of the SUV.

3-Move the ratchet handle to the unlocked position (Fig 8).




4-Pull the silver inner bar to extend the Cargo Bar to the approximate width of the SUV cargo area (Fig 9).

5-Move the ratchet handle to the ratcheting position (Fig 10).



6-Move the handle back and forth until the Cargo Bar tightens slightly against the walls of the SUV cargo area (Fig 11). Ensure your gear will not slide underneath or fall over the top of the Cargo Bar.

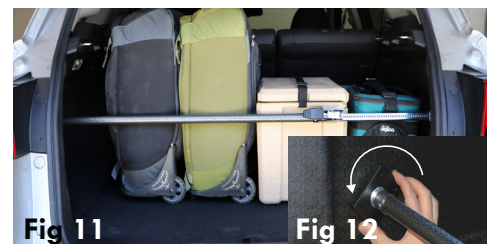

7-Rotate the rubber pads (Fig 12), if necessary, and move the handle back and forth until the Cargo Bar tightens snugly against the walls of the SUV cargo area.

**CAUTION: DO NOT APPLY EXCESSIVE FORCE TO YOUR SUV'S CARGO AREA.**

8-Move the ratchet handle to the locked position (Fig 13).

9-To release the Cargo Bar, move the ratchet handle to the unlocked position (Fig 14) and push the silver inner bar into the outer bar.

