



SUV Tailgating Canopy

110930

The correct attachment of this product is critical and beyond the control of Rightline Gear. The safe use and long life of this product depends entirely on your good judgment and following these directions.


Set Up The Steel Poles

1-Fill the first sand bag to approximately 5" from the top with sand (Fig 1).



2-Secure the bag's hook-&-loop closures.

3-Locate the side of a steel pole segment that has a hole at the same height as the sand bag (Fig 2).

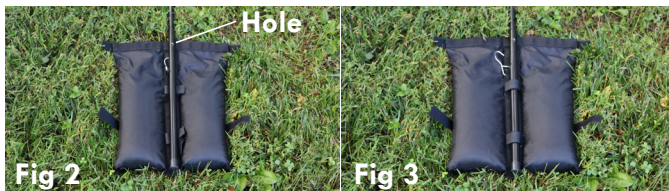

4-Connect the sand bag's center hook-&-loop closures around the pole segment (Fig 3).

5-Connect the sand bag's metal hook to the hole in the pole segment and stand the sand bag and pole segment upright (Fig 4).



6-Roll the top of the sand bag down (2) times and connect the top and bottom hook-&-loop closures around the pole segment (Fig 5, Fig 6, and Fig 7).



7-Connect the remaining segments of the steel pole. Repeat for the second steel pole and sand bag (Fig 8).



NOTE: WHEN POSITIONING THE STEEL POLES AND SAND BAGS, PICK UP THE POLES AND SAND BAGS TOGETHER. DO NOT TRY TO PICK UP ONLY THE STEEL POLES OR ONLY THE SAND BAGS AS DAMAGE MAY OCCUR.

Set Up The Canopy

1-Clean the vehicle's hatch of all dirt and debris and open it.

2-Lay the canopy over a flat area, logo side facing downwards.

3-Thread the grey pole (short pole) through the grey pole sleeve (Fig 9) and insert its end into the grey pole pocket (Fig 10).



4-Thread the (2) orange poles (long poles) through the orange pole sleeves (Fig 9) and insert their ends into the orange pole pockets near the canopy's hatch flap (Fig 11).

5-Place the opposite end of the grey pole into the other grey pole pocket.

6-Place the opposite ends of the orange poles into the other orange pole pockets (Fig 12).

7-Flip the canopy over and place its hatch flap over the vehicle's open hatch (Fig 13).



8-Thread the lengthwise straps through the gap between the vehicle's rear hatch door and roof. Connect their quick release buckles (Fig 14).



9-Position the canopy's widthwise strap slightly beyond the edge of your vehicle's rear hatch door, and tighten the lengthwise straps to secure (Fig 15).




10-Thread the widthwise strap under the lengthwise straps, connect the quick release buckle, and tighten the strap (Fig 16).

11-Place the steel poles and sand bags just in front of the canopy's orange triangle corners (Fig 17).



12-Lift the canopy and place the end of the steel poles into the grey steel pole pockets (Fig 18).

13-Connect the hook-&-loop closures around the steel poles and connect the metal hooks into the holes in the poles (Fig 19).

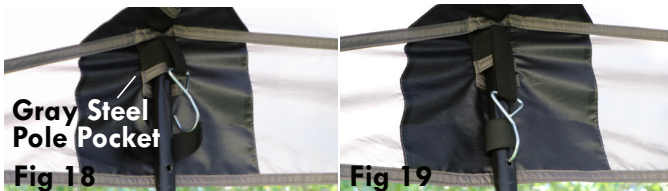

14-Adjust the poles so they are standing straight up and tie off the strap's loose ends (Fig 20).



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY FABRIC

This canopy is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source. The following precautions should be taken when using:

- Do not use candles, matches or open flames of any kind in or near the canopy.
- Do not cook directly underneath the canopy.
- Build campfires downwind and several meters away from the canopy and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
- Exercise extreme caution when using fuel-powered lanterns or heaters underneath the canopy and use battery-operated lanterns whenever possible.
- Do not refuel lamps, heaters or stoves underneath the canopy.
- Extinguish or turn off all lanterns before going to sleep.
- Do not smoke underneath the canopy.
- Do not store flammable liquids underneath the canopy.

- This canopy meets the flammability requirements of CPAI-84. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- In order to prolong its useful life, clean and dry the canopy before storing.
- Clean the canopy by hand using warm water and mild soap if necessary.
- Do not drive while the canopy is set up in the back of the SUV.